



Senstar Symphony
8
User Guide



Contents

- Introduction..... 6
 - Network configuration..... 6
 - Getting started..... 7
- Senstar Symphony Server..... 9
 - Log in to the Senstar Symphony Server..... 9
 - Senstar Symphony Server services..... 9
 - Check CPU usage..... 11
 - Manage services..... 11
 - Devices..... 12
 - Cameras..... 12
 - Browsers..... 21
 - Templates..... 21
 - Hardware..... 23
 - Integrations..... 24
 - Access control devices..... 31
 - Device tree..... 32
 - Carousels..... 33
 - Security..... 34
 - Users..... 34
 - Groups..... 37
 - Security profiles..... 38
 - Logins..... 50
 - Active Directory integration..... 51
 - Security authentication..... 53
 - Watermarking..... 54
 - Rules..... 54
 - Create a rule..... 55
 - Edit a rule..... 55
 - Delete a rule..... 55
 - Events..... 56
 - Action sets..... 68
 - Schedules..... 70
 - Licenses..... 71
 - Refresh licenses..... 71
 - Show license XML..... 71
 - Settings..... 71
 - Servers..... 72
 - General..... 76
 - Notifications..... 86
 - Cloud services..... 87
 - Aggregates..... 88
 - Maintenance..... 90
 - Backup and restore..... 91
 - Analytics..... 93
 - Add a video analytic license to a camera..... 93
 - Draw a processing mask..... 94

Calibrate a camera.....	94
TCP Listener.....	95
Analog Video Signal Loss.....	96
Automatic License Plate Recognition.....	96
Camera Tampering.....	100
Crowd Detection.....	101
Image Stabilization.....	104
Indoor People Tracking.....	104
Left and Removed Item Detection.....	107
Motion Detection.....	111
Outdoor People and Vehicle Tracking.....	113
PTZ Auto-Tracking.....	116
Face Recognition.....	116
Senstar Sensor Fusion.....	120
Senstar Symphony AI Object Detection and Tracking.....	127
Senstar Symphony AI Overhead People Tracking and Counting.....	129
Senstar Symphony AI Thermal Object Detection and Tracking.....	131
Senstar Symphony Client.....	134
Open command.....	134
Change your password.....	134
View log files.....	134
View events.....	135
Lock times.....	135
Adjust the number of locked camera view panels.....	135
Customize the toolbar.....	136
Disable single sign-on.....	136
Configure the SSL certificate timeout.....	136
Device tree.....	137
Search the device tree.....	137
Display a list of users viewing a camera.....	138
Suspending access to video.....	138
Create a camera tour.....	139
Change IO state.....	139
Link a camera view.....	139
Disconnect audio.....	139
Hide device status.....	140
Server list.....	140
Select the active server using the farm list.....	140
Enable the server list pane.....	140
Select the active server using the server list.....	141
View panels.....	141
View a camera.....	141
View a browser.....	141
View a map.....	141
View a Senstar Thin Client.....	142
View picture in picture.....	142
View instant replay.....	142
Save a camera view.....	142
Load a camera view.....	143
Open a docked camera view.....	143

Open a floating camera view.....	143
Add a camera view panel.....	143
Add an alarm.....	143
Add an alarm indicator.....	144
Configure a camera view panel.....	144
Search.....	147
View video by date.....	148
Record video manually.....	148
Open by address.....	148
View summary video.....	148
Video controls.....	149
PTZ controls.....	150
Camera controls.....	151
Timeline.....	152
Timeline colors.....	152
Display a camera timeline.....	153
Display the consolidated timeline.....	153
Maps.....	153
Add a map.....	155
Add a GIS map.....	155
View a map.....	155
Add a device to a map.....	155
Add a label to a map.....	155
Add a rule to a map.....	156
Add a zone to a map.....	156
Add site information to a map.....	158
Map icons.....	158
Display field of view.....	159
Senstar Symphony Messenger.....	159
Send a message.....	159
Carousels.....	159
Add a carousel.....	160
Edit a carousel.....	160
Delete a carousel.....	160
Settings.....	160
View camera activity.....	161
Customize the toolbar.....	161
Change timeline colors.....	161
Startup settings.....	162
Display settings.....	163
Alarms settings.....	165
Video settings.....	166
Customize settings.....	169
Sound settings.....	171
Regional settings.....	172
Global settings.....	173
Lock settings.....	174
Update settings.....	175
Advanced settings.....	176
Bookmarks.....	177
Create a bookmark.....	177

- Delete a bookmark..... 177
- Video wall..... 177
 - Register a client..... 177
 - Create a video wall..... 177
- Server configuration..... 178
 - Connect to a server..... 178
 - Disconnect from a server..... 178
 - Delete recorded video..... 178
 - Get information about the server..... 179
 - Manual Configuration Editor..... 179
 - Windows authentication..... 181
- Reports..... 181
 - Create an alarm report..... 182
 - Create an alarm statistics report..... 183
 - Create a Face Recognition report..... 184
 - Create a heat map image report..... 185
 - Create an Automatic License Plate Recognition report..... 186
 - Create an object counts report..... 187
 - Create an object counts across a line report..... 188
 - Create an overhead people count report..... 189
 - Create an object statistics report..... 190
 - Edit a report..... 191
 - Run a report..... 191
- Alarms..... 191
 - Disable alarms for a camera..... 191
 - Disable alarms for a server..... 192
 - Alarm Console..... 192
- Visual tracking..... 194
 - Add a visual tracking link..... 195
- Video export..... 195
 - Export video to the cloud..... 195
 - Export video to file..... 197
- Senstar Symphony Web Client..... 199
 - Log in to the Senstar Symphony Web Client..... 199
 - Configure the Senstar Symphony Web Client..... 199
- Senstar Symphony Player..... 200
 - Install the Senstar Symphony Player..... 200
 - Enable watermark verification..... 200
 - Play a video file..... 200
- Legal information..... 202
 - Senstar Symphony third-party attributions..... 202

Introduction

Senstar Symphony is award-winning, intelligent video surveillance software that offers a single, innovative, and open IP video platform for video management, video analytics, system integration, and alarm management.

Senstar Symphony installs on standard IT hardware, supports both analog and IP cameras from hundreds of manufacturers, provides a feature-rich, easy-to-use interface, and incorporates IT friendly features to make administration simple. Senstar Symphony can reside on a single computer or multiple computers in a server farm.

Senstar Symphony comprises two main components: the Senstar Symphony Server and the Senstar Symphony Client. You can use the Senstar Symphony Server configuration interface to configure Senstar Symphony and the Senstar Symphony Client interface to interact with the cameras connected to the Senstar Symphony Server.

Senstar Symphony also includes the Senstar Symphony Web Client and the Senstar Symphony Player. The Senstar Symphony Web Client provides functionality similar to the Senstar Symphony Client, but in a Web browser and without requiring installed software. The Senstar Symphony Player allows you to play video files that you export from the Senstar Symphony Client.

Network configuration

The Senstar Symphony Server software uses the following network ports by default.

Single-server network configuration

Port	Protocol	Description
80	TCP	HTTP web server that forwards to HTTPS on port 443 for server configuration
443	TCP	HTTPS secure web server for server configuration
8433	TCP	Senstar Symphony Mobile Bridge (mobile listening port)
8434	TCP	Senstar Symphony Mobile Bridge (event listening port)
8488	TCP	Senstar Symphony Mobile Bridge (video proxy listening port)
50000	TCP	HTTP web server for the web client
50001	TCP	Web service (control and notification port)
50010	TCP	RTSP live and historical video
50014	TCP	HTTPS secure web server for the web client (if configured)

Server farm network configuration

Port	Protocol	Description
80	TCP	HTTP web server that forwards to HTTPS on port 443 for server configuration

Port	Protocol	Description
443	TCP	HTTPS secure web server for server configuration
1433	TCP	Outbound rule for SQL server on the SQL server firewall
1434	UDP	Port for SQL communication
5045	UDP	Port for health checks
8433	TCP	Senstar Symphony Mobile Bridge (mobile listening port)
8488	TCP	Senstar Symphony Mobile Bridge (video proxy listening port)
50000	TCP	HTTP web server for the web client
50001	TCP	Web service (control and notification port)
50004	TCP	Port for server sub-services
50010	TCP	RTSP live and historical video
50014	TCP	HTTPS secure web server for the Senstar Symphony Web Client (if configured)

Additional network configuration

Port	Protocol	Description
5041	TCP	Access control
50002	TCP	SSO authentication requests
50005	TCP	Video wall
50015	TCP	SSO authentication requests and cryptography

Getting started

Task	Topic
I want to add a digital camera to the Senstar Symphony Server.	Add a camera manually Add a camera automatically
I want to save video to a file.	Export video
I want to view video from a camera.	View a camera
I want to add an alert to the Senstar Symphony Server.	Create a rule
I want to view an event across different cameras.	View Camera Activity

Related tasks

[Add a camera manually](#) on page 14

You can manually add cameras to the Senstar Symphony Server in the Senstar Symphony Server configuration interface.

[Add a camera automatically](#) on page 14

The Senstar Symphony Server can automatically detect cameras on the same network.

[View a camera](#) on page 141

You can view a camera in each camera view panel in the Senstar Symphony Client interface.

[Export video to file](#) on page 197

You can export video from the Senstar Symphony Client as .aira or .avi files.

[Create a rule](#) on page 55

You can create a rule to trigger the Senstar Symphony Server to perform actions.

[View camera activity](#) on page 161

You can view the activity for multiple cameras and open camera view panels for specific times from each camera's timeline.

Senstar Symphony Server

The Senstar Symphony Server includes functionality to manage devices, security, rules, sites, and settings.

You configure the Senstar Symphony Server using the Senstar Symphony Server configuration interface and the Senstar Symphony setup wizard. You can access the Senstar Symphony Server configuration interface directly in a browser or from the Senstar Symphony Client interface. You can launch the Senstar Symphony setup wizard from the start menu on the computer that hosts the Senstar Symphony Server.

Log in to the Senstar Symphony Server

You can open the Senstar Symphony Server configuration interface in a browser.

You can also access the Senstar Symphony Web Client from the Senstar Symphony Server configuration interface.

1. In a browser, navigate to the IP address of your Senstar Symphony Server.
2. In the language list, select your language.
3. Type your username and password.
4. Click **Server Configuration**.

Senstar Symphony Server services

The Senstar Symphony Server runs the following services.

Service	Function
AI Authentication Service	<ul style="list-style-type: none"> • Performs single sign-on authentication • Log file prefix: <ul style="list-style-type: none"> • sso
AI AxisPACSListenerService	<ul style="list-style-type: none"> • Communicates with Axis access control devices • Optional service/Manual installation • Log file prefix: <ul style="list-style-type: none"> • aac1
AI DataAccessService	<ul style="list-style-type: none"> • Communicates with the Senstar Symphony Database • Log file prefix: <ul style="list-style-type: none"> • da
AI Enterprise Management Service	<ul style="list-style-type: none"> • Communicates with the Senstar Enterprise Manager • Updates the Senstar Symphony Server software automatically when using the Senstar Enterprise Manager to make configuration changes • Log file prefix: <ul style="list-style-type: none"> • fs

Service	Function
AI InfoService	<ul style="list-style-type: none"> • Hosts the Senstar Symphony Web service that receives all requests from the Senstar Symphony Client • Hosts the Web server for the Senstar Symphony Server configuration interface • Retrieves timeline data from footage storage • Log file prefixes: <ul style="list-style-type: none"> • is (information service) • isac (access control) • isbk (automatic backup)
AI Mobile Bridge	<ul style="list-style-type: none"> • Facilitates communication between mobile devices and the Senstar Symphony Server • Facilitates communication between the Senstar Thin Client and the Senstar Symphony Server • Log file prefix: <ul style="list-style-type: none"> • mo
AI NetSendHist	<ul style="list-style-type: none"> • Retrieves historical video from the footage storage • Streams video • Creates historical images • Log file prefix: <ul style="list-style-type: none"> • hs
AI OPCServer	<ul style="list-style-type: none"> • Communicates with the OPC Server • Optional service/Manual installation • Log file prefix: <ul style="list-style-type: none"> • op
AI Scheduler	<ul style="list-style-type: none"> • Polls hardware alarm inputs • Generates alarms • Generates reports • Removes expired video files • Retrieves search results (video and XML) from the NAS • Log file prefixes: <ul style="list-style-type: none"> • sc (scheduler) • scac (actions) • scax (access) • scc1 (cleaner) • sccp (CPU/memory) • scis (multicaster) • scpm (PTZ) • scse (searches)
AI SNMP Registry	<ul style="list-style-type: none"> • Registers sub-agents

Service	Function
AI Tracker	<ul style="list-style-type: none"> Analyzes video Saves video to storage Log file prefix: <ul style="list-style-type: none"> cs <p>The Senstar Symphony Server creates an instance of the AI Tracker service for each camera. The names of the AI Tracker service instances include the ID of the camera.</p>
AI Watchdog	<ul style="list-style-type: none"> Monitors and starts Senstar Symphony services Log file prefixes: <ul style="list-style-type: none"> hm (health monitoring) nu (health monitor)

Check CPU usage

You can use the [ShowCPUUsage](#) command to check the CPU usage on the computer that hosts the Senstar Symphony Server.

The [ShowCPUUsage](#) command displays the CPU usage as a percentage of the capacity of a single core. For example, if the computer has four cores and the Senstar Symphony Server is using 30% of each core, the result is 120.



Note: Prior to Senstar Symphony 8.5, you could check the CPU usage by using the KillAll 8 command.

1. On the computer that hosts the Senstar Symphony Server, run a command prompt as administrator.
2. In the command prompt, type ShowCPUUsage and press **Enter**.

Manage services

You can use the [KillAll](#) command to stop, start, and restart Senstar Symphony services.

The following parameters are used with the [KillAll](#) command to manage the Senstar Symphony services.

Parameter	Description
1	Stop the Senstar Symphony services gracefully.
2	Terminate the Senstar Symphony services.
4	Terminate the Senstar Symphony services only if necessary (excluding the AI InfoService service).
5	Start the Senstar Symphony services gracefully (excluding the AI InfoService service).
6 <i>pid</i>	Terminate the Senstar Symphony service with process ID equal to <i>pid</i> .
7	Restart the AI InfoService service.
9	Terminate the Senstar Symphony services only if necessary (including the AI InfoService service).

Parameter	Description
a	Start the Senstar Symphony services.
d	Disable all of the Senstar Symphony services.
e	Enable all of the Senstar Symphony services. The AI Tracker service is set to manual and all other Senstar Symphony services are set to automatic.
r	Terminate the Senstar Symphony services only if necessary (including the AI InfoService service) and start the Senstar Symphony services gracefully (excluding the AI InfoService service).
s	Restart the Senstar Symphony services in sequence.
t <i>tracker_id</i>	Restart the AI Tracker service with the ID equal to <i>tracker_id</i> .
x	Terminate the Senstar Symphony services only if necessary (including the AI InfoService service) and stop any instances of the Senstar Symphony Client running on the computer.

1. On the computer that hosts the Senstar Symphony Server, run a command prompt as administrator.
2. In the command prompt, type `KillAll parameter` and press **Enter**.
Where *parameter* is the number or letter that defines the specific function of the `KillAll` command.

Devices

The Senstar Symphony Server supports cameras, digital input/output devices, and access control devices. You can configure devices on the Devices tab in the Senstar Symphony Server configuration interface. The Devices tab includes the Cameras, Templates, Hardware, Access Devices, Device Tree, and Carousels tabs.

Cameras

The Senstar Symphony Server is compatible with analog and IP cameras from a wide variety of manufacturers.

The Senstar Symphony Server supports the following standards:

- ONVIF Profile S
- ONVIF Profile G
- ONVIF Profile T
- Real Time Streaming Protocol (RTSP)

The Senstar Symphony Server supports the most recent official firmware for cameras, as provided by camera manufacturers. For analog cameras, you connect the camera to the Senstar Symphony Server using a video encoder. For PTZ cameras, you need to configure the control port for the camera and select it in the Senstar Symphony Server configuration interface.

The Cameras page in the Senstar Symphony Server configuration interface lists the cameras that are connected to the Senstar Symphony Server. You can filter the list by typing or selecting values in the header and you can sort the list by clicking a column title.

Multicasting

Multicasting allows numerous Senstar Symphony Client instances to connect directly to cameras without requiring dedicated video streams for each Senstar Symphony Client.

Multicasting can reduce the load on both the Senstar Symphony Server and camera when a large number of Senstar Symphony Client instances need to display video from a camera. To use multicasting, both the cameras and the network switches must support multicasting. To check if a camera supports multicasting, check the [Supported Video Devices list](#).

To configure multicasting, complete the following workflow:

1. Configure multicasting on the network switch.
2. Configure multicasting on the camera.
3. In the Senstar Symphony Server configuration interface, add the camera and select Multicast as the transport for the camera.
4. In the Senstar Symphony Client interface, set the camera connection mode to Connect directly, if the camera supports it.

Related tasks

[Add a camera automatically](#) on page 14

The Senstar Symphony Server can automatically detect cameras on the same network.

[Add a camera manually](#) on page 14

You can manually add cameras to the Senstar Symphony Server in the Senstar Symphony Server configuration interface.

Related reference

[Video settings](#) on page 166

The video settings determine the behavior of PTZ cameras, the appearance of video decorations, instant replay, and the characteristics of video in the Senstar Symphony Client.

Search for a camera

You can use filters in the Senstar Symphony Server configuration interface to search for a specific camera.

You can filter the camera list using the following filters:

- camera ID (ID)
- camera name (Name)
- Senstar Symphony Server to which the camera connects (Server)
- camera type (Type)
- IP address of the camera (IP Address)
- camera brand (Brand)
- camera model (Model)
- template applied to the camera (Template)
- camera resolution (Resolution)
- camera frame rate (FPS)
- groups to which the camera belongs (Groups)
- video analytic active on the camera (Add-on)

You can also sort the list of cameras by clicking the column name. Clicking the column name toggles between ascending and descending order.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Click the magnifying glass to make the filter text fields visible.
3. Define the filter criteria.
4. Click **Apply filter**.

To reset the filter and restore the list of cameras, click **Clear Filter**.

Add a camera manually

You can manually add cameras to the Senstar Symphony Server in the Senstar Symphony Server configuration interface.

To add a camera using RTSP, add the RTSP URL in the Address field and select RTSP URL in the Driver list.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Click **Add Cameras**.
3. Click **Add Camera Manually**.
4. In the **Address** field, type the IP address of the camera.
5. In the **Driver** list, select the manufacturer of the camera.
6. Type a the username and password for the camera.
7. Click **Connect** or **Add without connecting**.

Related concepts

[Multicasting](#) on page 13

Multicasting allows numerous Senstar Symphony Client instances to connect directly to cameras without requiring dedicated video streams for each Senstar Symphony Client.

Related reference

[Video settings](#) on page 166

The video settings determine the behavior of PTZ cameras, the appearance of video decorations, instant replay, and the characteristics of video in the Senstar Symphony Client.

Add a camera automatically

The Senstar Symphony Server can automatically detect cameras on the same network.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Click **Add Cameras**.
3. Click **Begin Automatic Discovery**.
4. In the **Credentials Required** window, type the user name and password for the camera, and click **Connect**.
5. Select the camera and click **Next**.
6. Type a name for the camera in the **Camera Name** field or use the default name.
7. Select a camera template for the camera in the **Template** list.
8. In the **Group** list, select the device group to which the camera belongs.
9. In the **Add-On** list, select the video analytic to use on the camera.
10. Click **Add 1 Selected Camera**.

After the add the camera, the Senstar Symphony Server configuration interface opens the edit camera page. For more information, see the Edit a camera topic.

Related concepts

[Multicasting](#) on page 13

Multicasting allows numerous Senstar Symphony Client instances to connect directly to cameras without requiring dedicated video streams for each Senstar Symphony Client.

Related reference

[Video settings](#) on page 166

The video settings determine the behavior of PTZ cameras, the appearance of video decorations, instant replay, and the characteristics of video in the Senstar Symphony Client.

Add a mobile camera

You can add the camera on a mobile device to the Senstar Symphony Server when you use the Senstar Symphony Mobile Bridge. The mobile camera must be on for the Senstar Symphony Server to receive video.

To use a mobile camera, you must open port 49900 on the firewall.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Click **Add Cameras**.
3. Click **Add Camera Manually**.
4. In the **Address** field, type 0.0.0.0.
5. In the **Driver** field, select **Mobile**.
6. In the **User Name** and **Password** fields, type the credentials for the Senstar Symphony Mobile Bridge.
7. Click **Connect**.
8. In the **Camera Name** field, type a name for the mobile camera.
9. In the **Template** field, select a template for the mobile camera.
10. In the **Group** field, select the group for the mobile camera.
11. In the **Add-Ons** field, select **None**.



Note: Senstar Symphony video analytics do not support mobile cameras.

12. In the **Server** field, select the Senstar Symphony Server for the mobile camera.
13. Click **Add 1 Selected Camera**.
14. Configure the settings for the mobile camera.



Note: The resolution on the mobile device must match the resolution set in the Senstar Symphony Server configuration interface to transmit video.

15. Click **Save**.

Edit a camera

You can modify camera settings in the Senstar Symphony Server configuration interface.

After you add a camera to the Senstar Symphony Server (either manually or automatically), you edit the camera to configure the advanced options for the camera.



Note: Some settings are unavailable if you apply a template to the camera. You must change the settings in the camera template.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera and click **Edit**.
3. To change the name of the camera, type a new name in the **Name** field.
4. To change the template applied to the camera, select the template in the **Template** list.
5. Type a description for the camera in the **Description** field.
6. Type the text that appears as a decoration over the video in the **Code** field.
7. To change the RTSP port for an ONVIF camera, type the new port in the **RTSP Port** field.
8. To change the server that manages the camera, select the new server in the **Managed By** list.
9. To change how the camera responds in the case of a server failure, select or clear the **Failover enabled** box.
10. To configure the camera to support direct connections, select **Support Direct Connect**.

11. If the camera is connected using a video encoder, select whether the camera is a fixed camera or a PTZ camera.
12. If the camera is a PTZ camera connected using a video encoder, complete the following tasks:
 - a) In the **Max Locked Minutes** field, set the maximum time that the camera can be locked.
 - b) In the **Auto-PTZ Priority** field, set the priority that a user must exceed to control the PTZ when the Senstar Symphony Server attempts to move the PTZ camera for automatic tracking.
 - c) In the **Force-PTZ Priority** field, set the priority that a user must exceed to control the PTZ when the Senstar Symphony Server attempts to force the PTZ camera to a location because of a rule.
 - d) In the **Type** list, select the PTZ communication protocol for camera.
 - e) In the **Camera Address** field, select the address of the camera.
The default camera address is 1.
 - f) In the **Control Port** list, select the communication port that the encoder uses for the camera.
You configure the communication port on the video encoder when you connect the PTZ camera to the video encoder.
13. Click **Save**.

Add a video stream

You can add a video stream to a camera that the Senstar Symphony Server can use to display video at a reduced resource cost.



Note: Some settings are unavailable if you apply a template to the camera. You must change the settings in the camera template.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera and click **Edit**.
3. In the **Video** section, click **Add Stream**.
4. In the **Resolution** field, select the resolution for the stream.
5. In the **FPS** field, select the frames per second for the stream.
6. In the **Video Codec** field, select the video codec for the stream.
7. In the **Transport** field, select how the camera transmits video from the stream to the Senstar Symphony Server.
8. In the **Bitrate** field, select the bitrate for the stream.
9. In the **Key Frame Interval** list, select the frequency of frames in the video that the Senstar Symphony Server considers to be key frames.
10. In the **Recording Mode** list, select when the Senstar Symphony Server records video from the stream.
11. In the **Schedule** list, select when the recording mode is active for the stream.
12. Click **Save**.

Add a video analytic stream

You can add a stream to a camera that the Senstar Symphony Server can use for video analytic processing.

To add a video analytic stream, you must first configure a video analytic for the camera.

The Senstar Symphony Server sets the resolution, frame rate, video codec, transport, bitrate, and key frame interval automatically.



Note: Some settings are unavailable if you apply a template to the camera. You must change the settings in the camera template.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera and click **Edit**.
3. In the **Video** section, click **Add Analytics Stream**.


4. In the **Recording Mode** list, select when the Senstar Symphony Server records video from the stream.
5. In the **Schedule** list, select when the recording mode is active for the stream.
6. Click **Save**.

Configure a privacy mask

You can use a privacy mask to obscure areas in the camera view. A privacy mask obscures video (live and historical) so that a viewer cannot identify objects but allows the Senstar Symphony Server to analyze the video for alarms.

A static privacy mask obscures a defined area of the camera view. A dynamic privacy mask obscures tracked objects.

Privacy masks for PTZ cameras also include a location list and a slider that allows you to zoom in on an image.

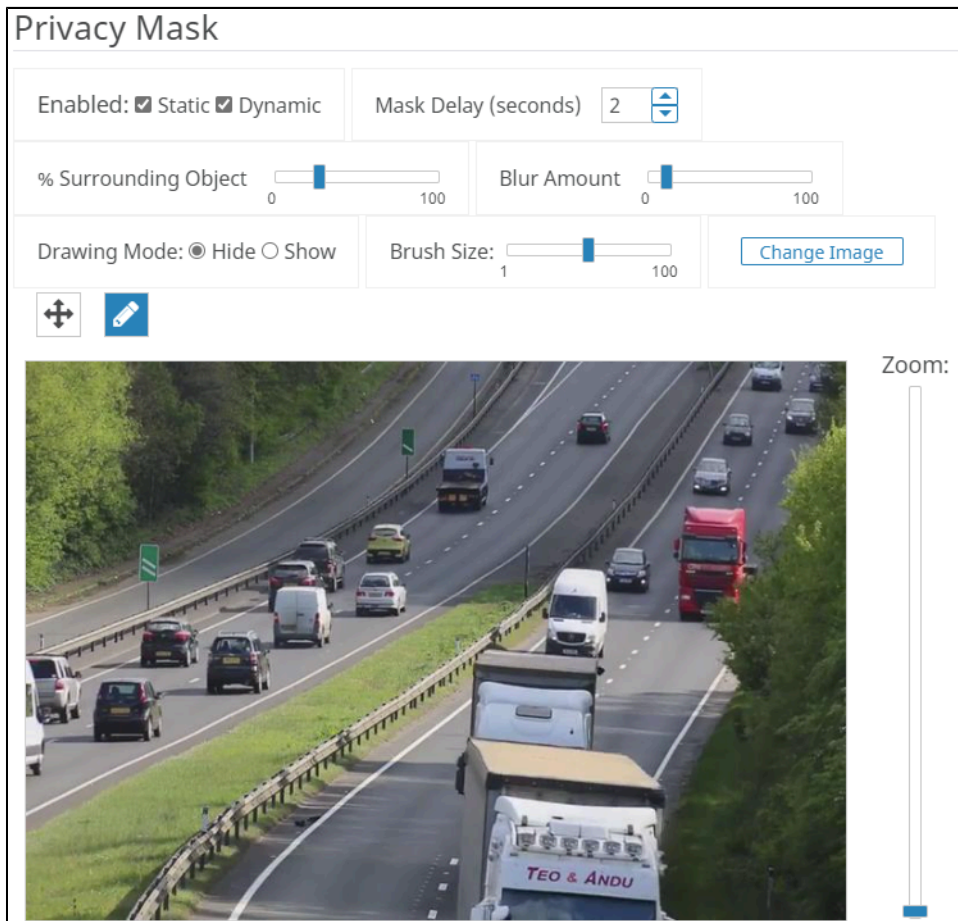

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera and click **Edit**.
3. In the **Privacy Mask** section, perform the following tasks:
 - a) In the **Enabled** list, select whether the privacy is static, dynamic, or both.
 - b) In the **Mask Delay** field, set how long (in seconds) the Senstar Symphony Server remembers the position of tracked objects and continues to obscure the previous location of a tracked object.
This setting only applies to dynamic privacy masks.
 - c) On the **% Surrounding Object** slider, select the area beyond a tracked object to which the Senstar Symphony Server applies the privacy mask.
This setting only applies to dynamic privacy masks.

- d) On the **Blur Amount** slider, select to what degree the Senstar Symphony Server obscures the camera view.
 - e) In the **Drawing Mode** list, select whether the paintbrush marks areas to hide or show.
This setting only applies to static privacy masks.
 - f) On the **Brush Size** slider, select the size of the paintbrush.
This setting only applies to static privacy masks.
 - g) To change the privacy mask image, click **Change Image** and select the image.
This setting only applies to static privacy masks.
 - h) On the privacy mask image, use the paintbrush to define the areas to either hide or show.
This setting only applies to static privacy masks.
4. Click **Save**.

Configure digital input and output

You can configure how digital inputs and outputs appear in the Senstar Symphony Client interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera and click **Edit**.
3. In the **Digital I/O** section, perform the following tasks:
 - a) To enable the input or output, select **In Use**.
 - b) To set the name that appears in the Senstar Symphony Client interface, type a name in the **Output Name** or **Input Name** field.
 - c) In the **Activate** field, type the text that appears in the Senstar Symphony Client interface when clicking on the input or output activates it.
 - d) In the **Deactivate** field, type the text that appears in the Senstar Symphony Client interface when clicking on the input or output deactivates it.
 - e) In the **Auto Deactivate** field, set the time (in milliseconds) after which the input or output automatically deactivates.
 - f) In the **Camera Shortcut** list, select the camera on which the input or output controls appear.
Buttons that allow you to control the input or output appear in the camera view panel for the camera that you select.
4. Click **Save**.

Add a camera to a device group

You can add a camera to a device group in the device tree.

Before you begin, make sure that you have created device groups for the device tree.

The camera appears as part of the group in the device tree in the Senstar Symphony Client interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera and click **Edit**.
3. In the **Groups** section, select a groups or groups to which you want to add the camera.
4. Click **Save**.

Configure video storage for a camera

You can set the video storage setting for individual cameras.

The camera setting takes precedence over the video storage settings for individual Senstar Symphony Server instances and the server farm.

Video Storage

<p>Storage Paths</p> <p><input checked="" type="radio"/> Use storage paths set by server</p> <p style="margin-left: 20px;"><input type="text" value="D:\Data"/></p> <p><input type="radio"/> Use specific paths for this camera</p>	<p>Video Storage</p> <p><input checked="" type="radio"/> Use storage limit set by server</p> <p style="margin-left: 20px;"><input type="text" value="No limit specified"/></p> <p><input type="radio"/> Limit the number of days video is stored</p> <p><input type="checkbox"/> Protect Alarm Recordings:</p>
--	---

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera and click **Edit**.
3. To set the storage path for video from the camera, perform one of the following tasks in the **Storage Paths** section:
 - To use the storage path that the Senstar Symphony Server uses for video, select **Use storage paths set by server**.
 - To use a custom storage path, select **Use specific paths for this camera** and type the storage path.
4. To set the video retention policy for the camera, perform one of the following tasks in the **Video Storage** section:
 - To use the video retention policy that the Senstar Symphony Server uses for video, select **Use storage limit set by server**.
 - To use a video retention policy, select **Limit the number of days video is stored** and set the number of days to retain video.
5. To use a custom video retention policy for video associated with alarms, perform the following tasks:
 - a) Select **Protect Alarm Recordings**.
 - b) In the **Days** field, set the time (in days) for which the Senstar Symphony Server retains video associated with alarms.
 - c) In the **Pre Alarm** field, set the time (in seconds) before the alarm that the Senstar Symphony Server includes in the alarm video.
 - d) In the **Post Alarm** field, set the time (in seconds) after the alarm that the Senstar Symphony Server includes in the alarm video.
6. Click **Save**.

Add an auxiliary command

You can add auxiliary commands to PTZ cameras or video encoders that you add to the Senstar Symphony Server.

Auxiliary commands are custom commands the you can add to PTZ cameras and encoders to use additional functionality in the Senstar Symphony Client interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera and click **Edit**.
3. In the **Auxiliary** section, perform the following tasks:
 - a) Select **Enable auxiliary commands**.
 - b) Click **Add**.
 - c) In the **Label** field, type a name for the command.
 - d) In the **Command** field, type the custom command.
 - e) In the **Method** field, select whether the command is a GET or PUT command.
4. Click **Save**.

To remove an auxiliary command, click the X beside the command.

Add an overlay command

You can add the output of an I/O device to a camera as an overlay command. When you view the camera in the Senstar Symphony Client interface, the command appears as a button in the camera view that, when clicked, activates the output of the I/O device.

After you add an overlay command to a camera, the command appears in the Senstar Symphony Client interface as it appears in the Senstar Symphony Server configuration interface (including aliases). You can add multiple overlay commands to a camera.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera and click **Edit**.
3. In the **Overlay Commands** section, select the hardware device that you want to command.
4. In the **Choose a command** list, select what the command does (e.g., Activate, Deactivate, Toggle State, etc.).
5. Click **Save**.

Import cameras

You can import cameras from a CSV file.

You can create a CSV file of cameras by either exporting a list of cameras or by creating a blank import file to use as a template.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Click **Add Cameras**.
3. Click **Import Cameras From File**.
4. Navigate to the camera list file and click **Open**.

Create a blank import file

You can create a blank CSV file to use for importing cameras to the Senstar Symphony Server.

The blank import file includes instructions for adding and importing cameras.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Click **Add Cameras**.
3. Click **Create Blank Import File**.

The Senstar Symphony Server saves a file named `import.csv` to your download location.

Export cameras

You can export the camera list from the Senstar Symphony Server to a CSV file.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Click **Export**.

You can use the CSV file to import the cameras to another Senstar Symphony Server.

Set a camera password

You can set a new password that the Senstar Symphony Server pushes to the camera.

If you set a new password for a camera, you must use that password when you log in to the camera Web interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera.
3. Click the **Set Password** button.

4. Type and confirm the new password.
5. Click the **Set Password** button.

Move a camera

You can move a camera to a different Senstar Symphony Server in your server farm.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select a camera.
3. Click **Move to Server**.
4. In the server list, select the server.
5. Click **OK**.

Browsers

The Senstar Symphony Client can display a Web page in a camera view panel.

When you add a browser in the Senstar Symphony Server configuration interface, it appears in the Senstar Symphony Client interface on the device tree under the Browser heading. You can display the webpage in a camera view panel.

The Senstar Symphony Client uses the Microsoft Edge browser to render the Web pages in the camera view panels, but the panel does not include any browser controls (navigation, address field, settings, etc.).

Search for a browser

You can use filters in the Senstar Symphony Server configuration interface to search for a specific browser.

You can filter the browser list using the following filters:

- browser name (Name)
- browser address (Url)

You can also sort the list of browsers by clicking the column name. Clicking the column name toggles between ascending and descending order.

1. In the Senstar Symphony Server configuration interface, click **Devices > Browsers**.
2. Click the magnifying glass to make the filter text fields visible.
3. Define the filter criteria.
4. Click **Apply filter**.

To reset the filter and restore the list of browsers, click **Clear Filter**.

Add a browser

1. In the Senstar Symphony Server configuration interface, click **Devices > Browsers**.
2. In the **Name** field, type a name for the browser to appear in the Senstar Symphony Client interface.
3. In the **Url** field, type the address of the page.
4. Click **Save**.

Templates

A template is a collection of configuration settings that you can apply to cameras.

If you apply a template to a camera, some of the configuration settings for the camera are restricted. For example, you cannot add an additional stream to a camera if you apply a template to a camera.

Search for a template

You can use filters in the Senstar Symphony Server configuration interface to search for a specific template.

You can filter the template list using the following filter:

- template name (Name)

You can also sort the list of templates by clicking the column name. Clicking the column name toggles between ascending and descending order.

1. In the Senstar Symphony Server configuration interface, click **Devices > Templates**.
2. Click the magnifying glass to make the filter text fields visible.
3. Define the filter criteria.
4. Click **Apply filter**.

To reset the filter and restore the list of templates, click **Clear Filter**.

Template settings

General

Setting	Description
Failover enabled	Select and specify whether failover is enabled or disabled.
Support Direct Connect	Select whether the camera allows direct connections through a browser.
Enable Audio Input	Select whether the camera can record audio.
Enable Audio Output	Select whether the camera can play audio.
Rotate Degrees	Select whether to rotate the footage from the camera.
Change frame rate on alarm to	Select to change the frame rate of the video from the camera.
Limit the number of days video is stored	Specify the maximum time (days) for which the Senstar Symphony Server keeps the video.
PTZ Maximum Locked Time	Specify the maximum time (minutes) that PTZ cameras can remain in a locked state.
Enable panoramic technology	Select to enable panoramic technology for the camera and specify the panoramic type and camera position.

Stream

Setting	Description
Resolution	Specify the resolution for the camera.
Frame Rate	Specify the frame rate for the camera.
Video Codec	Select the video codec that the camera uses.

Setting	Description
Bitrate	Specify the bitrate (in kilobits per second) for the camera.
Key frame interval	Specify the key frame interval.
Video Recording	Select when the camera records video.
Pre Event	Specify how much video (in seconds) the camera records before an event.
Post Event	Specify how much video (in seconds) the camera records after an event.
Schedule	Select to set the schedule.
Audio recording	Select when the camera records audio.

Create a template

Create a template in the Senstar Symphony Server configuration interface.

1. Click **Devices > Templates**.
2. Click **Add Template**.
3. In the **Name** field, type a name for the template.
4. Configure the settings for the template.
5. Click **Save**.

Copy a template

You can copy a template to use it as the starting point for a new template.

1. In the Senstar Symphony Server configuration interface, click **Devices > Templates**.
2. Select the template and click **Clone**.
3. In the **Name** field, type a name for the template.
By default, the name of the new template include **Clone of** before the original template name.
4. Configure the settings for the template.
5. Click **Save**.

Hardware

Hardware can provide data that the Senstar Symphony Server can use to trigger events.

The Senstar Symphony Server supports the following manufacturers:

- Advantech ADAM
- Axis
- Phoenix Contact
- Gallagher
- JCI P2000
- Siemens SPC
- Software House

Search for a hardware device

You can use filters in the Senstar Symphony Server configuration interface to search for a specific hardware device.

You can filter the hardware list using the following filter:

- hardware ID (ID)
- hardware brand (Brand)
- hardware name (Name)
- IP address of the hardware device (IP Address)
- groups to which the hardware device belongs (Groups)

You can also sort the list of hardware devices by clicking the column name. Clicking the column name toggles between ascending and descending order.

1. In the Senstar Symphony Server configuration interface, click **Devices > Hardware**.
2. Click the magnifying glass to make the filter text fields visible.
3. Define the filter criteria.
4. Click **Apply filter**.

To reset the filter and restore the list of hardware devices, click **Clear Filter**.

Add hardware

You can add DIO, access control, and Senstar Thin Client devices to the Senstar Symphony Server from the Hardware tab in the Senstar Symphony Server configuration interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Hardware**.
2. Click **Add Hardware**.
3. In the **Manufacturer** list, select the manufacturer of the hardware device.
If the manufacturer is not in the list, try adding the hardware device as an integration (Add an integration) or as an access control device (Add an access control device).
4. In the **General** section, specify the settings for the hardware device.
The settings are specific to both the manufacturer and the type of device.
5. Click **Connect to Device** to test the connection.
6. Click **Save**.

Integrations

The Integrations tab in the Senstar Symphony Server configuration interface is where you add security solutions to the Senstar Symphony Server.

The Integrations tab allow you to add multiple security solutions to the Senstar Symphony Server. For example, you can add multiple Senstar Symphony Access Control and Senstar Network Manager instances to the Senstar Symphony Server concurrently.

Search for an integration

You can use filters in the Senstar Symphony Server configuration interface to search for a specific integration.

You can filter the integration list using the following filter:

- integration ID (ID)
- integration name (Name)
- integration type (Type)
- information about the integration (Details)

- groups to which the integration belongs (Groups)

You can also sort the list of integrations by clicking the column name. Clicking the column name toggles between ascending and descending order.

1. In the Senstar Symphony Server configuration interface, click **Devices > Integrations**.
2. Click the magnifying glass to make the filter text fields visible.
3. Define the filter criteria.
4. Click **Apply filter**.

To reset the filter and restore the list of integrations, click **Clear Filter**.

Senstar Symphony Access Control introduction

Senstar Symphony Access Control is a standalone application that integrates with the Senstar Symphony Server to manage hardware controllers used for access control, intrusion, and HVAC systems.

You can integrate the Senstar Symphony Access Control with the Senstar Symphony Server to use events from Senstar Symphony Access Control nodes for alarming and monitoring.

For the Senstar Symphony Server to receive alarms from the Senstar Symphony Access Control, the regional and time settings on the computer that hosts the Senstar Symphony Access Control must match the regional and time settings on the computer that hosts the Senstar Symphony Server.

Related reference


[Senstar Symphony Access Control event settings](#) on page 61

Events from Senstar Symphony Access Control can trigger rules on the Senstar Symphony Server.

Connect to Senstar Symphony Access Control

Connect the Senstar Symphony Server to the Senstar Symphony Access Control to use events from the Senstar Symphony Access Control to trigger actions.

1. In the Senstar Symphony Server configuration interface, click **Devices > Integrations**.
2. Click **Add Hardware**.
3. In the **Device Type** list, select **Symphony AC**.
4. In the **Name** field, type a meaningful name for the Senstar Symphony Access Control.
This name will appear in the device list in the Senstar Symphony Server configuration interface and the device tree in the Senstar Symphony Client interface.
5. In the **Database Server** field, type the full address of the Microsoft SQL Server instance for the Senstar Symphony Access Control.
For example, `COMPUTER1\SQLEXPRESS2012`.
6. In the **Database Name** field, type the name of the Senstar Symphony Access Control database.
7. In the **Username** field, type the username that the Senstar Symphony Server uses to access the Senstar Symphony Access Control database.
8. In the **Password** field, type the password that the Senstar Symphony Server uses to access the Senstar Symphony Access Control database.
9. Click **Connect to Device**.
10. In the **Sources** list, select the nodes that you want to add to the Senstar Symphony Server.
If you want your selection to apply to all child nodes, click the **Cascade Selection** toggle switch to turn it on. To prevent your selection from affecting other nodes, click the **Cascade Selection** toggle switch to turn it off. To search for a node, type the terms in the **Search** field—the source list is filtered by the search terms.

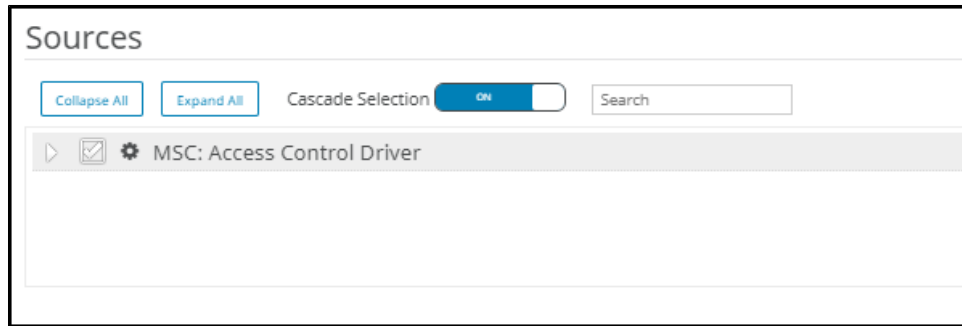

11. In the **Groups** list, select the device tree folder in which the Senstar Symphony Access Control appears.
12. Click **Save**.

Senstar Symphony Access Control settings

General

Setting	Description
Name	Type a meaningful name for the Senstar Symphony Access Control instance. This name appears in the device tree.
Type	This field displays the type of integration. You select the type when you add hardware.
Database Server	Type the full address of the Microsoft SQL Server instance for the Senstar Symphony Access Control.
Database Name	Type the name of the Senstar Symphony Access Control database.
Username	Type the username that the Senstar Symphony Server uses to access the Senstar Symphony Access Control database.
Password	Type the password that the Senstar Symphony Server uses to access the Senstar Symphony Access Control database.
Import XML	Click to import an XML file that contains configuration information.
Export XML	Click to export an XML file that contains configuration information.
Show XML	Click to view the configuration information.

Connect

Setting	Description
Save and Reconnect	Click to save the changes to the general settings and try to connect to the Senstar Symphony Access Control.

Sources

Setting	Description
Collapse All	Click to collapse the source tree to display only the top levels.
Expand All	Click to expand the source tree to display all levels.
Cascade Selection	Toggle on to automatically select all of the lower levels when you select a device. Toggle off to only select the device that you select.
Search	Type search terms to filter the source list.

Senstar Network Manager introduction

The Senstar Network Manager connects Senstar security networks to the Senstar Symphony Server. The Senstar Symphony Server supports the Senstar Network Manager 2.32 and later.

You can integrate the Senstar Network Manager with the Senstar Symphony Server to use events from Senstar Network Manager nodes for alarming and monitoring. You use the Integration tab in the Senstar Symphony Server configuration interface to connect to and configure the Senstar Network Manager.

Devices connected to the Senstar Network Manager appear in the device tree in the Senstar Symphony Client interface. In addition, the device tree displays the state of devices attached to the Senstar Network Manager.

You can connect multiple instances of the Senstar Network Manager to the Senstar Symphony Server.

Automatically generated rules

When you add a Senstar Network Manager integration, the Senstar Symphony Server can automatically generate rules for the sensors and devices connected to the Senstar Network Manager. Generating rules automatically can save time when adding Senstar Network Manager with numerous devices or sensors. By default, the Senstar Symphony Server generates sensor alarms for Trouble, Alarm, and Tamper incidents; and Communication Fail, Communication Fault, Diagnostic Warnings, Diagnostic Fatal, and Enclosure Tamper incidents.

When you automatically generate rules, the Senstar Symphony Server selects to raise alarms on the first camera by camera ID. If you do not have any cameras connected to the Senstar Symphony Server, the Senstar Symphony Server selects to raise alarms on the first map alphabetically. If you do not have cameras and maps connected to the Senstar Symphony Server, the Senstar Symphony Server selects to raise alarms on all devices.

You can configure automatic rule generation when you add the Senstar Network Manager as an integration to the Senstar Symphony Server or you can edit the integration afterwards.



CAUTION: If you edit the Senstar Network Manager integration generation settings and the **Automatically generate rules** checkbox is selected, the Senstar Symphony Server will delete the existing automatically generated rules and generate new rules. To retain your original automatically generated rules, clear the **Automatically generate rules** checkbox before saving your changes.

Related reference

[Senstar Network Manager event settings](#) on page 59


Events from Senstar Network Manager can trigger rules on the Senstar Symphony Server.

Connect to Senstar Network Manager


Connect the Senstar Symphony Server to the Senstar Network Manager to use events from the Senstar Network Manager to trigger actions.

1. In the Senstar Symphony Server configuration interface, click **Devices > Integrations**.
2. Click **Add Hardware**.
3. In the **Device Type** list, select **Senstar Network Manager**.
4. In the **Name** field, type a meaningful name for the Senstar Network Manager.
This name will appear in the device list in the Senstar Symphony Server configuration interface and the device tree in the Senstar Symphony Client interface.
5. In the **IP Address** field, type the IP address of the Senstar Network Manager.
6. In the **Secondary IP Address** field, type the IP address of a secondary (redundant) Senstar Network Manager.
7. In the **Unit ID** field, type the ID of the Senstar Network Manager.
8. Click **Connect to Device**.
9. In the **Sources** list, select the nodes that you want to add to the Senstar Symphony Server.

If you want your selection to apply to all child nodes, click the **Cascade Selection** toggle switch to turn it on. To prevent your selection from affecting other nodes, click the **Cascade Selection** toggle switch to turn it off. To search for a node, type the terms in the **Search** field—the source list is filtered by the search terms.

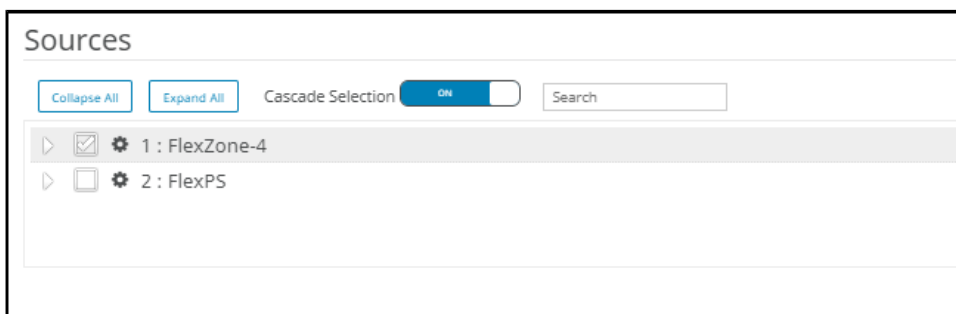

10. In the **Rules** section, configure if and how the Senstar Symphony Server automatically generates rules for the Senstar Network Manager integration.

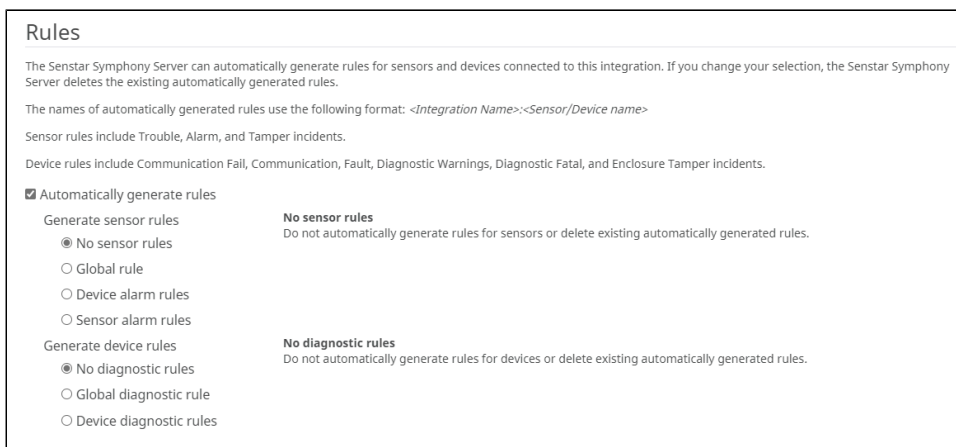

You can automatically create both sensor rules and device rules.

For sensor rules, you can select your level of granularity: global, device, or sensor. If you select **Global rule**, the Senstar Symphony Server creates a single rule for all of the sensors that you select. If you select **Device alarm rules**, the Senstar Symphony Server creates a rule for each of the devices that you

select. If you select **Sensor alarm rules**, the Senstar Symphony Server creates a rule for each of the sensors that you select. Additionally, you can select to combines all incident types into a single rule or you can create separate sensor rules for each incident type.

For device rules, you can choose to create a global diagnostic rule for all of the devices that you select or you can choose to create a device diagnostic rule for each device that you select.

11. In the **Groups** list, select the device tree folder in which the Senstar Network Manager appears.
12. Click **Save**.

Senstar Network Manager settings

General

Setting	Description
Name	Type a meaningful name for the Senstar Network Manager instance. This name appears in the device tree.
Type	This field displays the type of integration. You select the type when you add hardware.
IP Address	Type the IP address of the Senstar Network Manager.
Secondary IP Address	Type the secondary IP address of the Senstar Network Manager. The secondary IP address is the IP address of the secondary Senstar Network Manager when redundancy is configured.
Unit ID	Type the unit ID of the Senstar Network Manager. The unit ID is set when the Senstar Network Manager is installed. Contact the Senstar Network Manager administrator for more information.
Import XML	Click to import an XML file that contains configuration information.
Export XML	Click to export an XML file that contains configuration information.
Show XML	Click to view the configuration information.

Connect

Setting	Description
Save and Reconnect	Click to save the changes to the general settings and try to connect to the Senstar Network Manager.

Sources

Setting	Description
Collapse All	Click to collapse the source tree to display only the top levels.
Expand All	Click to expand the source tree to display all levels.
Cascade Selection	Toggle on to automatically select all of the lower levels when you select a device. Toggle off to only select the device that you select.
Search	Type search terms to filter the source list.


Rules

Setting	Description
Automatically generate rules	Select to make the Senstar Symphony Server automatically generate rules for the Senstar Network Manager integration.
No sensor rules	Select to prevent the Senstar Symphony Server from automatically generating rules for sensors attached to the Senstar Network Manager or to make the Senstar Symphony Server delete any existing automatically generated sensor rules.
Global rule	Select to make the Senstar Symphony Server automatically generate a single rule that applies to all of the sensors attached to the Senstar Network Manager. You can create a single rule for all incident types (grouped) or create rules to each incident type (separate).
Device alarm rules	Select to make the Senstar Symphony Server automatically generate a separate rule for each device that you select in the Sources list. You can create a single rule for all incident types (grouped) or create rules to each incident type (separate).
Sensor alarm rules	Select to make the Senstar Symphony Server automatically generate a separate rule for each sensor that you select in the Sources list. You can create a single rule for all incident types (grouped) or create rules to each incident type (separate).
No diagnostic rules	Select to prevent the Senstar Symphony Server from automatically generating diagnostic rules for devices attached to the Senstar Network Manager or to make the Senstar Symphony Server delete any existing automatically generated device rules.
Global diagnostic rule	Select to make the Senstar Symphony Server automatically generate a single diagnostic rule that applies to all of the devices attached to the Senstar Network Manager.
Device diagnostic rules	Select to make the Senstar Symphony Server automatically generate a separate diagnostic rule for each device that you select in the Sources list.

Associate a camera with a source

You can associate up to four cameras with a hardware source so that you can monitor the area in which the hardware source is located.

1. In the Senstar Symphony Server configuration interface, click **Devices > Integrations**.
2. Select the hardware.
3. Click **Edit**.
4. In the **Sources** section, select the hardware source to which you want to associate cameras.
If you select multiple hardware sources and you want to associate the cameras with all of the selected sources, click the **Selected** box.
5. Beside **Associated Cameras**, click **Show**.
6. For each camera that you want to associate, select the camera spot and pick the camera from the list.

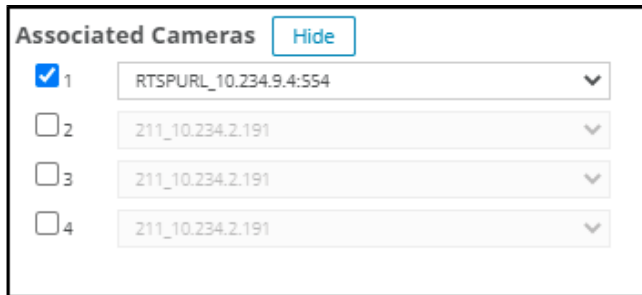

7. Click **Save**.

Add an integration

You can add DIO and access control devices to the Senstar Symphony Server from the Integrations tab in the Senstar Symphony Server configuration interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Integrations**.
2. Click **Add Hardware**.
3. In the **Manufacturer** list, select the manufacturer of the hardware device.
If the manufacturer is not in the list, try adding the integration as hardware (Add hardware) or as an access control device (Add an access control device).
4. In the **General** section, specify the settings for the hardware device.
The settings are specific to both the manufacturer and the type of device.
5. Click **Connect to Device** to test the connection.
6. In the **Groups** list, select the group in the Senstar Symphony Client interface to which the device belongs.
7. Click **Save**.

Access control devices

The Senstar Symphony Server can use data from access control devices to trigger events.

You can use the Senstar Symphony Server configuration interface to integrate an access control device with the Senstar Symphony Server. Once you have added the access control device, you can select the access control devices in the solution to use as sources for events.

The Senstar Symphony Server supports the following manufacturers:

- Axiom
- Axis PACS
- Gallagher

- JCI P2000
- Siemens SPC
- Software House

Add an access control device

You can add access control devices to the Senstar Symphony Server from the Access Devices tab in the Senstar Symphony Server configuration interface.

In some cases, you might need to perform additional tasks on the access control device. For information on a specific access control device, search the Senstar Xnet for the manufacturer of the access control device.

1. In the Senstar Symphony Server configuration interface, click **Devices > Access Devices**.
2. Click **Add Access Device**.
3. In the **Manufacturer** list, select the manufacturer of the access control system.
If the manufacturer is not in the list, try adding the access control device as hardware (Add hardware) or as an integration (Add an integration).
4. In the **Server** list, select the Senstar Symphony Server to which you want to add the access control device.
5. In the **IP Address** field, type the IP address of the access control system.
6. In the **Username** and **Password** fields, type the credentials for the access control system.
7. In the **Sources** list, select the devices in the access control system that can trigger events on the Senstar Symphony Server.
8. Click **Save**.

Device tree

The device tree organizes and displays devices in the Senstar Symphony Client interface.

You can organize the devices in groups. In the Senstar Symphony Server configuration interface, you can create, copy, edit, and delete groups. Changes that you make in the Senstar Symphony Server configuration interface appear immediately in the Senstar Symphony Client interface.

Create a device group

You can use device groups to organize your devices.

1. In the Senstar Symphony Server configuration interface, click **Devices > Device Tree**.
2. Click **Create Group**.
A new folder named **New Group** appears in the device tree.
3. Type a name for the group and press Enter.
4. Drag devices into the group.
5. Click **Save**.

Modify a device group

You can change the name of the device group or add and remove devices from the device group.

1. In the Senstar Symphony Server configuration interface, click **Devices > Device Tree**.
2. To modify the name of the device group, perform the following tasks:
 - a) Select the device group.
 - b) Click **Edit**.
 - c) Type a name for the device group.
 - d) Click **Save**.
3. To move a device to the device group, perform the following tasks:

- a) Click and drag a device to the device group.
- b) Click **Save**.

Copy a device group

You can copy a device group to act as a template for a new device group.

1. In the Senstar Symphony Server configuration interface, click **Devices > Device Tree**.
2. Select a device group.
3. Click **Clone**.
4. Type a name for the new device group.
5. Click **Save**.

Delete a device group

You can delete a device group from the device tree. When you delete a device group, the devices in the group move to the root folder of the device tree.

1. In the Senstar Symphony Server configuration interface, click **Devices > Device Tree**.
2. Select a device group.
3. Click **Delete**.

Carousels

Carousels are configurations for video panels in the Senstar Symphony Client interface that can loop through multiple cameras and display video for a set time.

In the Senstar Symphony Server configuration interface, you add cameras to the carousel and then set how long the video panel in the Senstar Symphony Client interface displays video before moving to the next camera. The device tree in the Senstar Symphony Client interface lists all available carousels. You can open a carousel in any video panel.

Search for a carousel

You can use filters in the Senstar Symphony Server configuration interface to search for a specific carousel.

You can filter the carousel list using the following filter:

- carousel name (Name)

You can also sort the list of carousels by clicking the column name. Clicking the column name toggles between ascending and descending order.

1. In the Senstar Symphony Server configuration interface, click **Devices > Carousels**.
2. Click the magnifying glass to make the filter text fields visible.
3. Define the filter criteria.
4. Click **Apply filter**.

To reset the filter and restore the list of carousels, click **Clear Filter**.

Create a carousel

1. In the Senstar Symphony Server configuration interface, click **Devices > Carousels**.
2. Click **Add Carousel**.
3. Type a name for the carousel.
4. In the **Available Cameras on Servers** list, select the cameras to add to the carousel and click **Add Selected**.

5. In the **Camera** list, drag and drop the cameras to define the carousel order and define the number of seconds for which the camera view panel displays the camera.
6. Click **Save**.

Modify a carousel

1. In the Senstar Symphony Server configuration interface, click **Devices > Carousels**.
2. Select the carousel and click **Edit**.
3. Perform any of the following tasks:
 - a) To modify the name of the carousel, type a new name in the **Name** field.
 - b) To add a camera to the carousel, select the camera in the **Available Cameras on Servers** list and click **Add Selected**.
 - c) To remove a camera from the carousel, highlight the camera in the **Camera** list and click the **X** button.
 - d) To modify the amount of time for each camera, type new values in the **Seconds** fields.
4. Click **Save**.

Copy a carousel

1. In the Senstar Symphony Server configuration interface, click **Devices > Carousels**.
2. Select the carousel and click **Clone**.
3. Modify the carousel.
4. Click **Save**.

Delete a carousel

1. In the Senstar Symphony Server configuration interface, click **Devices > Carousels**.
2. Select the carousel and click **Delete**.

Security

Security settings on the Senstar Symphony Server allow you to configure authentication for users, set and change permissions for users and groups quickly, and add watermarks to video.

You access the security settings on the Security tab in the Senstar Symphony Server configuration interface. The Security tab includes the Users, Groups, Security Profiles, and Logins tabs.

Users

Users are individuals with permission to access and use the Senstar Symphony Server, Senstar Symphony Client, and the Senstar Symphony Web Client.

Add a user

You can add a user to allow someone to use the Senstar Symphony Server and the Senstar Symphony Client.

1. In the Senstar Symphony Server configuration interface, click **Security > Users**.
2. Click **Add**.

3. Enter information for the user.

The screenshot displays the 'Users' configuration page in the Senstar Symphony Server interface. The page is divided into several sections:

- Properties:** Contains input fields for Username (marked 'Required'), Password (marked 'Required'), Name, Email, Phone Number, and Description. Below these is a 'Disabled' checkbox.
- PTZ Priority:** A slider and a text box (set to 50) to define the priority for PTZ camera access.
- Alarm Priority:** A slider and a text box (set to 50) to define the priority for alarm processing.
- Supervisor:** A dropdown menu to select a supervisor, with an 'Enable Two Person Rule' checkbox.
- Group Membership:** A list of groups to which the user belongs, including 'Administrators' and 'Symphony Users'.
- Permissions:** A section with a yellow warning message: 'New item must be saved before permissions can be modified.'

Navigation buttons for 'Save' and 'Back' are located at the bottom right of the form.

4. To disable the user, select the **Disabled** box and type a reason.
5. Using the **PTZ Priority** slider or text box, define a priority for the user to help resolve resource conflicts that occur when two users attempt to use the same PTZ camera.
6. Using the **Alarm Priority** slider or text box, define a priority for the user when using two-stage enhanced alarms.
7. In the **Group Membership** pane, select the groups to which the user belongs.
8. In the **Supervisor** list, select the group that contains users who can impersonate this user.
9. Click **Save**.

Related concepts

[Security authentication](#) on page 53

The Senstar Symphony security authentication mode authenticates usernames and passwords that you create for users in the Senstar Symphony Server configuration interface.

Copy a user

You can copy a user to use it as a template for a new user.


1. In the Senstar Symphony Server configuration interface, click **Security > Users**.
2. Select a user and click **Clone**.
3. Enter information for the user.
4. To disable the user, select the **Disabled** box and type a reason.
5. Using the **Priority** slider or text box, define a priority for the user to help resolve resource conflicts.
6. In the **Group Membership** pane, select the groups to which the user belongs.

7. In the **Supervisor** list, select the group that contains users who can impersonate this user.
8. Click **Save**.

Add a user to a group

You can add a user to a group at any time to grant the permissions for that group to a user.

1. In the Senstar Symphony Server configuration interface, click **Security > Users**.
2. Select a user and click **Edit**.
3. In the **Group Membership** pane, select the group to which you want to add the user.

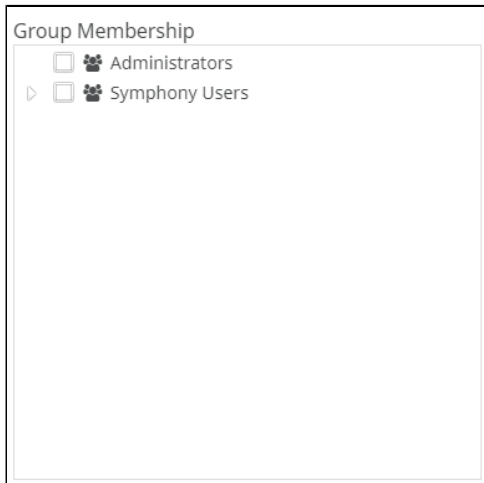

4. Click **Save**.

Supervisor impersonation

Supervisor impersonation allows two users with lesser permissions to log in simultaneously to impersonate a single user with greater permissions.

Supervisor impersonation is the application of the two-person rule to add additional security to the Senstar Symphony Client. You can use this feature to ensure that two people are present when a user performs an operation in the Senstar Symphony Client interface.

Configure a user for supervisor impersonation

To use supervisor impersonation, you must configure a user the two other users can impersonate.

1. In the Senstar Symphony Server configuration interface, click **Security > Users**.
2. Perform one of the following tasks:
 - To create a new user for supervisor impersonation, click **Add**.
 - To use an existing user for supervisor impersonation, select the user and click **Edit**.
3. In the **Properties** section, select **Enable Two Person Rule**.
4. In each of the group lists, select the groups from which the users can impersonate the user.
5. Click **Save**.

Enable supervisor impersonation

To make the supervisor impersonation option available in the Senstar Symphony Client, you must add the feature to the configuration file.

1. Open the `acc.ini` file at `%appdata%\Senstar8`.

2. In the [Main] section, add the following text:

```
ShowTwoManRule=True
```

3. Save and close the acc.ini file.

The **Supervisor Logon** option is visible on the login page for the Senstar Symphony Client.

Impersonate a supervisor

Two users can log in to the Senstar Symphony Client to impersonate a user and gain access to additional functionality.

1. In the Senstar Symphony Client interface, click the user name and then click **Log On/Switch User** to open the **Logon** window.
2. In the **Server** list, select the Senstar Symphony Server for which you have configured supervisor impersonation.
3. Type the credentials for the first user.
4. Select the **Supervisor Logon** box.
5. Type the credentials for the second user.
6. Type the name of the supervisor-impersonation user.
7. In the **Reason** field, type the reason for impersonating a supervisor.
8. Click **OK**.

Force a password change

You can force a user to change a password when the user next logs in to the Senstar Symphony Server, the Senstar Symphony Client, or the Senstar Symphony Web Client.

1. In the Senstar Symphony Server configuration interface, click **Security > Users**.
2. Select the user and click **Edit**.
3. Select **This user must change their password at next login**.
4. Click **Save**.

When the user next logs in, the user is prompted to change the password.

Groups

Groups are collections of users with similar permissions for the Senstar Symphony Server and Senstar Symphony Client.

Groups can contain users that you create and maintain on the Senstar Symphony Server or, if you use Active Directory authentication, groups can synchronize membership with an associated Active Directory group.

Add a group

You can add a group to create a collection of customized permissions for users.

1. In the Senstar Symphony Server configuration interface, click **Security > Groups**.
2. Click **Add**.
3. Type a name for the group.
4. Select the parent group.
5. Type a description for the group.
6. To associate the group with an Active Directory group, perform the following steps:
 - a) Click **Associate**.

- b) Search for and select the Active Directory group.
 - c) Click **OK**.
7. Click **Save**.

After you create a group, you need to set the permissions for each security profile that you use.

Copy a group

You can copy a group to use it as a template for a new group.

When you copy a group, the permissions for all of the security profiles are cloned to the new group.

1. In the Senstar Symphony Server configuration interface, click **Security > Groups**.
2. Select a group and click **Clone**.
3. In the **Name** field, type a name for the group.
4. In the **Group Parents** field, select the groups that act as parent groups.
5. In the **Description** field, type a description for the group.
6. To associate the group with an Active Directory group, perform the following steps:
 - a) Click **Associate**.
 - b) Search for and select the Active Directory group.
 - c) Click **OK**.
7. Click **Save**.
8. In the **Group Membership** pane, select the groups to which the user belongs.
9. In the **Supervisor** list, select the group that contains users who can impersonate this user.
10. Click **Save**.

Security profiles

A security profile is a collection of permissions that you can apply across all users and groups. Security profiles make it easy to switch the permissions for users and groups in the Senstar Symphony Server.

Typically, you add security profiles to the Senstar Symphony Server to be more responsive to external changes. Each user and user group can have a specific set of permissions within each security profile. When you activate a security profile, all users and user groups switch to the permissions in that security profile.

Security profiles workflow

1. Add a security profile to create a new container for user and group permissions.
2. Set the security profile permissions to define the permissions that users and groups have when the security profile is active.
3. Activate the security profile to apply the permissions to users and groups.

Use-case example

For example, you can create a default security profile and a fire response security profile. For normal operation, the default security profile is active and the permissions assigned to the users and user groups are also active. In the case of a fire incident, you activate the fire response security profile that grants a fire response group permission to view all cameras in the facility, broadcast audio from cameras, and search footage to help facilitate the emergency response. When the fire response team resolves the incident, you reactivate the default security profile and return to normal operation.

Add a security profile

You can copy an existing security profile to add another security profile to the Senstar Symphony Server.

The Senstar Symphony Server includes the Default security profile. You can use this security profile as a template for other security profiles.

1. In the Senstar Symphony Server configuration interface, click **Security > Security Profiles**.
2. Select a security profile and click **Copy**.
3. In the **Name** field, type a name for the security profile.
4. (Optional) In the **Description** field, type a description for the security profile.
5. Click **Save**.

Set the security profile permissions

You can set the security profile permissions for a user or group. When you activate the security profile, the Senstar Symphony Server applies the permissions associated with the security profile to the users and groups.


In most cases, you will set the permissions for the default security profile. However, if you use multiple security profiles, you might need to set custom permissions for each security profile.



Tip:

If you want to make extensive changes to the default security profile, consider creating a new security profile for regular use and keep the default security profile as a template for additional security profiles.

1. In the Senstar Symphony Server configuration interface, perform one of the following tasks:
 - To set the security profile permissions for a user, click **Security > Users**.
 - To set the security profile permissions for a group, click **Security > Groups**.
2. Select a user or group and click **Edit**.
3. In the **Security Profile** list, select the security profile for which you want to set permissions.
4. In the permissions tree, click the permission category that you want to set.

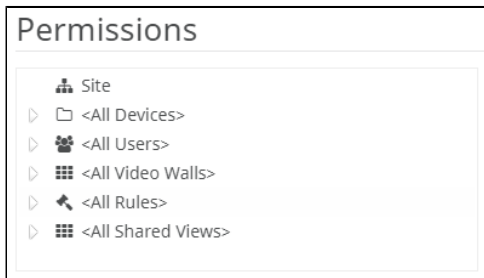

5. In the permission list, set the permissions.

Security Profile		Default				
Group	Name	Allow	Deny	Not Set	Effective Permission	
All	Set All Permissions	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>		
General	Configure Maps	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Deny	
General	Connect	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Allow	
General	Delete Footage	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Deny	
General	Export Video	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Deny	
General	Get Logs	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Deny	
General	Manage Bookmarks	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Allow	
General	Manage Services	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Deny	
General	Play Sounds	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Allow	
Configuration	Add Devices	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Deny	
Configuration	Change Access Control	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Deny	
Configuration	Change Settings	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Deny	
Configuration	View Camera Configuration	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Deny	

6. Click **Save**.

Related reference

[Site permissions](#) on page 40

[Device permissions](#) on page 45

[User permissions](#) on page 47

[Video wall permissions](#) on page 48

[Rule permissions](#) on page 49

[Shared view permissions](#) on page 50

Site permissions

General

Permission	Description
Change IO State	This permissions allows a user to change the IO state of devices in the Senstar Symphony Client interface.
Configure Maps	This permission allows a user to configure maps in the Senstar Symphony Client interface.
Connect	This permission allows a user to connect to servers.
Delete Footage	This permission allows a user to delete video footage in the Senstar Symphony Client interface.
Export Video	This permission allows a user to export video from the Senstar Symphony Client interface.
Get Logs	This permission allows a user to view and download logs in the Senstar Symphony Client interface.
Manage Bookmarks	This permission allows a user to create and edit bookmarks in the Senstar Symphony Client interface.
Manage Services	This permission allows a user to start, stop, and restart Senstar Symphony services in the Senstar Symphony Client interface.
Play Sounds	This permission allows a user to play audio in the Senstar Symphony Client interface.

Configuration

Permission	Description
Add Devices	This permission allows a user to add devices in the Senstar Symphony Server configuration interface.
Change Access Control	This permission allows a user to configure access control devices in the Senstar Symphony Server configuration interface.

Permission	Description
Change Settings	This permission allows a user to change the general settings in the Senstar Symphony Server configuration interface.

Alarm

Permission	Description
Add Alarm	This permission allows a user to create alarms in the Senstar Symphony Client interface.
Manage Alarms	This permission allows a user edit and delete alarms in the Senstar Symphony Client interface.
Mark Alarms	This permission allows a user to mark alarms as an alarm, false alarm, or real actionable in the Senstar Symphony Client interface.
View Alarms	This permission allows a user to view alarms in the Senstar Symphony Client interface.

Backup

Permission	Description
Backup	This permission allows a user to configure backup options in the Senstar Symphony Server configuration interface.
Restore	This permission allows a user to restore a configuration in the Senstar Symphony Server configuration interface.

Face Recognition

Permission	Description
Change faces/people	This permission allows a user to edit faces and associated information for the Face Recognition video analytic in the Senstar Symphony Client interface.
Manage Face Lists	This permission allows a user to add faces to or remove faces from a list.
View faces/people	This permission allows a user to view faces and associated information for the Face Recognition video analytic in the Senstar Symphony Client interface.

LPR

Permission	Description
Add or Edit License Plate Metadata	This permission allows a user to add or edit license plate information for the Automatic License Plate Recognition video analytic in the Senstar Symphony Client interface.
Delete License Plate	This permission allows a user to delete license plate information from the Automatic License Plate Recognition video analytic in the Senstar Symphony Client interface.
Export License Plates	This permission allows a user to export license plate information from the Automatic License Plate Recognition video analytic in the Senstar Symphony Client interface.
Manage License Plate Lists	This permission allows a user to create and edit license plate lists for the Automatic License Plate Recognition video analytic in the Senstar Symphony Client interface.
Manage Special Characters	This permission allows a user to add special character mappings for the Automatic License Plate Recognition video analytic in the Senstar Symphony Client interface.
Perform License Plate Search	This permission allows a user to search for license plate information from the Automatic License Plate Recognition video analytic in the Senstar Symphony Client interface.
View License Plate Log	This permission allows a user to view the license plate log from the Automatic License Plate Recognition video analytic in the Senstar Symphony Client interface.
View License Plate Metadata Configuration	This permission allows a user to view the license plate metadata configuration for the Automatic License Plate Recognition video analytic in the Senstar Symphony Client interface.

Messenger

Permission	Description
Modify Pre-written Messages	This permission allows a user to edit the canned messages in the messenger in the Senstar Symphony Client interface.
Send Messages	This permission allows a user to send messages using the messenger in the Senstar Symphony Client interface.

Point of Sale

Permission	Description
Change POS data	This permission allows a user to modify the point-of-sale data in the Senstar Symphony Client interface.

Permission	Description
View POS data	This permission allows a user to view point-of-sale data in the Senstar Symphony Client interface.

Report

Permission	Description
Execute Report	This permission allows a user to run reports in the Senstar Symphony Client interface.

Rule

Permission	Description
Add Rules	This permission allows a user to create rules in the Senstar Symphony Server configuration interface.

Search

Permission	Description
Convert Searches	This permission allows a user to convert search results to AVI or MPEG files in the Senstar Symphony Client interface.
Delete Searches	This permission allows a user to delete searches in the Senstar Symphony Client interface.
Search	This permission allows a user to perform searches in the Senstar Symphony Client interface.

Security

Permission	Description
Activate Security Profile	This permission allows a user to activate security profiles in the Senstar Symphony Server configuration interface.
Change Authentication Mode	This permission is not used.
Edit Security	This permission allows a user to edit security settings in the Senstar Symphony Server configuration interface.
Manage Security Profiles	This permission allows a user to add, edit, and delete security profiles in the Senstar Symphony Server configuration interface.

Subscription

Permission	Description
Change Subscriptions	This permission allows a user to change the notification settings in the Senstar Symphony Server configuration interface.
View Subscriptions	This permission allows a user to view the notification settings in the Senstar Symphony Server configuration interface.

UI

Permission	Description
Change Carousels	This permission allows a user to edit camera carousels in the Senstar Symphony Server configuration interface.
Configure Visual Tracking	This permission allows a user to add, edit, and delete visual tracking links in the Senstar Symphony Client interface.
Lock UI	This permission allows a user to lock the Senstar Symphony Client interface.
Manage Shared Views	This permission allows a user to edit and save shared views in the Senstar Symphony Client interface.
View Carousels	This permission allows a user to view camera carousels in the Senstar Symphony Client interface.

User

Permission	Description
Add Users	This permission allows a user to create users in the Senstar Symphony Server configuration interface.
Multiple Logins	This permission allows a user to log in to multiple Senstar Symphony Client interface and Senstar Symphony Server configuration interface instances concurrently.

Video Wall

Permission	Description
Change Video Wall Client	This permission allows a user to configure video wall clients in the Senstar Symphony Client interface.
Control Video Walls	This permission allows a user to remotely control video wall clients in the Senstar Symphony Client interface.
Create Video Walls	This permission allows a user to create video walls in the Senstar Symphony Client interface.

Related tasks

[Set the security profile permissions](#) on page 39

You can set the security profile permissions for a user or group. When you activate the security profile, the Senstar Symphony Server applies the permissions associated with the security profile to the users and groups.

Device permissions

General

Permission	Description
Basic Access	This permissions allows a user to access cameras or other devices.
View Group	This permissions allows a user to view the devices in device groups.
View IO State	This permissions allows a user to view the input/output state of devices.

Configuration

Permission	Description
Add Members	This permission allows a user to add devices to a device group.
Change IO State	This permission allows a user to change the input and output state of a device.
Change Settings	This permission allows a user to change the settings for a device.
Configure Analytics	This permission allows a user to configure analytics for a device.
Delete	This permission allows a user to remove a device from the Senstar Symphony Server.
Delete Group	This permission allows a user to delete a device group.
Edit Device Security	This permission allows a user to modify the authentication settings for devices.
Edit Group Membership	This permission allows a user to modify to which groups a device group belongs.
Edit Group Properties	This permission allows a user to modify the properties for device groups.
Edit Group Security	This permission allows a user to modify the security profiles for device groups.
Edit Membership	This permission allows a user to modify devices are in a device group.
Remove Members	This permission allows a user to remove a device from a device group.

Alarm

Permission	Description
Manage Alarms	This permission allows a user to mark an alarm as an alarm, false alarm, or as real and actionable, and to view and edit alarm details in the Senstar Symphony Client interface.
Trigger Manual Alarm	This permission allows a user to add an alarm to a camera timeline in the Senstar Symphony Client interface.

Audio

Permission	Description
Listen to camera	This permission allows a user to listen to the audio that a camera records using the Senstar Symphony Client interface.
Talk through camera	This permission allows a user to broadcast audio from a camera using the Senstar Symphony Client interface.

LPR

Permission	Description
Edit License Plate	This permission allows a user to edit license plates that cameras detect using the Senstar Symphony Client interface.

PTZ

Permission	Description
Calibrate PTZ Camera	This permission allows a user to calibrate a PTZ camera in the Senstar Symphony Client interface.
Control PTZ	This permission allows a user to pan and tilt a PTZ camera using the Senstar Symphony Client interface.
Control zoom via clients	This permission allows a user to zoom a PTZ camera using the Senstar Symphony Client interface.
PTZ Presets	This permission allows a user to move a PTZ camera to a preset position using the Senstar Symphony Client interface.

Search

Permission	Description
Search Footage	This permission allows a user to search video footage using the Senstar Symphony Client interface.

Video

Permission	Description
Manage Recording	This permission allows a user to manage recordings.
View Historical Video	This permission allows a user to view historical video.
View Live Video	This permission allows a user to view live video.
View Private Video	This permission allows a user to view video that is hidden by a privacy mask.
View Restricted Historical Video	<p>This permission allows a user to view video that has been marked as restricted.</p> <p>The Senstar Symphony Server can mark historical video as restricted based on the Time based video playback restriction applied at setting on the Settings > General Settings page in the Senstar Symphony Server configuration interface.</p>

Related tasks

[Set the security profile permissions](#) on page 39

You can set the security profile permissions for a user or group. When you activate the security profile, the Senstar Symphony Server applies the permissions associated with the security profile to the users and groups.

User permissions

General

Permission	Description
Terminate user session	This permission allows a user to end the session for another user.
View Group	This permission allows a user to view user groups.
View User	This permission allows a user to view users.

Configuration

Permission	Description
Add Members	This permission allows a user to add users to user groups.
Delete Group	This permission allows a user to delete user groups.
Delete User	This permission allows a user to remove users from the Senstar Symphony Server.
Edit Group Membership	This permission allows a user to modify the user groups to which user groups belong.

Permission	Description
Edit Group Properties	This permission allows a user to modify the name, description, and Active Directory association of user groups.
Edit Group Security	This permission allows a user to modify the security profiles of user groups.
Edit Membership	This permission allows a user to modify the users in user groups.
Edit Security	This permission allows a user to modify the security profiles of users.
Edit User Properties	This permission allows a user to modify the properties of users (phone number, email, description, etc.).
Remove Members	This permission allows a user to remove users from user groups.

Related tasks

[Set the security profile permissions](#) on page 39

You can set the security profile permissions for a user or group. When you activate the security profile, the Senstar Symphony Server applies the permissions associated with the security profile to the users and groups.

Video wall permissions

General

Permission	Description
Change Panel	This permission allows a user to modify the camera views in a video wall panel.
Change Window	This permission allows a user to modify the panels in a video wall window.
Move Window	This permission allows a user to move video wall panels in the video wall.
Use Panel Context Menu	This permission allows a user to view and use the contextual menu for video wall panels.
Use Window Context Menu	This permission allows a user to view and use the contextual menu for video wall windows.
View	This permission allows a user to view video walls.
View Group	This permission allows a user to view video wall groups.

Configuration

Permission	Description
Add Members	This permission allows a user to add users to a video wall group.

Permission	Description
Delete	This permission allows a user to remove a video wall from the Senstar Symphony Server.
Delete Group	This permission allows a user to delete a video wall group.
Edit Group Membership	This permission allows a user to modify to which groups a video wall group belongs.
Edit Group Properties	This permission allows a user to modify the properties for video wall groups.
Edit Group Security	This permission allows a user to modify the security profiles for video wall groups.
Edit Security	This permission allows a user to modify the security profiles of users.
Modify	This permission allows a user to modify the configuration of video walls.
Remove Members	This permission allows a user to remove a user from a video wall group.

Related tasks

[Set the security profile permissions](#) on page 39

You can set the security profile permissions for a user or group. When you activate the security profile, the Senstar Symphony Server applies the permissions associated with the security profile to the users and groups.

Rule permissions

General

Permission	Description
View Rule	This permission allows a user to view rules in the Senstar Symphony Server configuration interface.

Configuration

Permission	Description
Change Rule	This permission allows a user to change rules in the Senstar Symphony Server configuration interface.

Related tasks

[Set the security profile permissions](#) on page 39

You can set the security profile permissions for a user or group. When you activate the security profile, the Senstar Symphony Server applies the permissions associated with the security profile to the users and groups.

Shared view permissions

General

Permission	Description
View Shared View	This permission allows a user to view shared views in the Senstar Symphony Client interface.

Related tasks

[Set the security profile permissions](#) on page 39

You can set the security profile permissions for a user or group. When you activate the security profile, the Senstar Symphony Server applies the permissions associated with the security profile to the users and groups.

Activate a security profile

You can activate a security profile to apply all of the permissions that you configure for users and groups under that security profile.

When you activate a security profile, the permissions for the security profile replace the permissions of the previous security profile. The functionality in the Senstar Symphony Server configuration interface and Senstar Symphony Client interface that is available to users can change significantly when you activate a security profile.

1. In the Senstar Symphony Server configuration interface, click **Security > Security Profiles**.
2. Select a security profile and click **Activate Security Profile**.

Remove a security profile

You can remove a security profile from the Senstar Symphony Server as long as the security profile is not active. You cannot remove the default security profile.

Removing a security profile from the Senstar Symphony Server does not change the active permissions for users or groups.

1. In the Senstar Symphony Server configuration interface, click **Security > Security Profiles**.
2. Select a security profile and click **Delete**.

Logins

The Logins page displays sessions for both the Senstar Symphony Server and the Senstar Symphony Client.

The Active Sessions section displays information about users who are currently logged in to the Senstar Symphony Server configuration interface and the Senstar Symphony Client interface.

The Historical Sessions section displays information about users who previously logged in to the Senstar Symphony Server configuration interface and the Senstar Symphony Client interface.

The Banned Devices and Groups section displays the devices and device groups for which you have suspended video. If you do not suspend access to video in the Senstar Symphony Client interface, this section will be empty.

Stop an active session

You can stop the active sessions for users that are logged into the Senstar Symphony Client.

Administrator users can stop the active sessions for all other users. Users that are not administrator users can only end their own sessions.

1. In the Senstar Symphony Server configuration interface, click **Security > Logins**.
2. Beside the active session that you want to stop, click **Terminate**.

View historical sessions

1. In the Senstar Symphony Server configuration interface, click **Security > Logins**.
2. Click **Load Historical Sessions**.
3. To export the historical sessions to a CSV file, click **Export CSV file** and open or save the file.

Active Directory integration

The Active Directory authentication security mode uses Active Directory to authenticate users.

For this authentication method, the Senstar Symphony Database stores user names and security identifiers for user accounts, but not the passwords. When a user attempts to log in, the Senstar Symphony Server checks the credentials against Active Directory. When you add a user account to the Senstar Symphony Server, you must associate the user account with a user account in Active Directory.

If you subsequently remove the user from Active Directory, the Senstar Symphony Server deletes the user.

The Senstar Symphony Server automatically synchronizes with Active Directory once a day at 12:00 AM server time. Additionally, you can synchronize the Senstar Symphony Server manually.

Integrate with Active Directory

You can configure the Senstar Symphony Server to integrate with the Active Directory domain.

You can integrate the Senstar Symphony Server with Active Directory during installation of the the Senstar Symphony Server or after installation by using the Senstar Symphony setup wizard.

The Senstar Symphony Server connects to the Active Directory Global Catalog for user and group synchronization. In the Senstar Symphony Server configuration interface, you create groups and associate those groups with groups in Active Directory.

In addition, the Senstar Symphony Server connects to an Active Directory user as the default administrative user.

1. In the **Symphony Security Security** section on the **Farm Configuration** tab, click **Edit**.

The screenshot shows the 'Senstar Symphony Setup' window with the 'Farm Configuration' tab active. The 'Senstar Symphony Security' section is expanded, showing the following options and fields:

- Security Mode:**
 - Senstar Symphony Security
 - Active Directory Integration
- LDAP URL:** [Text Field] **Auto Discover** button. Example: GC://DC=mycompany.DC=com
- Administrative User:**
 - User Name: [Text Field]
 - Password: [Text Field]
 - Retype password: [Text Field]

Buttons for 'Edit', 'Apply', and 'Cancel' are visible at the bottom of the window.

2. Select **Active Directory Integration**.

This close-up shows the 'Senstar Symphony Security' section with 'Active Directory Integration' selected. The 'Verify' button is highlighted with a yellow warning icon, indicating a validation step.

3. In the **LDAP URL** field, perform one of the following tasks:
 - Type the URL for the LDAP global catalog.
 - Click **Auto Discover** to automatically detect the LDAP global catalog.
4. Type a username and password of the Active Directory user who acts as the default administrative user for the Senstar Symphony Server.
5. Click **Verify**.

Associate a group

If you use Active Directory authentication, you must associate groups that you create in Senstar Symphony with groups in Active Directory.

1. In the Senstar Symphony Server configuration interface, click **Security > Groups**.
2. Select a group and click **Edit**.

3. Click **Associate**.

Properties

Name
TestGroup100

Group Parents
Symphony Users

Description
Generated Group 100

Active Directory
Group01

Associate Disassociate

4. In the **Search For** box, type a group name and click **Search**.

Active Directory Search

Search For TestGroup100 Search

Account Name	Name	Description
Your filter criteria returned no results		

OK Cancel

5. Click the group and click **OK**.

Active Directory Search

Search For Test Search

Account Name	Name	Description
Test Group 10	Group11	
TestGroup	TestGroupRenamed	
SupportTestA	SupportTestA	
SupportTestB	SupportTestB	
SupportTest	SupportTest	
OU Test 2	OU Test 2	
OU Test 2 Group	OU Test 2 Group	
ou group test	ou group test	

OK Cancel

Synchronize groups with Active Directory

You can manually synchronize groups that are associated with Active Directory groups to implement changes in Active Directory.

1. In the Senstar Symphony Server configuration interface, click **Security > Groups**.
2. Click **Synchronize**.

Security authentication

The Senstar Symphony security authentication mode authenticates usernames and passwords that you create for users in the Senstar Symphony Server configuration interface.

For this authentication method, the Senstar Symphony Database stores user names and passwords for user accounts. When a user attempts to log in, the Senstar Symphony checks the credentials against the Senstar Symphony Database.

Related tasks

[Add a user](#) on page 34

You can add a user to allow someone to use the Senstar Symphony Server and the Senstar Symphony Client.

Watermarking

The Senstar Symphony uses watermarking to detect tampered video and audio. Watermarking works in the Senstar Symphony Client, Senstar Symphony Player, and Senstar Symphony Web Client.

If the Senstar Symphony successfully verifies the watermark, the video plays normally. If the watermark verification fails, the video displays an error message when you try to view video in the Senstar Symphony Web Client or the Senstar Symphony Player.

Related tasks

[Enable watermark verification](#) on page 200

You can enable watermark verification for the Senstar Symphony Player to prevent the Senstar Symphony Player from playing tampered video.

[Enable watermarking](#) on page 54

When you enable watermarking, the Senstar Symphony Server adds watermarks to recorded video and the Senstar Symphony Client verifies watermarks when playing video.

Enable watermarking

When you enable watermarking, the Senstar Symphony Server adds watermarks to recorded video and the Senstar Symphony Client verifies watermarks when playing video.

1. In the Senstar Symphony Client interface, click **Server Configuration > Manual Configuration Editor**.
2. Click **Add a new setting**.
3. Add the following values:

```
Type: Global
Section: Main
Key: EnableWatermark
Value: True
```

4. Click **OK**.
5. Restart the Senstar Symphony services.

Related concepts

[Watermarking](#) on page 54

The Senstar Symphony uses watermarking to detect tampered video and audio. Watermarking works in the Senstar Symphony Client, Senstar Symphony Player, and Senstar Symphony Web Client.

Rules

The Senstar Symphony Server can generate alarms from rules. Rules include events, action sets, and schedules.

You create rules in the Senstar Symphony Server configuration interface. When you create a rule, you either associate existing events, action sets, and a schedule with the rule, or you create new events, action sets, and a schedule for the rule.

An event triggers a rule. Examples include events from video analytics, camera inputs, and access devices.

An action set defines the actions that the Senstar Symphony Server takes when an event triggers a rule. Examples include displaying or recording footage from a camera, sending an email, and switching a relay. You can select how the Senstar Symphony Server performs all of the actions for multiple alarms of the same type by using the multiple invocation behavior settings: append actions sets performs all of the actions for each alarm and replace queued actions performs all the actions for only the latest alarm.

A schedule defines when a rule is active. An event must occur during an active time in the schedule to trigger a rule.

When a rule is enabled, the occurrence of an event associated with the rule during an active period in the rule's schedule causes the Senstar Symphony Server to perform the actions defined in the rule's action set.

Create a rule

You can create a rule to trigger the Senstar Symphony Server to perform actions.

1. In the Senstar Symphony Server configuration interface, click **Rules > Rules**.
2. Click **Add**.
3. Type a name for the rule.
4. Enable or disable the rule.
5. Add an existing event to the rule or create a new event to add to the rule.
6. If you add multiple events to the rule, select how the events must occur to trigger the rule.
 - Select **in sequence** to trigger a rule when the events occur in the order in which the Senstar Symphony Server configuration interface lists the events.
 - Select **within a time period of** and specify the number of seconds to trigger an rule when all of the events occur in the specified time period.
7. To add action sets to the rule, perform the following tasks:
 - a) In the list, select the action set and click **Add**.
 - b) In the **Delay** field, set how much time must elapse after the rule occurs before the action triggers.
 - c) In the **Multiple Invocation behavior** list select **Append action sets** to trigger that actions for each occurrence of the rule or **Replace queued actions** to trigger the actions for only the most recent occurrence of the rule.

You can add multiple actions to each rule.

8. Add an existing schedule to the rule or create a new schedule to add to the rule.
9. In the **Severity** field, select the severity for the alarm.
 - 1 is considered high severity in the Senstar Symphony Client
 - 2 and 3 are considered medium severity in the Senstar Symphony Client
 - 4 and 5 are considered low severity in the Senstar Symphony Client

You can use alarm severity to sort alarms in the Senstar Symphony Client.

10. Click **Save**.

Edit a rule

You can edit a rule to change the events, action set, and schedule associated with the rule.

1. In the Senstar Symphony Server configuration interface, click **Rules > Rules**.
2. Select a rule.
3. Click **Edit**.
4. Modify the rule.
5. Click **Save**.

Delete a rule

You can remove a rule to prevent events from triggering on the Senstar Symphony Server.

When you delete a rule, the events, action set, and schedule associated with the rule are not deleted.

1. In the Senstar Symphony Server configuration interface, click **Rules > Rules**.
2. Select a rule.

3. Click **Delete**.
4. Click **Yes**.

Events

Events define the condition that must exist for a rule to trigger an alarm on the Senstar Symphony Server.

Create an event

You can create an event that triggers a rule on the Senstar Symphony Server.

When the Senstar Symphony Server receives input from a source, it can trigger a rule. Different sources can trigger rules in different ways. For additional information on devices, see the manufacturer's documentation.

1. In the Senstar Symphony Server configuration interface, click **Rules > Events**.
2. Click **New Event**.
3. Type a name for the event.
4. To add a source, perform the following tasks:
 - a) Click **Add Sources**.
 - b) Select the device, rule or schedule to trigger the rule.
 - c) Click **OK**.
5. Perform one of the following tasks:
 - If you add a camera, select the video engine and configure how it triggers a rule.
 - If you add a metadata device, select the input and configure how it triggers a rule.
 - If you add an access control device, select the readers and inputs, and configure how they trigger a rule.
 - If you add a rule, select the action that triggers a rule.
 - If you add a schedule, select when to trigger a rule.
6. Click **Save**.

Edit an event

You can edit an event to change what triggers a rule.

1. In the Senstar Symphony Server configuration interface, click **Rules > Events**.
2. Select an event.
3. Click **Edit**.
4. Modify the event.
5. Click **Save**.

Delete an event

You can delete an event to remove it from the Senstar Symphony Server.

1. In the Senstar Symphony Server configuration interface, click **Rules > Events**.
2. Select an event.
3. Click **Delete**.
4. Click **Yes**.

Automatic License Plate Recognition event settings

The event settings for the Automatic License Plate Recognition video analytic are visible when you select it as the video engine for an event.

Setting	Description
Alarm type	Select whether the event triggers the rule when Automatic License Plate Recognition video analytic detects a license plate, detects a license plate not on the list (white list), or detects a license plate on the list (black list).

Crowd Detection event settings

The event settings for Crowd Detection video analytic are visible when you select it as the video engine for an event.

Setting	Description
Alarm type	Select whether the event responds to capacity (number of people) or occupancy (area occupied by people).
Duration	Set the amount of time over which the Crowd Detection video analytic averages values. A higher duration reduces the number of alarms but increases the possibility of missed alarms. A lower duration increases the number of alarms but increases the possibility of false alarms.
Threshold	Use the slider bar to define the values that trigger the event. Values that fall outside of the threshold trigger the event. For the capacity alarm type, the slider represents the percentage of the maximum capacity that you configure for the Crowd Detection video analytic. For the occupancy alarm type, the slider represents the percentage of the scene (defined by the processing mask) occupied by people.

Face Recognition event settings

Select video engine from those running on camera

Face Recognition ▾

Match Threshold ▲ ▼

Max Spoof Score ▲ ▼

Alarm type

Alarm on all real faces

Alarm only on real faces not in the list(s)

Alarm only on real faces in the list(s)

Alarm only on spoofing attacks

Setting	Description
Match Threshold	Set how closely the detected face must match a face on the blocked list to trigger an alarm or a face on the allowed list to not trigger an alarm. This setting does not apply if you select Alarm on all faces.
Max Spoof Score	Set the score that a face must exceed for the Face Recognition video analytic to consider the face a spoof. The default value is 30.
Alarm on all real faces	Select to trigger an alarm when the Face Recognition video analytic detects a face.
Alarm only on real faces not in the list(s)	Select to trigger an alarm when the Face Recognition video analytic detects a face that is not on the lists that you select. The list options include the default lists (Allowed and Blocked) and any custom lists that you create.
Alarm only on real faces in the list(s)	Select to trigger an alarm when the Face Recognition video analytic detects a face that on the lists that you select. The list options include the default lists (Allowed and Blocked) and any custom lists that you create.
Alarm only on spoofing attacks	Select to trigger an alarm only when the Face Recognition video analytic detects a face with a spoof score greater than the max spoof score.

Left and Removed Item Detection event settings

The event settings for the Left and Removed Item Detection video analytic are visible when you select it as the video engine for an event.

Setting	Description
Processing mask	Draw a processing mask to determine what areas can trigger an event.
Alarm based on percentage of object inside alarm mask	Select if the event triggers rules based on the percentage of the object inside of the processing mask.
Alarm size	Define the maximum and minimum size of objects that can trigger the rule.
Alarm only if	Select to alarm only if there are multiple alarms in a specific time. You can define both the number of alarms and the time.
Or at least	Select to alarm if a number of pixels change in a specific time. You can define both the number of pixels and the time.

Motion Detection event settings

The event settings for Motion Detection are visible when you select it as the video engine for an event.

Setting	Description
Processing mask	Draw a processing mask to determine what areas can trigger an event.

Outdoor People and Vehicle Tracking event settings

The event settings for the Outdoor People and Vehicle Tracking video analytic are visible when you select it as the video engine for an event.

Setting	Description
Class	Select the class of object that triggers the rule.
Behavior	Select whether an object moving for a time or loitering for a time triggers the rule, and set the time.
Use Mask	Select what movement to use when triggering the rule. Select whether the beginning, end, or any part of the movement track triggers the alarm, and select whether any part of the object can trigger the rule.
Use Fences	Select whether to trigger rules when an object crosses any of the fences or when an object crosses all of the fences.

TCP Listener event settings

The event settings for the TCP Listener video analytic are visible when you select it as the video engine for an event.

Setting	Description
Alarm type	Select whether the events responds to any metadata or metadata that contains specific text.
Alarm on metadata that contains	Specify the text that triggers the event when you select to alarm on metadata that contains specific text.

Senstar Network Manager event settings

Events from Senstar Network Manager can trigger rules on the Senstar Symphony Server.

Setting	Description
Activated	Select to trigger a rule on the Senstar Symphony Server when an output connected to the Senstar Network Manager is activated.
Deactivated	Select to trigger a rule on the Senstar Symphony Server when an output connected to the Senstar Network Manager is deactivated.
Alarm	Select to trigger a rule on the Senstar Symphony Server when an input connected to the Senstar Network Manager enters an alarm state.

Setting	Description
Alarm Secure	Select to trigger a rule on the Senstar Symphony Server when an input connected to the Senstar Network Manager exits an alarm state.
Communication Fail	Select to trigger a rule on the Senstar Symphony Server when device connected to the Senstar Network Manager enters a communication failure state.
Communication Fail Secure	Select to trigger a rule on the Senstar Symphony Server when a device connected to the Senstar Network Manager exits a communication failure state.
Communication Fault	Select to trigger a rule on the Senstar Symphony Server when a device connected to the Senstar Network Manager enters a communication fault state.
Communication Fault Secure	Select to trigger a rule on the Senstar Symphony Server when a device connected to the Senstar Network Manager exits a communication fault state.
Diagnostic Warning	Select to trigger a rule on the Senstar Symphony Server when a device connected to the Senstar Network Manager enters a diagnostic warning state.
Diagnostic Warning Secure	Select to trigger a rule on the Senstar Symphony Server when a device connected to the Senstar Network Manager exits a diagnostic warning secure state.
Diagnostic Fatal	Select to trigger a rule on the Senstar Symphony Server when a device connected to the Senstar Network Manager enters a fatal diagnostic state.
Diagnostic Fatal Secure	Select to trigger a rule on the Senstar Symphony Server when a device connected to the Senstar Network Manager exits a fatal diagnostic state.
Enclosure Tamper	Select to trigger a rule on the Senstar Symphony Server when a device connected to the Senstar Network Manager enters an enclosure-tampered state.
Enclosure Tamper Secure	Select to trigger a rule on the Senstar Symphony Server when a device connected to the Senstar Network Manager exits an enclosure-tampered state.
Tamper	Select to trigger a rule on the Senstar Symphony Server when an input connected to the Senstar Network Manager enters a tampered state.
Tamper Secure	Select to trigger a rule on the Senstar Symphony Server when an input connected to the Senstar Network Manager exits a tampered state.
Trouble	Select to trigger a rule on the Senstar Symphony Server when an input connected to the Senstar Network Manager enters a trouble state.

Setting	Description
Trouble Secure	Select to trigger a rule on the Senstar Symphony Server when an input connected to the Senstar Network Manager exits a trouble state.

Related concepts

[Senstar Network Manager introduction](#) on page 27

The Senstar Network Manager connects Senstar security networks to the Senstar Symphony Server. The Senstar Symphony Server supports the Senstar Network Manager 2.32 and later.

Senstar Symphony Access Control event settings

Events from Senstar Symphony Access Control can trigger rules on the Senstar Symphony Server.

Some events are listed twice in the Senstar Symphony Server configuration interface to accommodate both proximity card readers and magnetic-strip card readers. Events with the >> label are the default for proximity card readers and down swipes for magnetic-strip card readers. Events with the << label apply to up swipes for magnetic-strip card readers.

Setting	Description
Door Forced Open	Select to trigger a rule on the Senstar Symphony Server when a door contact connected to the Senstar Symphony Access Control detects a door forced open.
Door Held Open	Select to trigger a rule on the Senstar Symphony Server when a door contact connected to the Senstar Symphony Access Control detects a door held open.
Door is Closed	Select to trigger a rule on the Senstar Symphony Server when a door contact connected to the Senstar Symphony Access Control detects that the door is closed.
Door is Opened	Select to trigger a rule on the Senstar Symphony Server when a door contact connected to the Senstar Symphony Access Control detects that the door is open.
Request To Exit	Select to trigger a rule on the Senstar Symphony Server when a door contact or request to exit device connected to the Senstar Symphony Access Control detects a request to exit.
Request To Exit (Door Used)	Select to trigger a rule on the Senstar Symphony Server when a request to exit device connected to the Senstar Symphony Access Control detects a request to exit with the door used.
Request to Exit (Door Not Used)	Select to trigger a rule on the Senstar Symphony Server when a request to exit device connected to the Senstar Symphony Access Control detects a request to exit with the door not used.
Door is Locked	Select to trigger a rule on the Senstar Symphony Server when a door strike device connected to the Senstar Symphony Access Control detects that the door is locked.
Door is Unlocked	Select to trigger a rule on the Senstar Symphony Server when a door strike device connected to the Senstar Symphony Access Control detects that the door is unlocked.

Setting	Description
Deadbolt Disengaged	Select to trigger a rule on the Senstar Symphony Server when a door strike device connected to the Senstar Symphony Access Control detects that the deadbolt lock is disengaged.
Deadbolt Engaged	Select to trigger a rule on the Senstar Symphony Server when a door strike device connected to the Senstar Symphony Access Control detects that the deadbolt lock is engaged.
Door Schedule is Disabled	Select to trigger a rule on the Senstar Symphony Server when a door strike device connected to the Senstar Symphony Access Control detects that the door schedule is disabled.
Door Schedule is Enabled	Select to trigger a rule on the Senstar Symphony Server when a door strike device connected to the Senstar Symphony Access Control detects that the door schedule is enabled.
Door is Momentarily Unlocked	Select to trigger a rule on the Senstar Symphony Server when a door strike device connected to the Senstar Symphony Access Control detects that the door is momentarily unlocked.
Double Locked	Select to trigger a rule on the Senstar Symphony Server when a door strike device connected to the Senstar Symphony Access Control detects that both the deadbolt and handle lock are engaged. This event applies to Assa Abloy wireless locks only.
Locked Down	Select to trigger a rule on the Senstar Symphony Server when a door strike device connected to the Senstar Symphony Access Control detects that a command to lock the door and set the reader mode to disabled is issued. This event applies to Assa Abloy wireless locks only.
Locked Open	Select to trigger a rule on the Senstar Symphony Server when a door strike device connected to the Senstar Symphony Access Control detects that a command to restore the door and reader to normal operation after a Locked Down event. This event applies to Assa Abloy wireless locks only.
Control Point Deactivated	Select to trigger a rule on the Senstar Symphony Server when a door sounder device connected to the Senstar Symphony Access Control detects that a control point is deactivated.
Control Point Activated	Select to trigger a rule on the Senstar Symphony Server when a door sounder device connected to the Senstar Symphony Access Control detects that a control point is activated.
Control Point Pulse	Select to trigger a rule on the Senstar Symphony Server when a control point device connected to the Senstar Symphony Access Control detects that the control point receives a command to momentarily activate a relay or output.

Setting	Description
Reader Mode: Disabled	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is disabled.
Reader Mode: Unlocked	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is unlocked.
Reader Mode: Locked (REX Only)	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is locked and can only be unlocked with a request to exit (REX).
Reader Mode: Facility Code Only	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control can only be unlocked when the facility code on a card matches the facility code in the system configuration.
Reader Mode: Card Only	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is set to accept cards only.
Reader Mode: PIN Only	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is set to accept PINs only.
Reader Mode: Card and PIN	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is set to accept cards with PINs only.
Reader Mode: Card or PIN	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is set to accept cards or PINs.
User Command Requested	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control detects that the terminal keypad requests a user code.
Reader Mode: Fingerprint Only	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is set to accept fingerprints only.
Reader Mode: Card and Fingerprint	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is set to accept cards with fingerprints only.
Reader Mode: Card or Fingerprint	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is set to accept cards or fingerprints.
Reader Mode: Office First	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is set to respond to the first person in situation.

Setting	Description
Reader Mode: Blocked	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control is disabled. This event applies to Assa Abloy wireless locks only.
Reader Mode: Emergency Lock	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control enters the emergency locked state.
Reader Mode: Emergency Unlock	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control exits the emergency locked state.
Access Granted	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control grants access.
Access Denied: Level	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access to a card because of an insufficient access level.
Access Denied: Time	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access to a card because of an insufficient access level during a specific time.
Access Denied: Locked	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access and locks the door.
Access Denied: Card	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access to a card.
Access Denied: Facility	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access to a card because of an incorrect facility code.
Access Denied: Passback	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because of a card passback.
Access Denied: Issue Code	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because of an incorrect issue code. An issue code comprises a facility code, re-issue code, and card number. Issue codes are used with Mercury controllers to track the number of times a card is re-issued.
Access Denied: Invalid	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because of a invalid card format.

Setting	Description
Card Information Event	<p>Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control detects a card information event.</p> <p>Card information events are special events that display information about a previous event. For example, if a card is denied for an incorrect facility code, the card information event displays the incorrect facility code.</p>
Access Granted: Unlocked	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control grants access and unlocks the door.
Access Granted: Door Not Used	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control grants access but the door was not used.
Access Granted: Door Used	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control grants access and the door was used.
Access Denied: Deactivated Card	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because of a deactivated card.
Access Denied: Before Activation Date	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because the card is not yet active.
Access Denied: After Expiration Date	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because the card is expired.
Access Denied: Invalid PIN	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because the PIN is invalid.
Access Denied: 2nd Card not Presented	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because the second card (required for two-person authentication) was not presented.
Access Denied: Occupancy Limit Reached	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control detects that the reader denied access because the occupancy limit has been reached.
Access Denied: Area not Enabled	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because the area is not enabled.

Setting	Description
Access Denied: Use Limit	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because the card has exceeded the number of times that the card can be used.
Access Denied: Duress Code Detected	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because duress code was used.
Access Denied: Duress (Door Used)	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because a duress code was used and the door was used.
Access Denied: Duress (Door Not Used)	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control detects that the reader denied access because a duress code was used and the door was not used.
Access Denied: Unauthorized Assets	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because the assets are not authorized for the card.
Access Denied: Biometric Verification Error	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because duress code was used and the door was not used.
Access Granted: Verification Confirmed	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control grants access because the verification was confirmed.
Access Denied: No Biometric Record	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because the user does not have a biometric record.
Access Denied: No Biometric Device	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control that does not have biometric functionality is put in biometric mode and a card is presented. This event applies to ZK devices only.
Intrusion Area: Armed	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control detects that the area is armed and is ready to alarm.
Intrusion Area: Disarmed	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control detects that the area is disarmed and is not ready to alarm.
Intrusion Request Attempt: Denied	This event is not applicable.

Setting	Description
Intrusion Disarm Attempt: Denied	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies a disarm attempt because of insufficient permission.
Access Granted: Office First Door Unlocked	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control grants access and is unlocked because the first person in situation occurs.
Access Granted: Office First Door Locked	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control grants access and is locked because the first person in situation occurs.
Access Denied: Punch Interval	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control denies access because the interval between two cards is too short. This event applies to ZK devices only.
Access Granted: Passback (Door Not Used)	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control grants access on a card passback and the door was not used.
Access Granted: Passback (Door Used)	Select to trigger a rule on the Senstar Symphony Server when a reader device connected to the Senstar Symphony Access Control grants access on a card passback and the door was used.

Related concepts


[Senstar Symphony Access Control introduction](#) on page 25

Senstar Symphony Access Control is a standalone application that integrates with the Senstar Symphony Server to manage hardware controllers used for access control, intrusion, and HVAC systems.

Senstar Sensor Fusion event settings

The following settings determine when the Senstar Sensor Fusion triggers events on the Senstar Symphony Server.

You can configure the Senstar Sensor Fusion to trigger events from the video analytic, the perimeter intrusion detection system, or both.

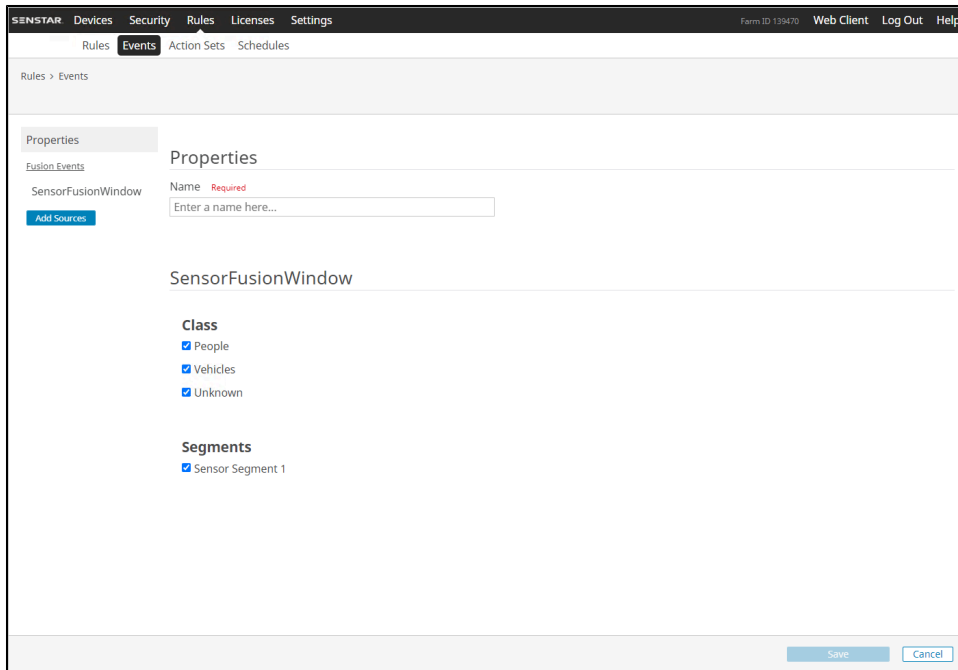

Setting	Description
People	Select if the Senstar Sensor Fusion should trigger events when it detects a person.
Vehicles	Select if the Senstar Sensor Fusion should trigger events when it detects a vehicle.
Unknown	Select if the Senstar Sensor Fusion should trigger events when it detects an unknown object.
Segments	Select the sensor segments for which the Senstar Sensor Fusion should trigger events.

Action sets

Action sets are combinations of actions that the Senstar Symphony Server takes when a rule generates an alarm.


Create an action set

You can create an action set to determine what actions the Senstar Symphony Server takes when rule is triggered.

1. In the Senstar Symphony Server configuration interface, click **Rules > Action Sets**.
2. Click **New Action Set**.
3. Type a name for the action set.
4. In the **Alarm** section, perform the following tasks:
 - a) In the device list, select the devices that you want to display in view panels in the Senstar Symphony Client interface.

The device list is grouped into device groups by default. If you want to view the devices in an alphabetic list, select **Hide Device Groups**.

- b) In the field beside the selected device, type a name for the panel in which you want to display the device.
If you do not type an panel name, the Senstar Symphony Client displays the device in the default view panel.
5. To select where the alarm appears, perform one of the following tasks:
 - To associate the alarm with a camera and display the alarm in a camera timeline, select the camera in the **Choose a Camera** list.
 - To associate the alarm with a map and display the alarm on the map, select the map in the **Choose a Map** list.
6. In the **Record** list, select the cameras that record footage when an alarm occurs.
7. To add other actions, perform the following tasks:
 - a) In the **Pick an item** list, select an action.

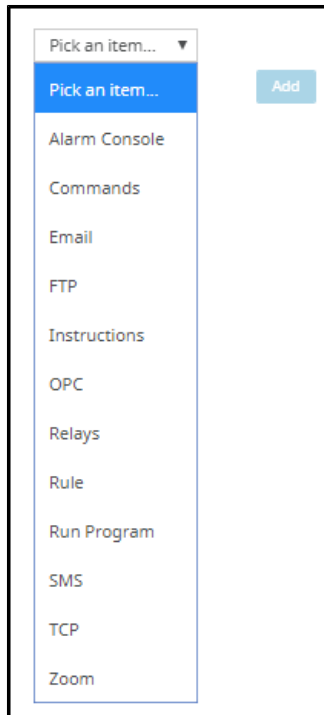

- b) Click **Add**.
 - c) Configure the settings for the action.
8. Click **Save**.

Edit an action set

You can edit an action set to change what actions the Senstar Symphony Server takes when a rule is triggered.

1. In the Senstar Symphony Server configuration interface, click **Rules > Action Sets**.
2. Select an action set.
3. Click **Edit**.
4. Modify the action set.
5. Click **Save**.

Delete an action set

You can delete an action set to remove it from the Senstar Symphony Server.

If the action set is associated with a rule, you will see an additional warning message and a request for confirmation when deleting an action set. If you choose to remove the action set in this case, the rule will not function as expected.

1. In the Senstar Symphony Server configuration interface, click **Rules > Action Sets**.
2. Select an action set.
3. Click **Delete**.
4. Click **Yes**.

Schedules

Schedules determine when rules are active in the Senstar Symphony Server.

You can create a schedule as part of the rule creation process or independently in the Senstar Symphony Server configuration interface. Schedules use half hour blocks and support daily exceptions that can recur every year.

Create a schedule

You can create a schedule to determine when a rule is active.

1. In the Senstar Symphony Server configuration interface, click **Rules > Schedules**.
2. Click **Add Schedule**.
3. Type a name for the schedule.
4. Define the active and inactive times for the schedule.
5. If required, add exceptions to the schedule.
 - a) Select a date.
 - b) Select whether to repeat the exception every year on that date.
 - c) Click **Add Exception**.
 - d) Define the active and inactive times for the exception.
6. Click **Save**.

Edit a schedule

You can edit a schedule to change when a rule is active.

1. In the Senstar Symphony Server configuration interface, click **Rules > Schedules**.
2. Select a schedule.
3. Click **Edit**.
4. Modify the schedule.
5. Click **Save**.

Clone a schedule

You can clone a schedule to use it as a template for a new schedule.

1. In the Senstar Symphony Server configuration interface, click **Rules > Schedules**.
2. Select a schedule.
3. Click **Clone**.
4. Modify the schedule.
5. Click **Save**.

Delete a schedule

You can delete a schedule to remove it from the Senstar Symphony Server.

You cannot delete a schedule if it is associated with a rule.

1. In the Senstar Symphony Server configuration interface, click **Rules > Schedules**.
2. Select a schedule.
3. Click **Delete**.
4. Click **Yes**.

Licenses

License settings for the Senstar Symphony Server allow you to view and refresh licenses.

You access the license settings on the Licenses tab in the Senstar Symphony Server configuration interface.

The Properties section displays the characteristics of your Senstar Symphony Server license. The section displays the date at which the license expires and the software version to which the license applies.

The Licenses in Farm section displays the video analytic licenses, the camera licenses, and the MAC addresses of servers that are permitted in the server farm.

The Unlicensed Devices section displays the cameras on the network that do not have an associated license.

Refresh licenses

You can refresh your licenses to check for newer versions from the Senstar Xnet or to manually apply updates.

1. In the Senstar Symphony Server configuration interface, click **Licenses**.
2. Click **Refresh Licenses**.
3. Perform one of the following tasks:
 - a) To refresh the licenses from the Senstar Xnet, select .
 - b) To refresh the license from a file, select **Refresh license from file**, browse to the license file or drag the license file into the window.
4. Click **OK**.

Show license XML

You can view the XML for your license.

1. In the Senstar Symphony Server configuration interface, click **Licenses**.
2. Click **Show Raw License**.

Settings

The settings for the Senstar Symphony Server allow you to configure servers, general settings, email notifications, health monitoring, Senstar Enterprise Manager integration, updates, and backup and restore.

You access the settings on the Settings tab in the Senstar Symphony Server configuration interface. The Settings tab includes the Servers, General Settings, Notifications, Cloud Services, Maintenance, and Backup & Restore tabs.

Servers

The Servers tab in the Senstar Symphony Server configuration interface is the interface for configuring settings specific to individual Senstar Symphony Server instances in the server farm.

The Servers tab allows you to edit server settings, configure video storage, and set up server redundancy.

Server	Group	Failover	Status	Network	Devices	Versions
<input type="checkbox"/> IP-1 (0000)	1	Enabled	Valid	IP, MAC	32 Cameras 1 I/O Device	V, SP
<input checked="" type="checkbox"/> IP-3 (0001)	1	Enabled	Valid	IP, MAC	Redundant	V, SP
<input type="checkbox"/> IP-4 (0002)	2	Disabled	Valid	IP, MAC	150 Cameras 1 I/O Device	V, SP
<input type="checkbox"/> IP-5 (0003)	2	Disabled	Valid	IP, MAC	150 Cameras	V, SP
<input type="checkbox"/> IP-6 (0004)	2	Disabled	Valid	IP, MAC	180 Cameras	V, SP
<input type="checkbox"/> IP-7 (0005)	3	Disabled	Valid	IP, MAC	220 Cameras	V, SP
<input checked="" type="checkbox"/> IP-8 (0006)	3	Disabled	Valid	IP, MAC	150 Cameras	V, SP
<input type="checkbox"/> IP-9 (0007)	3	Disabled	Valid	IP, MAC	150 Cameras	V, SP
<input type="checkbox"/> IP-10 (0008)	4	Disabled	Valid	IP, MAC	248 Cameras	V, SP
<input type="checkbox"/> IP-11 (0009)	4	Disabled	Valid	IP, MAC	248 Cameras	V, SP
<input type="checkbox"/> IP-2 (0014)	2	Disabled	Valid	IP, MAC	150 Cameras	V, SP
<input type="checkbox"/> QK-NUMA (0015)	5	Disabled	Valid	IP, MAC	450 Cameras	V, SP
<input type="checkbox"/> IP-12 (0016)	6	Disabled	Valid	IP, MAC	248 Cameras	V, SP
<input type="checkbox"/> IP-13 (0017)	6	Disabled	Valid	IP, MAC	150 Cameras	V, SP
<input type="checkbox"/> IP-14 (0018)	6	Disabled	Valid	IP, MAC	150 Cameras	V, SP

Configure video storage for a server

You can configure how the Senstar Symphony Server stores and maintains video footage. These settings apply to the Senstar Symphony Server that you select.

You can configure where the Senstar Symphony Server stores video footage, how much video footage the Senstar Symphony Server stores, and under which conditions the Senstar Symphony Server erases video footage. In addition, you can specify backup locations for video footage.

1. In the Senstar Symphony Server configuration interface, click **Settings > Servers**.
2. Select a server and click **Edit**.
3. To specify a storage path, complete the following tasks in the **Video Storage** section:
 - a) Specify the path to which the Senstar Symphony Server should save footage files.
 - b) To add another storage path, click **Add Another Path** and specify the path.
 - c) To save footage files to only one storage path, select **Failover**.
The Senstar Symphony Server attempts to save footage files to the first path in the list. If that path is not available, the Senstar Symphony Server attempts to save footage files to the next path in the list.
 - d) To save footage files to all storage paths, select **Redundant**.
 - e) Select the path from which the Senstar Symphony Server should read footage files in the **Force disk reads from**.
4. To specify a secondary (archive) storage path, complete the following tasks:
 - a) Select **Archive video to secondary storage path**.
 - b) Type the path to which the Senstar Symphony Server should save footage files.
You must type a secondary (archive) storage path for each of the primary storage paths.
 - c) In the **Days to store before archiving** field, set how many days must occur before the Senstar Symphony Server saves the footage files to the secondary (archive) storage path.
This value must be less than the **Limit the number of days video is stored** value.
5. To set a limit based on the amount of disk space left, set the disk space in the **MB** field or the percentage of disk space in the **%** field.

6. To set the maximum number of days for which the Senstar Symphony Server can retain footage files, select **Limit the number of days video is stored** and set the number of days.
7. To retain metadata after the Senstar Symphony Server deletes footage files, select **Keep metadata longer** and set the number of days.
8. To copy footage files generated during a failover back to the restored primary server from the redundant server, select **SAN Failover mode: Copy files to owner server**.
Both the primary Senstar Symphony Server and redundant Senstar Symphony Server must have read and write permission for the storage paths on each Senstar Symphony Server.
9. In the **Cameras** list, define any storage paths specific to cameras.
By default, the Senstar Symphony Server saves footage files from all cameras to the storage paths.
10. Click **Save**.


SAN failover mode

SAN failover mode works in conjunction with server redundancy to move local footage files from the redundant Senstar Symphony Server back to the primary Senstar Symphony Server when the primary Senstar Symphony Server recovers from the outage.

When the primary Senstar Symphony Server recovers from the outage, it attempts to copy footage files from the redundant Senstar Symphony Server and collate those footage files with the existing footage files in local storage.

To use SAN failover mode, complete the following workflow:

1. In the Senstar Symphony Server configuration interface, create a redundancy group and add each Senstar Symphony Server to the redundancy group.
2. On every computer that hosts a Senstar Symphony Server in the redundancy group, make sure that the data folder has the same drive letter assignment as all of the other computers.
3. On every computer that hosts a Senstar Symphony Server in the redundancy group, create a share for the data folder and name the share **DATA_X**, where **X** is the drive letter assignment. For example, name the share **DATA_G** if the share is on the **G** drive.
4. Grant the user accounts that run the Senstar Symphony services on every other Senstar Symphony Server in the redundancy group read and write permission for the data folder share.
5. In the Senstar Symphony Server configuration interface, select the SAN failover mode box for every Senstar Symphony Server in the redundancy group.

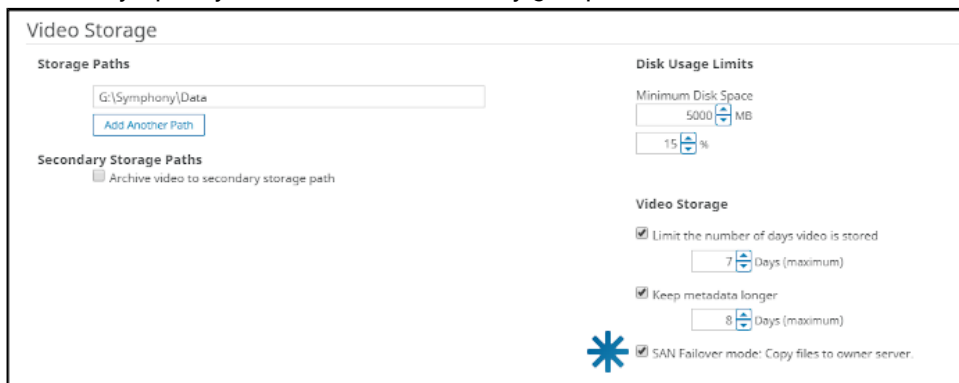

You do not typically need to use SAN failover if you use a common network location for storage of the data folders of every Senstar Symphony Server in the redundancy group.

Configure overload protection

You can configure a Senstar Symphony Server to automatically move cameras to another Senstar Symphony Server when the CPU load grows too great.

1. In the Senstar Symphony Server configuration interface, click **Settings > Servers**.

2. Select a server and click **Overload Protection**.
3. Select whether to move cameras to a different server when the CPU load is too high.
4. Select whether to use redundant servers.
If you use redundant servers to accept cameras in the case of overload, you cannot use the server redundancy feature.
5. Set the CPU threshold (in percent) above which the Senstar Symphony Server considers itself to be overloaded.
6. Set the polling frequency (in seconds) to determine how often the Senstar Symphony Server monitors the CPU load.
7. Set the maximum number of cameras to move to the new server.
8. Click **Save**.

Manage services

You can configure how the Senstar Symphony Server manages the Senstar Symphony services.

Managing services allows you to make bulk changes to Senstar Symphony services. You can start and stop multiple Senstar Symphony services at one time, set the Senstar Symphony services to start automatically, and change the user account that the Senstar Symphony Server uses to run the Senstar Symphony Server.

1. In the Senstar Symphony Server configuration interface, click **Settings > Servers**.
2. Select a server and click **Edit**.
3. In the **Services** section, perform the following tasks:
 - a) To change the state of a Senstar Symphony service, select the service and click **Toggle Selected**. Performing this task stops a running service or starts a stopped service.
 - b) To refresh the service list, click the **Refresh** button.
 - c) To automatically start the Senstar Symphony services when the computer that hosts the Senstar Symphony Server starts, select **Automatically start Symphony services on system startup**.
 - d) To set the user account that runs the Senstar Symphony services, either select **Log on as Local System account** to use the local system account or select **This account** and type the account credentials to use another account.
The local system account is the default account that the Senstar Symphony Server uses to run Senstar Symphony services, but you change the account to access data in a shared network location.
4. Click **Save**.

Server redundancy

The Senstar Symphony Server supports server redundancy in server farms. If the primary Senstar Symphony Server stops responding, the camera and device processing moves to a redundant Senstar Symphony Server.

To use server redundancy you must have at least one primary Senstar Symphony Server and one redundant Senstar Symphony Server in a redundancy group. The primary Senstar Symphony Server actively performs camera and device processing. The redundant Senstar Symphony Server is active, but it does not have any cameras or devices associated with it. There must be at least one redundant server available in the server farm at all times.

When failover occurs, the redundant Senstar Symphony Server takes over the camera and device processing from the primary Senstar Symphony Server while it is unavailable. When the primary Senstar Symphony Server recovers from the outage, one of the following things happens:

- You can move the camera and device processing back to the primary Senstar Symphony Server automatically by enabling failback in the Senstar Symphony Server configuration interface.
- You can move the camera and device processing back to the primary Senstar Symphony Server manually by swapping servers in the Senstar Symphony Server configuration interface.

- You can use the primary Senstar Symphony Server as a redundant Senstar Symphony Server.

In a redundancy group, one Senstar Symphony Server is the master server. The master server performs the additional task of managing failover and failback operations. If the master server is unavailable, another Senstar Symphony Server in the redundancy group becomes the master server. You can manually select the master server by selecting the star icon beside the Senstar Symphony Server on the Servers page in the Senstar Symphony Server configuration interface.

Add a server to a redundancy group

You can add a server to a redundancy group or create a new redundancy group.

1. In the Senstar Symphony Server configuration interface, click **Settings > Servers**.
2. Select a server and click **Edit**.
3. In the **Server Group** list, perform one of the following tasks:
 - To add the server to an existing redundancy group, select the group.
 - To add the server to a new redundancy group, select **<New>**.
4. Click **Save**.

Configure failover

You can configure the Senstar Symphony Server to move cameras to a secondary Senstar Symphony Server if the primary Senstar Symphony Server goes offline.

Before you begin, you must configure video storage for the Senstar Symphony Server.

1. In the Senstar Symphony Server configuration interface, click **Settings > Servers**.
2. Select a server and click **Edit**.
3. In the **Server Group** list, select a server group that includes a server that does not have any cameras.
4. Click **Enable Failover**.

Configure failback

You can configure the Senstar Symphony Server to move cameras back to the primary Senstar Symphony Server after a failover when the primary Senstar Symphony Server comes back online.

Before you begin, you must configure failover for the Senstar Symphony Server.

If you do not configure failback, you must manually move the cameras back to the primary Senstar Symphony Server.

1. In the Senstar Symphony Server configuration interface, click **Settings > Servers**.
2. Select a server and click **Edit**.
3. Click **Enable Failback**.

Move cameras

You can move all of the cameras from one Senstar Symphony Server to a different Senstar Symphony Server in your server farm.

You can only move all of the cameras from one Senstar Symphony Server to another Senstar Symphony Server if the destination server does not have any cameras associated with it.

1. In the Senstar Symphony Server configuration interface, click **Settings > Servers**.
2. In the server list, select the server from which to move cameras.
3. In the server list, select the server to which to move the cameras.
4. Click **Swap Servers**.

Add an alternate server address

You can add multiple IP addresses for the Senstar Symphony Server to facilitate communication with the Senstar Symphony Server when it is part of a multi-server farm.

1. In the Senstar Symphony Server configuration interface, click **Settings > Servers**.
2. Select a server and click **Edit**.
3. Click the plus beside **Alternate Server Addresses**.
4. In the **Alternate Server Addresses** field, type the alternate address for the Senstar Symphony Server.
5. Select the port.
6. Click **Save**.

Add an SSL certificate

You can add an SSL certificate to the Senstar Symphony Server in the Senstar Symphony Server configuration interface. This topic only applies to Senstar Symphony Server 8.6.0. In the Senstar Symphony Server 8.6.1, the SSL certificate settings moved to the setup wizard. See the Senstar Symphony Installation Guide for more information.

The Senstar Symphony Server uses the SSL certificate to secure connections from browsers and the Senstar Symphony Mobile Application. The Senstar Symphony Server supports PFX certificate files.

1. In the Senstar Symphony Server configuration interface, click **Settings > Servers**.
2. Select the Senstar Symphony Server and click **Edit**.
3. Navigate to the **SSL Certificate** section.
4. In the **Password** field, type the password for the certificate.
5. Drag the certificate file into the field or browse for the certificate file.
6. Click **Save**.

Configure mobile connections

You can configure the Senstar Symphony Server to support connections with the Senstar Symphony Mobile Application on mobile devices. This topic applies to Senstar Symphony Server 8.6.0.

You configure the SSL certificate that the Senstar Symphony Server uses for mobile connections in the Senstar Symphony setup wizard.

1. In the Senstar Symphony Server configuration interface, click **Settings > Servers**.
2. Select the Senstar Symphony Server and click **Edit**.
3. Navigate to the **Mobile Connections** section.
4. To select the SSL certificate, click **Change**, select the certificate, and click **OK**.
5. To select the network adapter for mobile connections, click **Change**, select the network adapter, and click **OK**.
6. In the **Mobile Port** field, set the port that the Senstar Symphony Server uses to listen for requests from mobile devices.
7. In the **Video Proxy Port** field, set the port that the Senstar Symphony Server uses to stream video to and receive video from mobile devices.
8. Click **Save**.

General

The General Settings tab in the Senstar Symphony Server configuration interface is the interface for configuring settings that apply to all of the Senstar Symphony Server instances in the server farm.

Configure video storage for a server farm

You can set a global storage setting for a Senstar Symphony Server farm.

The global setting takes effect when you do not configure video storage settings for individual Senstar Symphony Server instances.

1. In the Senstar Symphony Server configuration interface, click **Settings > General Settings**.
2. In the **Storage** section, select **Limit the number of days video is stored**.
3. Set the maximum number of days to save video.
4. To keep video metadata after the video is deleted, select **Keep metadata longer**.
5. Set the maximum number of days to save video metadata.
6. To include all data when considering the size of the log storage, select **Include all data**.
7. To set the maximum size for log storage, set the limit in the **Maximum log storage in MB** field.
8. Click **Save**.

Configure SNMP

You can configure the Senstar Symphony Server to send SNMP data to a SNMP client.

1. In the Senstar Symphony Server configuration interface, click **Settings > General Settings**.
2. Select **Enable SNMP**.
3. In the **Data polling rate**, set how often (in seconds) SNMP sub-agents poll for data.
4. In the **Footage size polling** set how often (in seconds) the Senstar Symphony Server updates the size of the footage.
5. Click **Save**.
6. Restart the Senstar Symphony services.
7. Configure the Windows SNMP Agent Service on the computer that hosts the Senstar Symphony Server.

SNMP object identifiers

Server information

Object	Description	Trap
serverId	This object is the unique identifier of the Senstar Symphony Server.	No
serverName	This object is the name of the Senstar Symphony Server.	No

Version information

Object	Description	Trap
serverVersion	This object is the assembly version of the Senstar Symphony Server software.	No
webserviceVersion	This object is the version of the Senstar Symphony Server Web service protocol.	No

Object	Description	Trap
cameraMessageVersion	This object is the version of the Senstar Symphony Server camera message protocol.	No
streamingVersion	This object is the version of the Senstar Symphony Server streaming protocol.	No

Client bandwidth

Object	Description	Trap
connectedClientNumber	This object is the number of Senstar Symphony Client instances that are connected to the Senstar Symphony Server.	No
connectedClientIndex	This object is the unique identifier of the Senstar Symphony Client.	No
connectedClientIpAddress	This object is the IP address of the Senstar Symphony Client.	No
connectedClientUsername	This object is the username that the Senstar Symphony Client uses to connect to the Senstar Symphony Server.	No
connectedClientDuration	This object is how long the Senstar Symphony Client has been connected to the Senstar Symphony Server.	No
connectedClientDataReceived	This object is how much data (in kilobytes) the Senstar Symphony Client has received from the Senstar Symphony Server.	No
connectedClientCurrentBandwidth	This object is the amount of data (in kilobytes per second) transmitted between the Senstar Symphony Client and the Senstar Symphony Server.	No

Camera information

Object	Description	Trap
cameraNumber	This object is the number of cameras that are connected to the Senstar Symphony Server.	No
cameraId	This object is the unique identifier for the camera.	No
cameraName	This object is the name of the camera.	No
footagePath	This object is the storage path for footage from the camera.	No

Object	Description	Trap
footageSize	This object is the size (in bytes) of the footage at the storage path.	No

Storage information

Object	Description	Trap
storagePoolNumber	This object is the number of storage pools that are connected to the Senstar Symphony Server.	No
storagePath	This object is the path of the storage pool.	No
storageCapacity	This object is the total capacity (in megabytes) of the storage pool.	No
storagePercentAvailable	This object is the available capacity (in megabytes) of the storage pool.	No
storageFootageSize	This object is the size (in megabytes) of the footage in the storage pool.	No
storageFootageFiles	This object is the number of footage files in the storage pool.	No

Service information

Object	Description	Trap
infoServiceStatus	This object is the status of the AI InfoService service.	No
netSendHistStatus	This object is the status of the AI NetSendHist service.	No
schedulerStatus	This object is the status of the AI Scheduler service.	No
trackNumber	This object is the number of active AI Tracker services.	No
trackerId	This object is the unique identifier for the AI Tracker service.	No
trackerStatus	This object is the status of the AI Tracker service.	No

Login monitor information

Object	Description	Trap
authorizedLoginNotif	This object is the notification sent when a login is successful.	Yes

Object	Description	Trap
unauthorizedLoginNotif	This object is the notification sent when a login is unsuccessful.	Yes
loginNotifyIpAddress	This object is the IP address of the Senstar Symphony Client.	No
loginNotifyUsername	This object is the username that the Senstar Symphony Client used to connect to the Senstar Symphony Server.	No
loginNotificationMessage	This object is the additional details about the login.	No

Alarm monitor information

Object	Description	Trap
alarmNotif	This object is the notification sent when an alarm occurs.	Yes
alarmNotifyCameraId	This object is the identifier of the camera that recorded the alarm.	No
alarmNotifyCameraName	This object is the name of the camera that recorded the alarm.	No
alarmNotifyUserId	This object is the identifier of the user who marked the alarm.	No
alarmNotifyUserName	This object is the name of the user who marked the alarm.	No
alarmNotifyMarkedDelay	This object is the time at which the alarm was marked.	No
alarmNotifyFalseAlarm	This object is whether the alarm is a false alarm.	No
alarmNotifyRuleId	This object is the identifier of the rule causing the alarm.	No
alarmNotifyRuleName	This object is the name of the rule causing the alarm.	No
alarmNotifyDBId	This object is the identifier of the alarm.	No
alarmNotifyComment	This object is the comment associated with that alarm.	No
alarmNotifyMSSinceChange	This object is the milliseconds between when the alarm occurred and when it was detected.	No

Device Movement monitor information

Object	Description	Trap
devicesMovedNotif	This object is the notification sent when a device moves from one server to another server.	Yes
sourceServerId	This object is the identifier of the server from which the device moved.	No
destinationServerId	This object is the identifier of the server to which the device moved.	No
numberDevicesMoved	This object is the number of devices that moved from the source server to the destination server.	No

Health monitor information

Object	Description	Trap
healthMonitorFaultNotification	This object is the notification sent when the health monitor detects a fault.	Yes
healthMonitorActionNotification	This object is the notification sent when the health monitor takes an action in response to a fault.	Yes
healthMonitorName	This object is the name of the associated health monitor.	No
healthMonitorAction	This object is the action that the health monitor took in response to a fault.	No

Configure mobile connections

You can configure the Senstar Symphony Server to support connections with the Senstar Symphony Mobile Application on mobile devices. This topics applies to Senstar Symphony Server 8.5.x and earlier.

1. In the Senstar Symphony Server configuration interface, click **Settings > General Settings**.
2. Navigate to the **Mobile Connections** section.
3. To select the SSL certificate, click **Change**, select the certificate, and click **OK**.
4. In the **Mobile Port** field, set the port that the Senstar Symphony Server uses to listen for requests from mobile devices.
5. In the **Video Proxy Port** field, set the port that the Senstar Symphony Server uses to stream video to and receive video from mobile devices.
6. To allow the Senstar Symphony Server to send push notifications to iOS devices, select **Enable iOS Notifications**.
7. Click **Save**.

Add an SSL certificate

You can add an SSL certificate to the Senstar Symphony Server in the Senstar Symphony Server configuration interface. This topics applies to Senstar Symphony Server 8.5 and earlier.

The Senstar Symphony Server uses the SSL certificate to secure connections from browsers and the Senstar Symphony Mobile Application.

1. In the Senstar Symphony Server configuration interface, click **Settings > General Settings**.
2. Navigate to the **SSL Certificate** section.
3. In the **Password** field, type the password for the certificate.
4. Drag the certificate file into the field or browse for the certificate file.
5. Click **Save**.

General settings

Video

Setting	Description
Time based video playback restriction applied at	This setting determines how long (in minutes) after video is recorded that a user can view the video in the Senstar Symphony Client. After the time elapses, the Senstar Symphony Server marks the video as restricted and a user requires the View Restricted Historical Video permission to view the restricted historical video.

Storage

Setting	Description
Limit the number of days video is stored	This setting determines whether the Senstar Symphony Server deletes video older than the set number of days.
Keep metadata longer	This setting determines whether the Senstar Symphony Server retains metadata from video for the set number of days after it deletes the video.
Include all data	This setting determines whether the Senstar Symphony Server retains all data (e.g. search results, images, etc.) for the set number of days.
Maximum log storage in MB	This setting determines the maximum size of log files.

Video decorations

Setting	Description
Frame rate stats	This setting determines whether the frame rate (in frames per second) appears in video.
Frame rate variance	This setting determines whether the frame rate variance decoration appears in the video. The frame rate variance decorations show how much the frame rate changes over the last 50 frames.
Overlay camera name on video	This setting determines whether the camera name appears in video.
Overlay camera ID on video	This setting determines whether the camera ID appears in video.
Overlay logo on video	This setting determines whether a custom logo appears in video.
Decoration Text Color	This setting determines the color of the text for decorations.

Setting	Description
Background sensitive	This setting determines whether the text color for decorations automatically adjusts to the colors in the video to provide more contrast.
Decoration Text Background	This setting determines the color of the background for decoration text.
Transparency	This setting determines the transparency of the background for decoration text.

Alarms

Setting	Description
No Aggregation	Select to turn off alarm aggregation.
Aggregate	Select to aggregate alarms.
Aggregate and Re-Alarm	Select to aggregate alarms but to process each subsequent alarm as a new alarm.
Aggregation Maximum Alarms	Select to set the maximum number of alarms that can be included in an alarm aggregate.
Aggregate Timeout	Select to set how much time can elapse between alarms before new alarms are added to a new alarm aggregate.
Acknowledgement Timeout	Select to set how much time can elapse without marking an acknowledged alarm before it returns to an unacknowledged state.

Audit

Setting	Description
Enable Audit	This setting determines whether the Senstar Symphony Server logs events.
Never archive audit	This setting prevents the Senstar Symphony Server from archiving audits.
Archive audit weekly	This setting causes the Senstar Symphony Server to archive audits every week.
Audit archive retention	This setting determines how long (in days) the Senstar Symphony Server retains archived audits.

SNMP

Setting	Description
Enable SNMP	The setting determines whether SNMP is enabled.

Setting	Description
Data polling rate	This setting determines how often (in seconds) the SNMP agent polls the Senstar Symphony Server for data.
Footage size polling rate	This setting determines how often (in seconds) the SNMP agent polls the Senstar Symphony Server for the size of video footage.

Web Client

Setting	Description
Randomly redirect master server logins to other available servers in the farm	This setting determines if the master Senstar Symphony Server redirects users to other servers in the server farm. This provides load balancing for the Senstar Symphony Web Client.
Refresh rate	This setting determines how often the Senstar Symphony Web Client updates information from the Senstar Symphony Server.
Use an ICE Server	This setting determines if you are using an ICE server with the Senstar Symphony Web Client.
Type	This setting determines what type of an ICE Server you are using, STUN or TURN.
URL	This setting is the URL of the ICE Server.
Username	This setting is the user name for the ICE Server.
Password	This setting is the password for the ICE Server.

SMTP

Setting	Description
SMTP server	This setting is the URL of the SMTP server.
Use Secure Sockets Layer	This setting determines whether the Senstar Symphony Server uses SSL for communication with the SMTP server.
Sender email account	This setting defines the email account that the Senstar Symphony Server uses to send email.
SMTP server requires authentication	This setting determines whether the SMTP requires authentication.
Username	This setting is the user name that the Senstar Symphony Server uses to authenticate with the SMTP server.
Password	This setting is the password that the Senstar Symphony Server uses to authenticate with the SMTP server.

Setting	Description
Send a test email to address	This setting allows you to test the SMTP settings. Type an email address and click Send Test to send a test email.

User Connections

Setting	Description
Do not allow more than one concurrent connection per user	This setting determines if users can log in to more than one Senstar Symphony Server configuration interface concurrently per server farm.
Automatically log out inactive Server Configuration users	This setting determines if the Senstar Symphony Server automatically logs users out of the Senstar Symphony Server configuration interface after a period of inactivity.
Minutes of Inactivity	This setting determines the timeout period for the Senstar Symphony Server configuration interface.

Farm Location

Setting	Description
GPS Latitude	This is the latitudinal coordinate of the Senstar Symphony Server farm.
GPS Longitude	This is the longitudinal coordinate of the Senstar Symphony Server farm.

Mobile Connections

Setting	Description
SSL Certificate	This setting displays the SSL certificate that the Senstar Symphony Server uses to communicate with mobile devices.
Mobile Port	This setting determines the port that the Senstar Symphony Server uses to communicate with mobile devices.
Video Proxy Port	This setting determines the port that the Senstar Symphony Server uses for sending video to and retrieving video from mobile devices.
Enable iOS Notifications	This setting determines whether push notifications are enabled for iOS devices.

SSL Certificate

Setting	Description
Password	Type the password for the SSL certificate.

Setting	Description
File window	Browse to the certificate file or drag the certificate file into this field to add the certificate to the Senstar Symphony Server.

Features

Features
<ul style="list-style-type: none"> <input checked="" type="checkbox"/> Enable Two Stage Alarm processing <ul style="list-style-type: none"> <input checked="" type="checkbox"/> Enable Two Stage Enhanced Alarm processing <input checked="" type="checkbox"/> Optional Alarm Comments (Alarms can be reset without comments) <input checked="" type="checkbox"/> Reason text field is optional for masking hardware nodes <input checked="" type="checkbox"/> Require Integration State Change (Alarms cannot be reset until integration state changes)

Setting	Description
Enable Two Stage Alarm Processing	Select this option to enable two-stage alarms in the Senstar Symphony Client. Two-stage alarm processing allows a user to acknowledge an alarm to claim the alarm before processing the alarm.
Enable Two Stage Enhanced Alarm processing	Select this option to enable two-stage enhanced alarms in the Senstar Symphony Client. Two-stage enhanced alarm processing allows a user with higher priority to acknowledge an alarm and claim it from a user with lower priority. This option is available when you enable two-stage alarm processing.
Optional Alarm Comments	Select this option to be able to reset an alarm without adding a comment to the alarm. This option is available when you enable two-stage enhanced alarm processing.
Reason text field is optional for masking hardware nodes	This option is available when you enable two-stage enhanced alarm processing.
Require Integration State Change	Select this option to require that the hardware node state changes before you can reset the alarm. This option requires that you resolve the issue with the hardware node before you are able to reset the alarm. This option is available when you enable two-stage enhanced alarm processing.

Notifications

The Notifications tab in the Senstar Symphony Server configuration interface is the interface for configuring event notifications from the server farm.

Configure notifications

You can configure the Senstar Symphony Server to send notifications when users perform specific action in the Senstar Symphony Server configuration interface and the Senstar Symphony Client.

Before you begin:

- Configure SMTP for the Senstar Symphony Server

These notifications are different from the notifications that events trigger.

1. In the Senstar Symphony Server configuration interface, click **Settings > Notifications**.
2. For each event for which you want the Senstar Symphony Server to send a notification, type an email address.
To add multiple email addresses, separate each email address with a semi-colon (;).
3. Click **Save**.

Cloud services

The Cloud Services tab in the Senstar Symphony Server configuration interface is the interface for configuring cloud services that provide additional functionality for the server farm.

Turn on health monitoring

If you purchased the Maintenance and Support option with the Senstar Symphony Server license, you can turn on health monitoring.


Health monitoring sends telemetry data from the Senstar Symphony Server to the Senstar Xnet. You can log in to the Senstar Xnet and view the status of all Senstar Symphony services.

1. In the Senstar Symphony Server configuration interface, click **Settings > Cloud Services**.
2. Move the **Health Monitoring** toggle switch to **On**.

To turn off health monitoring, move the **Health Monitoring** toggle switch to **Off**.

Manage the Senstar Symphony Server with the Senstar Enterprise Manager

You can manage the Senstar Symphony Server or Senstar Symphony Server farm using the Senstar Enterprise Manager.

 **Warning:** If you have created users or groups for the Senstar Symphony Server, those users and groups are replaced with the users from the Senstar Enterprise Manager when you add the Senstar Symphony Server to the Senstar Enterprise Manager. This includes administrator users. We recommend that you back up your configuration settings or database before you manage your server or server farm with the Senstar Enterprise Manager.

1. In the Senstar Symphony Server configuration interface, click **Settings > Cloud Services**.
2. Move the **Enterprise Manager** toggle switch to **On**.
3. In the **Address** field, type the IP address of the Senstar Enterprise Manager.
4. In the **Site Name** field, type a name for the site.
The Senstar Enterprise Manager uses this site name to identify the server or server farm.
5. In the **Organization Name** field, type the Senstar Enterprise Manager organization name.
6. In the **Passphrase** field, type the Senstar Enterprise Manager password.
7. Click **Save**.

Connect to the Senstar Cloud

You can connect the Senstar Symphony Server to the Senstar Cloud to facilitate authentication and communication between the Senstar Symphony Server and mobile devices.

Before you begin, configure the Senstar Cloud and obtain the API key.

1. In the Senstar Symphony Server configuration interface, click **Settings > Cloud Services**.
2. Click the **Enable Cloud Proxy heartbeat** switch to turn the heartbeat on.

3. In the **Cloud Proxy API key** field, type the API key from the Senstar Cloud.
4. Click **Save**.


After you connect the Senstar Symphony Server to the Senstar Cloud, you can log in to the Senstar Cloud to confirm that the connection is active.

Aggregates

An aggregate is a collection of cameras that can combine the people count from all of the cameras and present that information on an HTML page.

You can use aggregates to provide comprehensive occupancy counts and instructions to customers.




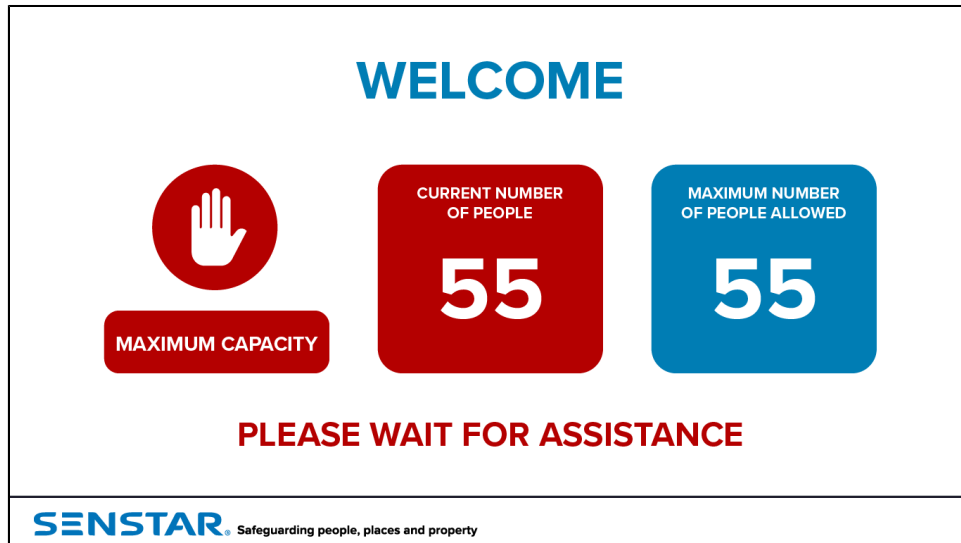

Add an aggregate

Configure the aggregated people counter video analytic in the Senstar Symphony Server configuration interface.

A camera must be running the Indoor People Tracking video analytic to be visible in the **Available Cameras on Servers** list.

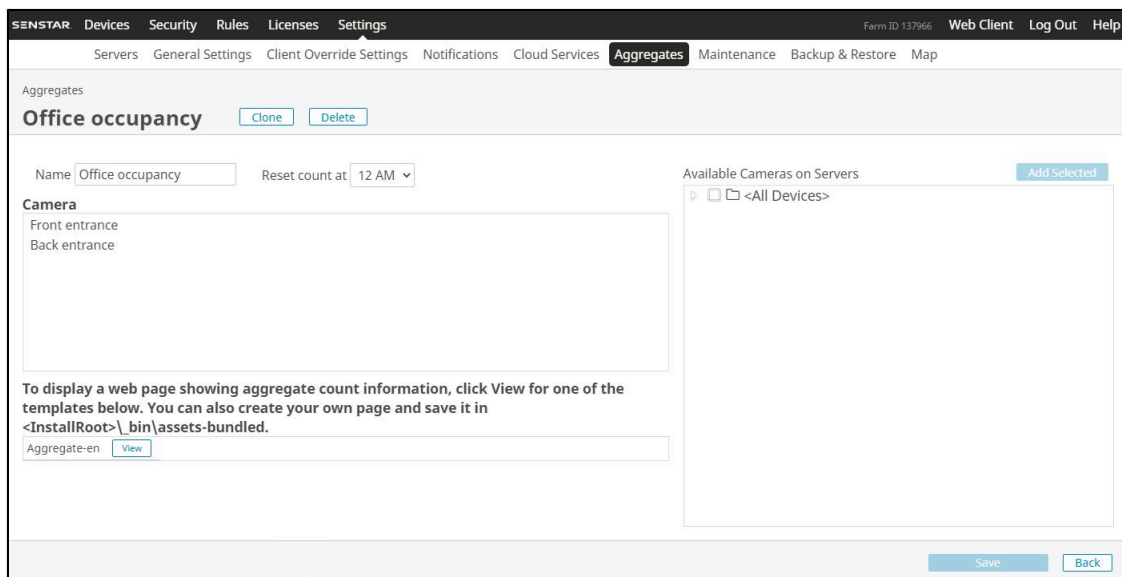

1. In the Senstar Symphony Server configuration interface, click **Settings > Aggregates**.
2. Click **Add Aggregate**.
3. In the **Name** field, type a meaningful name for the aggregate count.
4. In the **Reset count at** list, select the time at which the aggregate count resets.
Resetting the count helps maintain accuracy.
5. In the **Available Cameras on Servers** list, select the cameras that you want to include in the aggregate count and click **Add Selected**.
6. Click **Save**.

After you add an aggregate, the Senstar Symphony Server creates an HTML page that you can use to display occupancy information and instructions. To open the HTML, click the link at the bottom of the **Aggregates** page.

Modify the aggregated people counter HTML

You can modify the HTML page that the aggregated people counter video analytic uses to display occupancy counts and instructions to customers.

You can also copy an existing HTML file to create multiple HTML files to display different occupancy counts and instructions for other aggregates or situations.

1. On the computer that hosts the Senstar Symphony Server, navigate to `_bin\assets-bundled`.
2. Open the HTML file (for example, `Aggregate-en.html`) with a text editor.
3. To change the occupancy thresholds, modify the following code:

```
var thresholdYellow = 50;
var thresholdRed = 75;
```

4. To change the messages, modify the following code:

```
function showGreen(difference) {
    document.getElementById("message").innerHTML = "LIMITED STORE<br />CAPACITY";
    document.getElementById("instructions").innerHTML = "PLEASE PROCEED WITH CAUTION";
}
```

```
function showYellow(difference) {
    document.getElementById("message").innerHTML = "LIMITED STORE<br />CAPACITY";
    document.getElementById("instructions").innerHTML = "PLEASE MAINTAIN SOCIAL DISTANCING";
}
```

```
function showRed(difference) {
    document.getElementById("message").innerHTML = "MAXIMUM<br />CAPACITY";
    document.getElementById("instructions").innerHTML = "PLEASE WAIT FOR ASSISTANCE";
}
```

```
<div style="padding-top: 2vw; font-size: 1.5vw; ">CURRENT NUMBER<br />OF PEOPLE</div>
```

```
<div style="padding-top: 2vw; font-size: 1.5vw; ">MAXIMUM NUMBER<br />OF PEOPLE ALLOWED</div>
```

5. Save and close the HTML file.

Maintenance

The Maintenance tab in the Senstar Symphony Server configuration interface is the interface for configuring updates for the Senstar Symphony Client.

Configure automatic updates

The Senstar Symphony Server can perform automatic updates.

1. In the Senstar Symphony Server configuration interface, click **Settings > Maintenance**.
2. In the **Server Updates** section, select **Enable automatic updates**.
3. Specify when to download and install the update.
4. Perform one of the following actions:
 - To update from a specific location, select **Update from the following location** and type the file path.
 - To update from the Internet, select **Update from product web site**.
5. Click **Save**.

Check for server updates

In you have a standalone Senstar Symphony Server (single-server farm), you can manually check for software updates.

This feature is not available in multi-server farms.

1. In the Senstar Symphony Server configuration interface, click **Settings > Maintenance**.
2. In the **Server Updates** section, click **Check for Updates**.
3. If there are updates and you want to apply the updates, click **Yes**.
The Senstar Symphony Server starts downloading and installing updates.
4. Click **Close**.
5. Click **Close** again.
6. Wait 20 minutes and then log in to the Senstar Symphony Server configuration interface.

Configure client updates

You can configure when the Senstar Symphony Client applies updates.

1. In the Senstar Symphony Server configuration interface, click **Settings > Maintenance**.
2. In the **Client Updates** section, select one of the following options:
 - To update the Senstar Symphony Client as soon as an update is available, select **Immediately**.
 - To update the Senstar Symphony Client at a specific time, select **During time frame** and set the time during which to apply the updates.
 - To prevent automatic updates to the Senstar Symphony Client, select **Never**.
3. Click **Save**.

Backup and restore

The Backup & Restore tab in the Senstar Symphony Server configuration interface is the interface for backing up and restoring Senstar Symphony Server configurations.

You can use configurations to move settings between different Senstar Symphony Server instances or to restore an existing Senstar Symphony Server.

If you have a Senstar Symphony Server farm, it is strongly recommended that you save the backups to a location that is not on one of the servers in the farm, but is available to all of the servers in the farm (e.g., a NAS). This helps to recover servers in disaster recovery situations. Additionally, if you have a Maintenance and Support license, you can save backups online to the Senstar Xnet.

The Senstar Symphony Server does not support restoring a configuration from an earlier version of the Senstar Symphony Server.

Configure backups

You can back up the Senstar Symphony Server configuration.

By default, the Senstar Symphony Server creates a backup file automatically at 11:00 PM to the local backup path. If you use a password to protect the backup files, the password must meet the complexity requirements for the Senstar Symphony Server.

Backup Configuration

Backup configuration daily at

Local backup path

Last local backup: Yesterday at 10:57 PM
 Protect Backups with a Password

Password for the Backup

Confirm Backup Password

Enable online backup ON
 Last online backup: Yesterday at 10:57 PM

1. In the Senstar Symphony Server configuration interface, click **Settings > Backup & Restore**.
2. In the **Backup configuration daily at** field, type the time at which you want the Senstar Symphony Server to create a backup file.
3. In the **Local backup path** field, type the path to which the Senstar Symphony Server saves the backup file.
4. To secure the backup file with a password, complete the following steps:
 - a) Select the **Protect Backups with a Password** box.
 - b) Type the password in the **Password for the Backup** field.
 - c) Type the password in the **Confirm Backup Password** field to confirm the password.
5. To backup the Senstar Symphony Server to the Senstar Xnet, turn **Enable online backup** on.



Note: This feature requires a Maintenance & Support license.

6. To test your configuration, click **Test configuration**.
7. To create a backup, click **Back up now**.

Restore from a local backup

You can restore configuration settings for the Senstar Symphony Server from the local backup path.

1. In the Senstar Symphony Server configuration interface, click **Settings > Backup & Restore**.
2. To restore the configuration settings from a Senstar Symphony Server that is not part of the server farm, select **Restore backup from different hardware, excluding license**.
3. Click the **Restore local backup** tab.
4. To show compatible backup files in the local path, select **Show only compatible versions**.
5. Select the backup file.
6. Click **Restore**.

Restore from online backup

You can restore configuration settings for a Senstar Symphony Server from the Senstar Xnet.



Note: This feature requires a Maintenance & Support license.

1. In the Senstar Symphony Server configuration interface, click **Settings > Backup & Restore**.

2. Click the **Restore online backup**.
3. To show compatible backup files in the local path, select **Show only compatible versions**.
4. Select the backup file.
5. Click **Restore**.

Restore from file

You can restore configuration settings for a Senstar Symphony Server from a file.

1. In the Senstar Symphony Server configuration interface, click **Settings > Backup & Restore**.
2. To restore the configuration settings from a Senstar Symphony Server that is not part of the server farm, select **Restore backup from different hardware, excluding license**.
3. Click the **Restore from file**.
4. Drag the file into the interface or browse to the backup file.
5. Click **Restore**.

Analytics

Senstar Symphony video analytics provide real-time alerts, smart video search, and reporting.

To use a video analytic, you purchase the appropriate license and install the video analytic on the computer that hosts the Senstar Symphony Server. Once installed, you can enable and configure the video analytic on a camera in the Senstar Symphony Server configuration interface.

	Name	Type	Description
<input type="checkbox"/>	TCP Listener	Other	Accepts metadata into Symphony.
<input type="checkbox"/>	Analog Video Signal Loss	PC Analytic	Detects if the video input is one solid colour which may indicate signal loss.
<input type="checkbox"/>	Automatic License Plate Recognition - Core	PC Analytic	(BETA) Recognition of license plates from various regions.
<input type="checkbox"/>	Camera Tampering	PC Analytic	Detects if the video has been compromised (field of view obstruction, spray painted lens, camera position altered).
<input type="checkbox"/>	Crowd Detection	PC Analytic	Detects size and density of crowds of people
<input type="checkbox"/>	Image Stabilization	PC Analytic	Stabilize the video stream, when experiencing small movements, for use with another video analytic add-on.
<input type="checkbox"/>	Indoor People Tracking	PC Analytic	Can be used for robust people tracking in indoor environments.
<input type="checkbox"/>	Left and Removed Item Detection	PC Analytic	Detects left or removed items
<input type="checkbox"/>	Motion Detection	PC Analytic	Detects pixel changes in the scene.
<input type="checkbox"/>	Outdoor People and Vehicle Tracking	PC Analytic	Can be used for robust people and vehicle tracking in outdoor environments.

Add a video analytic license to a camera

To use a video analytic on a camera, you must add a license that includes the video analytic to the camera.

Before you begin:

- Purchase a license for the video analytic.
 - Download and install the video analytic.
1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
 2. Select a camera.
 3. Click **Edit**.
 4. In the **Add-Ons** section, select an appropriate license in the **Analytic License Requested** list.
 5. Click **Update License**.
 6. Click **Save**.


Draw a processing mask

You can draw a processing mask for a video analytic in the Senstar Symphony Server configuration interface to define the area in the camera view that the video analytic analyzes.

Drawing a processing mask is part of configuring a video analytic.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list click **Configure** for the video analytic.
4. In the **Processing** section, perform the following tasks:
 - a) In the **Drawing Mode** list, select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
 - b) Using the **Size** slider, select the size of the paintbrush that you use in the processing mask image.
 - c) Use the mouse to draw the processing mask.

If you make an error, you can reverse the drawing mode and modify the processing mask.

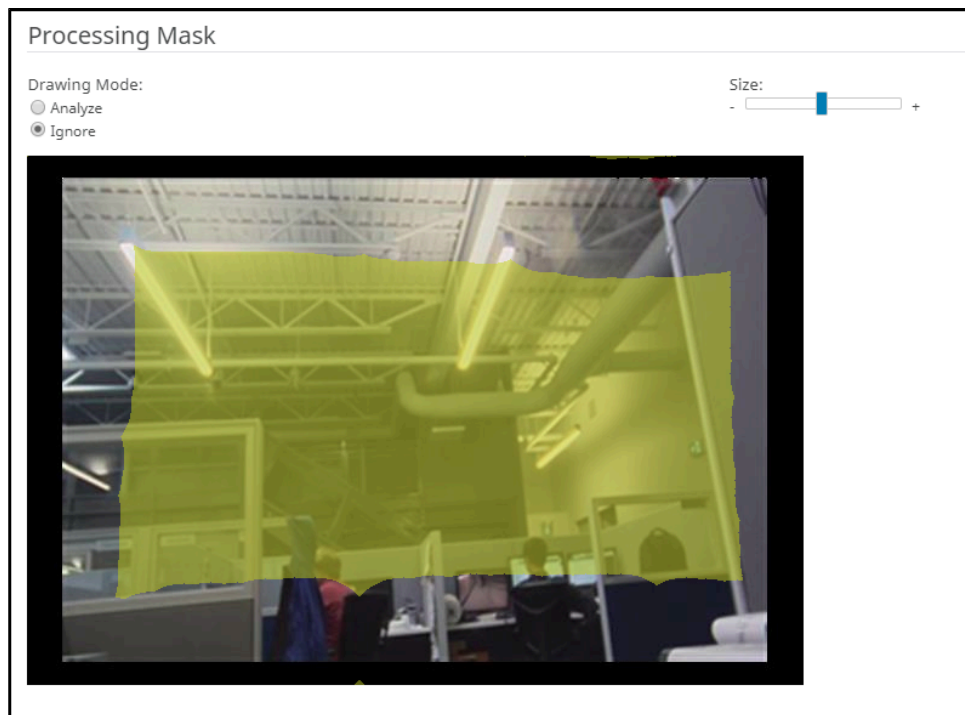

5. Click **OK**.


Calibrate a camera

For some video analytics, you must calibrate the camera to achieve optimum performance and accuracy.

Calibrating a camera is part of configuring a video analytic.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list click **Configure** for the video analytic.
4. In the **Calibration** section, perform the following tasks:
 - a) Click on the calibration image to place avatars on the image.
The avatars help you visualize people in the sample image.
 - b) In the **Field of view** field, type the camera's field of view in degrees.

- c) In the **Pan** field, type the angle (degrees) of horizontal rotation around the vertical access of the camera.
 - d) In the **Twist** field, type the angle (degrees) of rotation around the long axis of the camera.
 - e) In the **Twist** field, type the angle (degrees) of rotation around the long axis of the camera.
 - f) In the **Height** field, type the height of the camera.
 - g) In the **Distance** field, type the distance between the camera and the center of the calibration grid.
5. Click **Save**.

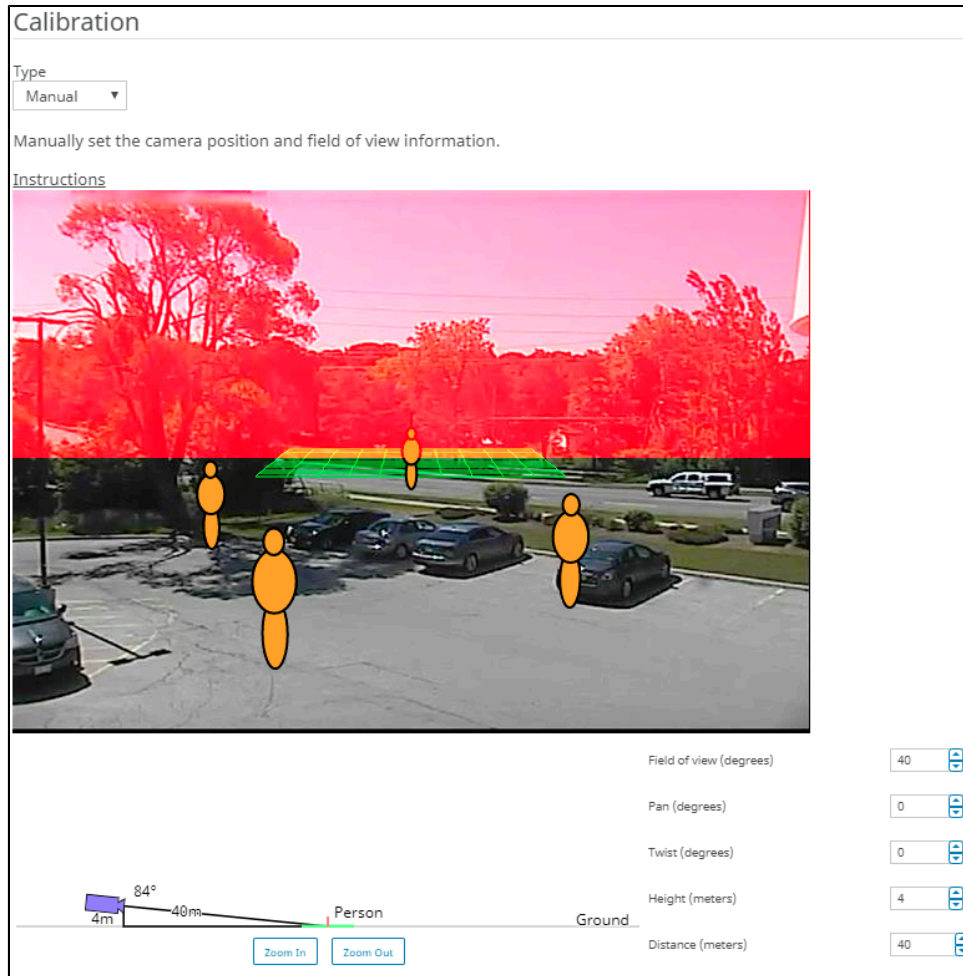

Additionally, you can drag the camera in the calibration diagram to place it in relation to the scene. The Zoom In and Zoom Out buttons adjust the scale of the calibration diagram.

TCP Listener

The TCP Listener is a video analytic that listens for incoming metadata over a TCP socket and associates the metadata with an image or video.

The Senstar Symphony Server can use the metadata to search for images and video.

Enable the TCP Listener

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn TCP Listener on.
4. Click **Save**.

Analog Video Signal Loss

The Analog Video Signal Loss video analytic is a video analytic that can detect when video from a camera is unavailable.

This video analytic does not require configuration and uses minimal CPU resources. It is recommended for all cameras.

Enable Analog Video Signal Loss

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn Analog Video Signal Loss on.
4. Click **Save**.

Automatic License Plate Recognition

The Automatic License Plate Recognition video analytic is a video analytic for the Senstar Symphony Server that can detect and index license plates.

The Automatic License Plate Recognition video analytic can recognize and log license plates from different countries and regions on vehicles traveling up to 30 kph (19 mph). It can analyze video in real time without requiring an external trigger.

With the Automatic License Plate Recognition video analytic, a 720p network camera can analyze up to two lanes of traffic if the license plate images are at least 32 pixels in height for Latin characters or 40 pixels in height for non-Latin characters.

Typical uses for the The Automatic License Plate Recognition video analytic include:

- Toll collection in parking garages
- Traffic control
- Border crossings
- Pattern of use analysis

Configure Automatic License Plate Recognition

Configure the Automatic License Plate Recognition video analytic for each camera that runs the video analytic.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera on which you want to run the Automatic License Plate Recognition video analytic and click **Edit**.
3. In the **Add-Ons** section, click the button beside Automatic License Plate Recognition to turn it on.
4. Click the **Configure** button beside Automatic License Plate Recognition.
5. In the **Overview** section, configure analysis options and select whether the advanced options are hidden (simple mode on) or visible (simple mode off).
6. If the image in the **Processing Mask** and **Plate Detection** sections do not include an image that is suitable for license plate detection, update the image.
 - a) Click **Change Image**.
 - b) Use the timeline and video controls to navigate to an image that is suitable for license plate detection.
 - c) Click **OK**.
7. In the **Processing Mask** image, define the areas that the video analytic analyzes and ignores.
 - a) In the **Drawing Mode** list, select whether to draw an area to analyze or ignore.
 - b) Using the **Size** slider, select the size of drawing circle.
 - c) On the image, click and drag the drawing circle to define the areas to analyze or ignore.

8. In the **Plate Detection** image, draw a frame around the license plate so that the edges of the text on the license plate fall within the green frame.
 - a) Click and drag the frame on the image.
 - b) To move the frame, click in the middle of the green frame and drag the frame.
 - c) To change the size of the frame, click an edge of the frame and drag the line to change the size.
 - d) To adjust the slant and slope of the frame, click a corner of the frame and drag the corner to change the slant or slope.
9. Using the **Reporting Confidence** slider, select how sensitive the video analytic is to potential license plates.
10. Click **OK**.

Automatic License Plate Recognition settings

Overview

Setting	Description
Analysis Resolution	Select the resolution that the Automatic License Plate Recognition video analytic uses to analyze video frames.
Analysis FPS	Select the number of frames per second that the Automatic License Plate Recognition video analytic uses to analyze video.
Simple Mode	Turn off to make the advanced settings visible.
Region For Plate Analysis	Select the regional engine that the Automatic License Plate Recognition video analytic uses to analyze the license plates that this camera detects. The list includes the regions that you select during installation.
V9 Dongle	Select this option if you are using a new license with the Default or China engine.
Enable with Motion Detection	Select this option to only perform analysis when the camera detects motion.
Enable with Relay	Select this option to only perform analysis when a relay device records an input event. When you select this option, additional fields appear that allow you to select the relay and configure how the Automatic License Plate Recognition video analytic responds to the input event.

Processing Mask

Setting	Description
Drawing Mode	Select whether to draw areas to analyze or ignore on the processing mask.
Size	Define the size of the circle to draw on the processing mask.


Plate Detection

Use the plate detection image to draw a frame around the license plate in an image that represents a typical license detection situation. The frame can only surround one line of characters and outside boundaries of the characters should fall within the green frame.

This is an example of a good plate detection frame:



This is an example of a poor plate detection frame:

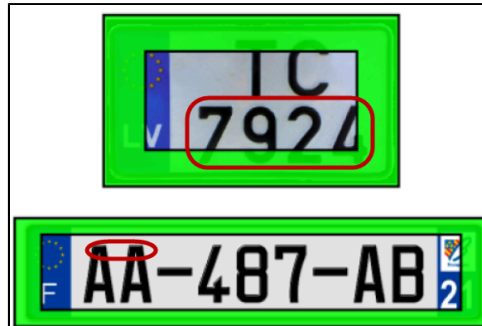

Setting	Description
Reporting Confidence	Use the slider bar to define the sensitivity of the Automatic License Plate Recognition video analytic. The reporting confidence is 50% by default. A lower reporting confidence results in more detection and might affect performance.
Minimum height	This field displays the height of the inner rectangle.
Maximum height	This field displays the height of the outer rectangle.
Minimum width	This field displays the width of the inner rectangle. This setting is only available for the Automatic License Plate Recognition Core video analytic.
Maximum width	This field displays the width of the outer rectangle. This setting is only available for the Automatic License Plate Recognition Core video analytic.
Minimum slant	This field displays the minimum slant of the vertical lines. This setting is only available for the Automatic License Plate Recognition Peripheral video analytic.

Setting	Description
Maximum slant	This field displays the maximum slant of the vertical lines. This setting is only available for Automatic License Plate Recognition Peripheral video analytic.
Minimum slope	This field displays the minimum slope of the horizontal lines. This setting is only available for Automatic License Plate Recognition Peripheral video analytic.
Maximum slope	This field displays the maximum slope of the horizontal lines. This setting is only available for Automatic License Plate Recognition Peripheral video analytic.

Advanced

The advanced settings are visible when the simple mode is off.



Warning: Changing the advanced settings can adversely affect the performance of the video analytic.

Setting	Description
Minimum Plate Length	Define the minimum number of characters that the Automatic License Plate Recognition video analytic must detect before it recognizes the text as a potential license plate.
Plate Dwell Time	Define the time (in seconds) that a potential license plate must be visible before the Automatic License Plate Recognition video analytic begins analyzing the potential license plate.
Queue Time	Define how much video the Automatic License Plate Recognition video analytic retains for analysis. Frames that fall outside of the queue time are ignored by the video analytic.
Analysis Timeout	Define how much time can elapse before the Automatic License Plate Recognition video analytic stops processing a license plate.
Plate Display Time	Define how long the Automatic License Plate Recognition video analytic displays the license plate decoration in the Senstar Symphony Client interface.
Plate Look Time	Define the time (in seconds) that the Automatic License Plate Recognition video analytic spends analyzing the license plate. During this time, the video analytic records all the characters that it recognizes (for example, the video analytic might detect a character as multiple similar characters as the license plate moves through the scene). After the time elapses, the video analytic selects and reports the best result. However, all results that the video analytic detects are saved to the database. If you set this value to 0 (zero), the video analytic reports the first result that it detects.

Setting	Description
Import XML	Click this button to import a configuration XML file.
Export XML	Click this button to export the configuration XML file.
Show XML	Click this button to display the configuration XML.

Camera Tampering

The Camera Tampering video analytic is a video analytic that can detect when a camera's field of view is obstructed.

The Camera Tampering video analytic can be enabled on a camera that is running another video analytic to ensure continuous operation of the camera. It can detect when the direction of the camera changes, when the camera is blocked, or when the lighting in the scene changes.

When the Camera Tampering video analytic detects a significant change to the scene (approximately 25% of the scene changes), it uses a previous frame as a reference and compares the subsequent frames to that reference frame. If the change persists for the minimum tampering time threshold, the Camera Tampering video analytic concludes that the camera is obstructed. For example, the Camera Tampering video analytic can detect when the lens of a camera is covered in spray paint, when a camera is moved, when a large object is placed in front of a camera, or when the lights in the scene are turned off.

Related tasks

[Configure Camera Tampering](#) on page 100

Configure the Camera Tampering video analytic in the Senstar Symphony Server configuration interface.

Related reference

[Camera Tampering settings](#) on page 100

Configure Camera Tampering

Configure the Camera Tampering video analytic in the Senstar Symphony Server configuration interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn Camera Tampering on and click **Configure**.
4. Adjust the settings for the Camera Tampering video analytic.
5. Click **OK**.

Related reference

[Camera Tampering settings](#) on page 100

Camera Tampering settings

Setting	Description
Analysis Resolution	Set the resolution for the camera on which the Camera Tampering video analytic is active.
Simple Mode	Select whether to hide or display the advanced settings. Simple mode is the default mode. Advanced mode is intended for system integrators and technical support staff.

Setting	Description
Minimum tampering time threshold	Set how long a camera must be blocked before it triggers an alarm. This setting is useful for scenes that experience temporary obstructions such as people passing by the camera. You can set the threshold so that the video analytic ignores temporary obstructions.
Scene consistency threshold	Set the size of the scene change that indicates a camera obstruction. This setting is useful for scenes that experience lighting changes. You can set the threshold so that the video analytic ignores the lights in the scene turning on and off, but registers other camera obstructions.

Crowd Detection

The Crowd Detection video analytic is a video analytic that offers crowd detection, event triggering, and alarms.


You can define the area that the Crowd Detection video analytic monitors for the number of people in the monitored area (capacity) and the percentage of the monitored area with people (occupancy). The Crowd Detection video analytic can trigger alarms when it detects a specific capacity or occupancy.

The Crowd Detection video analytic can display informational decorations in the camera view panel. In addition to displaying tracking boxes around areas where it detects people, Crowd Detection video analytic can display the following decorations:

- The **Occupancy** decoration displays the percentage of the scene that contains people.
- The **Capacity** decoration displays the estimated number of people in the scene as a percentage of the maximum capacity.
- The **Crowd Est.** decoration displays the estimated number of people in the scene.

The Crowd Detection video analytic can detect people that are 8 pixels or larger in the scene. When placing a camera for use with the Crowd Detection video analytic, consider the following guidelines.

- Mount the camera so that it has an overview of the area. Do not place the camera directly overhead (90°) because the Crowd Detection video analytic cannot detect people from directly overhead and do not place the camera close to horizontal (0°) because people in the front obscure the crowd behind.
- Mount the camera or use the processing mask so that the scene does not include crowds larger than 50 people. The Crowd Detection video analytic does not work reliably on scenes with more than 50 people.
- Mount the camera or use the processing mask so that the scene does not include other moving objects (e.g., vehicles) or moving shadows.

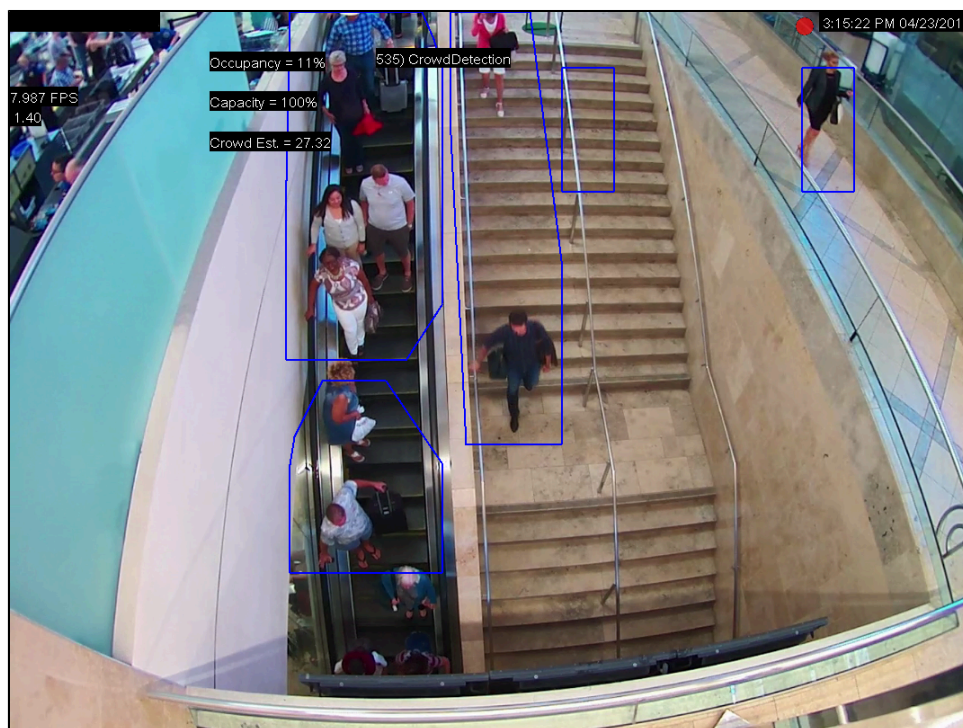

When the Crowd Detection video analytic starts, it takes approximately 2 minutes to learn the scene. During this time, the results are inaccurate.

Related tasks

[Configure Crowd Detection](#) on page 102

Configure the Crowd Detection video analytic in the Senstar Symphony Server configuration interface.

[Calibrate a camera](#) on page 94

For some video analytics, you must calibrate the camera to achieve optimum performance and accuracy.

[Draw a processing mask](#) on page 94

You can draw a processing mask for a video analytic in the Senstar Symphony Server configuration interface to define the area in the camera view that the video analytic analyzes.

Related reference

[Crowd Detection settings](#) on page 103

Configure Crowd Detection

Configure the Crowd Detection video analytic in the Senstar Symphony Server configuration interface.

To configure the Crowd Detection video analytic, you should use an image that includes at least one person from the camera that you are configuring. Adjust the settings so that the reference people and the grid lines in the calibration image match the scene. You can move and add reference people in the calibration image.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn the Crowd Detection video analytic on and click **Configure**.
4. On the Crowd Detection page, define the Overview, Processing Mask, Capacity, Calibration, and Sensitivity settings.
5. Click **OK**.

Related reference

[Crowd Detection settings](#) on page 103

Crowd Detection settings

Overview

Setting	Description
Analysis Resolution	Set the resolution for the camera on which the Crowd Detection video analytic is active.
Automatically Select Resolution Based on Calibration	Select to automatically set the analysis resolution based on the settings in the Calibration section.
Analysis FPS	Set the frames per second for the camera on which the Crowd Detection video analytic is active.
Simple Mode	Select whether to hide or display the advanced settings.

Processing Mask

Setting	Description
Drawing Mode	Select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
Size	Select the size of the paintbrush that you use in the processing mask image.

Capacity

Setting	Description
Maximum Capacity	Use the slider to define the maximum capacity for the scene.

Calibration

Setting	Description
Type	Select the type of calibration. Manual allows you to set the camera position. Automatic allows the Crowd Detection video analytic to set the camera position and field of view. Uncalibrated runs the video analytic without camera position and field of view information.
Zoom In	Click to make the calibration diagram larger.
Zoom Out	Click to make the calibration smaller.
Field of view (degrees)	Define the horizontal field of view (in degrees) for the camera.

Setting	Description
Pan (degrees)	Define the rotation around the vertical axis of the camera in relation to the scene.
Twist (degrees)	Define the rotation around the horizontal axis of the camera in relation to the scene.
Height (meters)	Define the vertical distance from the camera to the ground.
Distance (meters)	Define the horizontal distance from the camera to the center of the scene.

Sensitivity

Setting	Description
Occupancy	Use the slider to set how sensitive the Crowd Detection video analytic is to the area occupied by people.
Capacity	Use the slider to set how sensitive the Crowd Detection video analytic is to the number of people in the scene.

Image Stabilization

The Image Stabilization video analytic can stabilize video when a camera experiences vibrations or other small movements.

This video analytic is beneficial when you use it to supplement another video analytic. This video analytic does not require configuration.

Enable Image Stabilization

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn Image Stabilization on.
4. Click **Save**.

Indoor People Tracking

The Indoor People Tracking video analytic offers people counting, dwell-time detection, event triggering, and alarms.

For people counting, the Indoor People Tracking video analytic uses counting lines that you draw on the scene to count how many people pass through the scene.

The Indoor People Tracking video analytic can detect people that are 16 pixels or larger in the scene.



Configure Indoor People Tracking

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn Indoor People Tracking on and click **Configure**.
4. Adjust the settings for the Indoor People Tracking video analytic.

The simple mode configuration uses the default detection settings for the Indoor People Tracking. To view the default settings, you can turn off the simple mode to make the default settings visible in the Advanced section.



Warning: Changing the advanced settings can adversely affect the performance of the video analytic.

5. Click **OK**.

Indoor People Tracking settings

Overview

Setting	Description
Analysis Resolution	Set the resolution for the camera on which the Indoor People Tracking video analytic is active.
Automatically Select Resolution Based on Calibration	Select to automatically set the analysis resolution based on the settings in the Calibration section.
Analysis FPS	Set the frames per second for the camera on which the Indoor People Tracking video analytic is active.

Setting	Description
Simple Mode	Select whether to hide or display the advanced settings. Simple mode is the default mode. Advanced mode is intended for system integrators and technical support staff.

Processing Mask

Setting	Description
Drawing Mode	Select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
Size	Select the size of the paintbrush that you use in the processing mask image.

Counting Line

Setting	Description
Create	On the image, click and hold the left mouse button, move the mouse to draw the new counting line, and release the left mouse button.
Delete	Click a counting line to select it and press Delete.
Move	Hold the CTRL key, click and hold the left mouse button on the counting line endpoint, and drag the endpoint to the
Add a connected counting line	Click and hold the left mouse button on the endpoint of an existing counting line, move the mouse to draw the new counting line, and release the left mouse button.
Change the counting direction	Click an arrow on the counting line to toggle counting for that direction on and off.

Calibration

Setting	Description
Type	Select the type of calibration. Manual allows you to set the camera position. Automatic allows the Indoor People Tracking video analytic to set the camera position and field of view. Uncalibrated runs the Indoor People Tracking video analytic without camera position and field of view information.
Zoom In	Click to make the calibration diagram larger.
Zoom Out	Click to make the calibration smaller.
Field of view (degrees)	Define the horizontal field of view (in degrees) for the camera.
Pan (degrees)	Define the rotation around the vertical axis of the camera in relation to the scene.

Setting	Description
Twist (degrees)	Define the rotation around the horizontal axis of the camera in relation to the scene.
Height (meters)	Define the vertical distance from the camera to the ground.
Distance (meters)	Define the horizontal distance from the camera to the center of the scene.

Sensitivity


This section is only visible in simple mode.

Setting	Description
Object Contrast	Use the slider to set how sensitive the Indoor People Tracking video analytic is to the contrast between objects and the background.
Object Motion	Use the slider to set how sensitive the Indoor People Tracking video analytic is to the movement of objects.
Background Motion	Use the slider to set how sensitive the Indoor People Tracking video analytic is to movement in the background.
Shadow Suppression	Select this option to have the Indoor People Tracking video analytic ignore the presence and movement of shadows.

Left and Removed Item Detection

The Left and Removed Item Detection video analytic can detect when an object is added to or removed from the scene.

The Left and Removed Item Detection video analytic does not differentiate between left items and removed items. The video analytic compares the pixels in the scene with the pixels in previous scenes and uses tracking boxes to identify the areas with change.

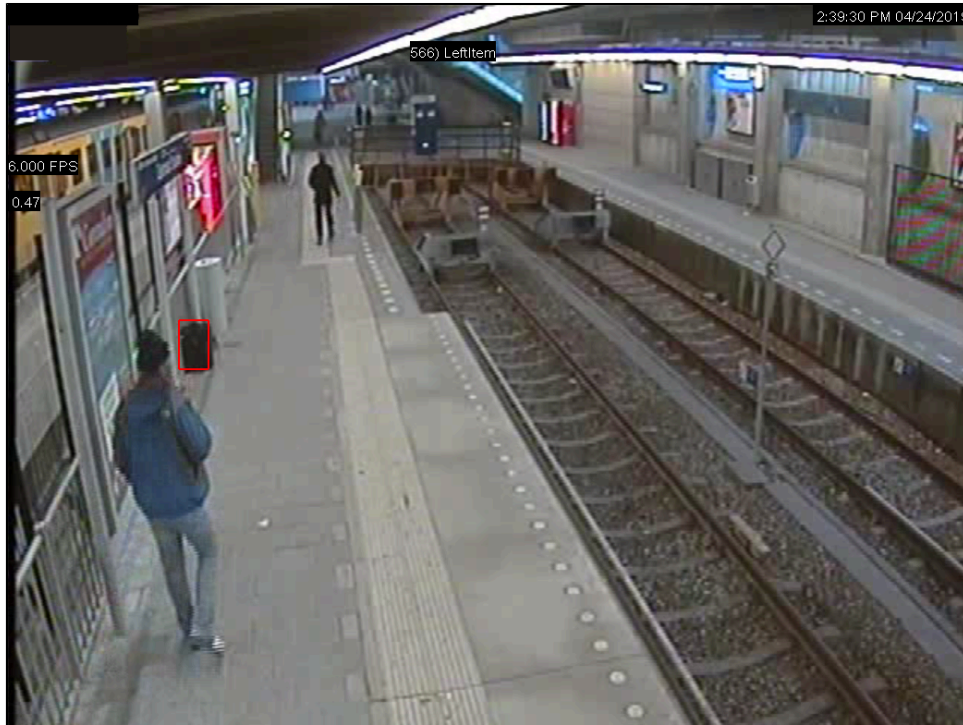

Configure Left and Removed Item Detection

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn Left and Removed Item Detection on and click **Configure**.
4. Adjust the settings for the Left and Removed Item Detection video analytic.

The simple mode configuration uses the default detection settings for the Left and Removed Item Detection video analytic. To view the default settings, you can turn off the simple mode to make the default settings visible in the Advanced section.



Warning: Changing the advanced settings can adversely affect the performance of the video analytic.

5. Click **OK**.

Left and Removed Item Detection settings

Overview

Setting	Description
Analysis Resolution	Set the resolution for the camera on which the Left and Removed Item Detection video analytic is active.
Automatically Select Resolution Based on Calibration	Select to automatically set the analysis resolution based on the settings in the Calibration section.
Analysis FPS	Set the frames per second for the camera on which the Left and Removed Item Detection video analytic is active.

Setting	Description
Simple Mode	Select whether to hide or display the advanced settings. Simple mode is the default mode. Advanced mode is intended for system integrators and technical support staff.

Processing Mask

Setting	Description
Drawing Mode	Select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
Size	Select the size of the paintbrush that you use in the processing mask image.

Calibration

Setting	Description
Zoom In	Click to make the calibration diagram larger.
Zoom Out	Click to make the calibration smaller.
Field of view (degrees)	Define the horizontal field of view (in degrees) for the camera.
Pan (degrees)	Define the rotation around the vertical axis of the camera in relation to the scene.
Twist (degrees)	Define the rotation around the horizontal axis of the camera in relation to the scene.
Height (meters)	Define the vertical distance from the camera to the ground.
Distance (meters)	Define the horizontal distance from the camera to the center of the scene.

Advanced

The advanced settings are visible when the simple mode is off.



Warning: Changing the advanced settings can adversely affect the performance of the video analytic.

Setting	Description
Left item duration	Set the time (seconds) that an object must be present or missing before the Left and Removed Item Detection video analytic considers it left or removed. The default setting is 15 seconds.


Setting	Description
Check for object drop-off	Select whether the Left and Removed Item Detection video analytic ignores items that a person picks up or drops off. The default setting is selected.
Initial background model learn time	Set the time (seconds) that the Left and Removed Item Detection video analytic takes to learn the background of the scene. During this time, the Left and Removed Item Detection video analytic does not attempt to detect any objects. The default setting is 1 second.
Reach width	Set the distance (pixels) for a person in a retail store to reach the item. The default setting is 9 pixels.
Object merge distance	Set the distance (pixels) at which the Left and Removed Item Detection video analytic merges two object into one object. The default setting is 20 pixels.
Reduce false alarms from still people	Select whether the Left and Removed Item Detection video analytic waits to detect people in the scene as a left or removed item. This setting uses the Time to wait for still people setting. The default setting is false.
Time to wait for still people	Set how long (seconds) the Left and Removed Item Detection video analytic waits to detect people in the scene. This setting is activated by selecting the Reduce false alarms from still people setting. The default setting is 60 seconds.
Appearance	
Lower bound	
Upper bound	
Reduce reflection	Select whether the Left and Removed Item Detection video analytic tries to ignore reflections.
Reflection reduction threshold	Set the how sensitive to reflections the Left and Removed Item Detection video analytic is to reflections. A lower value causes the video analytic to ignore more reflections. A higher value causes the video analytic to process more reflections.
Camera looking at shelf	Select if the camera is facing a shelf. This setting is active only if you select Check for object drop-off.
Time to clear long-term representation	Set how long (seconds) before the Left and Removed Item Detection video analytic clears the background.

Setting	Description
Time to clear short-term representation	Set how long (seconds) before the Left and Removed Item Detection video analytic clears the cache.
Minimum fill rate	Set the percent of the item's smallest bounding box the item must fill for the Left and Removed Item Detection video analytic considers it an item. The default value is 10.
Time to remove or drop an item	Set how long (seconds) a item must be present before the Left and Removed Item Detection video analytic starts processing the item. Setting a longer time reduces the processing load of the video analytic.
Background reset time after an object is deleted	Set how long (seconds) the Left and Removed Item Detection video analytic waits before it deletes an object.
Minimum valid object dimension	Set how large (pixels) an item must be, in both height and width, and how far from the edge of the scene an item must be for the Left and Removed Item Detection video analytic to consider the item to be left or removed.
Reset camera if this percentage of image becomes foreground in 1 frame	Set the percentage of the image that must change in a single frame before the camera resets the background. This prevents the Left and Removed Item Detection video analytic from considering sudden large changes as items.
Reset camera if this percentage of image becomes foreground in 5 frames	Set the percentage of the image that must change in five frames before the camera resets the background. This prevents the Left and Removed Item Detection video analytic from considering gradual large changes as items.
Merge small objects closer than	Set the distance (pixels) between two items at which the Left and Removed Item Detection video analytic merges the two items into a single item. The default value is 8.
Grayscale background update rate	Set the rate at which the Left and Removed Item Detection video analytic updates the background image. Setting a lower value catches more left and removed items but increases the processing load. The default value is 5.

Motion Detection

The Motion Detection video analytic offers motion detection, event triggering, and alarms.

The Motion Detection video analytic detects pixel changes in the scene.

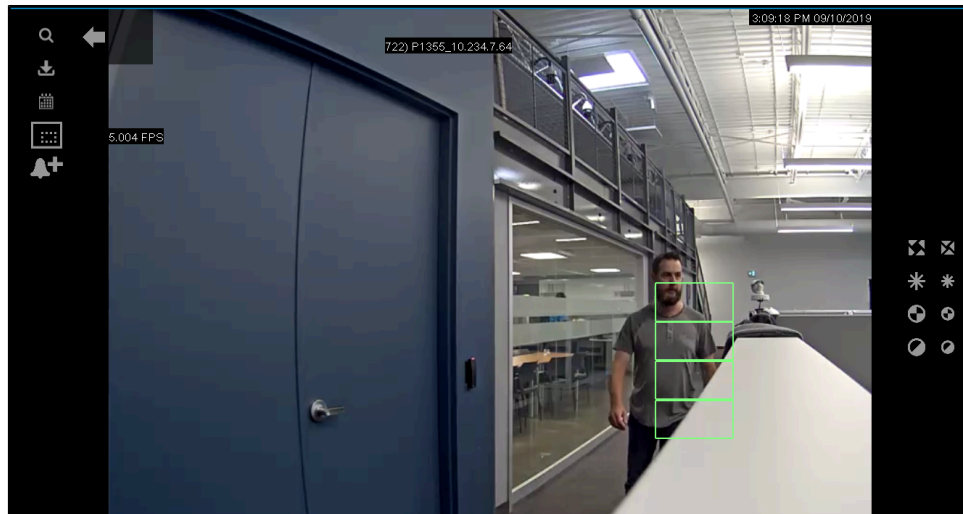

Configure Motion Detection

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn Motion Detection on and click **Configure**.
4. Adjust the settings for the Motion Detection video analytic.
5. Click **OK**.

Motion Detection settings

Overview

Setting	Description
Analysis Resolution	Set the resolution for the camera on which the Motion Detection video analytic is active.
Analysis FPS	Set the frames per second for the camera on which the Motion Detection video analytic is active.
Simple Mode	Select whether to hide or display the advanced settings.

Processing mask

Setting	Description
Drawing Mode	Select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
Size	Select the size of the paintbrush that you use in the processing mask image.


Grid View

Setting	Description
Minimum Foreground Fill (percent)	Use the slider to define what percentage of a grid square must change for the Motion Detection video analytic to detection in that grid square.
Grid Spacing	Use the slider to define the size of the grid squares.
Foreground Sensitivity	Use the slider to define how sensitive the Motion Detection video analytic is to motion when determining the foreground fill.
Adjust sensitivity based on camera noise	Select to automatically change the foreground sensitivity to accommodate random variations or brightness or color from the camera.

Outdoor People and Vehicle Tracking

The Outdoor People and Vehicle Tracking video analytic offers people and vehicle detection in outdoor environments with weather and lighting changes.

The Outdoor People and Vehicle Tracking video analytic can detect objects that are 8 pixels or larger in the scene.

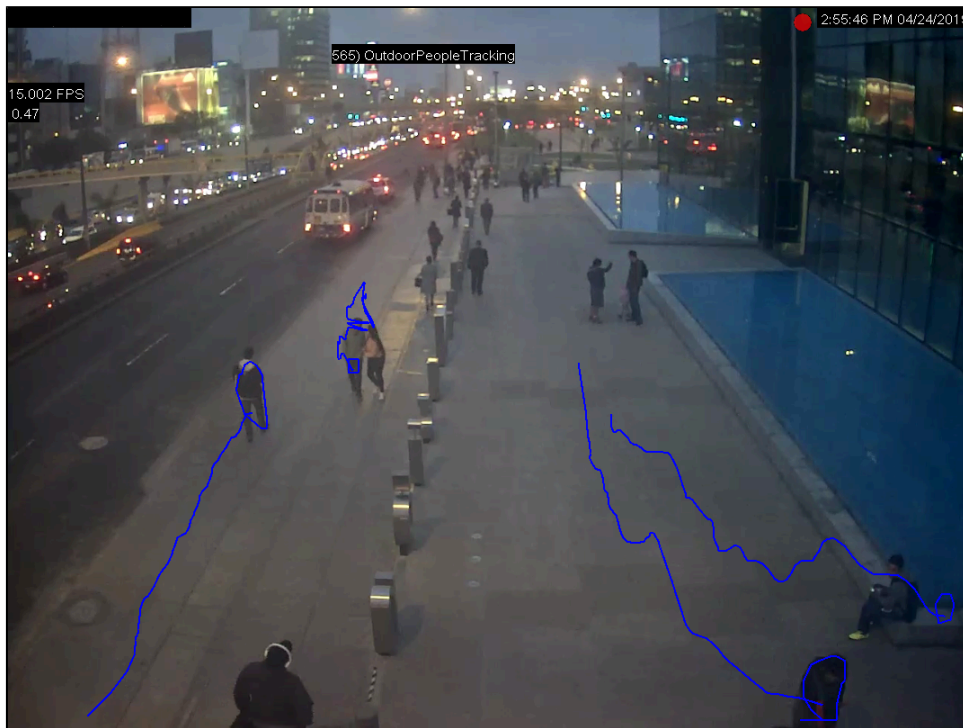

Configure Outdoor People and Vehicle Tracking

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn Outdoor People and Vehicle Tracking on and click **Configure**.

- Adjust the settings for the Outdoor People and Vehicle Tracking video analytic.

The simple mode configuration uses the default detection settings for the Outdoor People and Vehicle Tracking video analytic. To view the default settings, you can turn off the simple mode to make the default settings visible in the Advanced section.



Warning: Changing the advanced settings can adversely affect the performance of the video analytic.

- Click **Save**.

Outdoor People and Vehicle Tracking settings

Overview

Setting	Description
Analysis Resolution	Set the resolution for the camera on which the Outdoor People and Vehicle Tracking video analytic is active.
Automatically Select Resolution Based on Calibration	Select to automatically set the analysis resolution based on the settings in the Calibration section.
Analysis FPS	Set the frames per second for the camera on which the Outdoor People and Vehicle Tracking video analytic is active.
Simple Mode	Select whether to hide or display the advanced settings.

Processing mask

Setting	Description
Drawing Mode	Select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
Size	Select the size of the paintbrush that you use to draw on the processing mask image.



Calibration

Setting	Description
Type	Select the type of calibration. Manual allows you to set the camera position. Automatic allows the Outdoor People and Vehicle Tracking video analytic to set the camera position and field of view. Uncalibrated runs the Outdoor People and Vehicle Tracking video analytic without camera position and field of view information.
Zoom In	Click to make the calibration diagram larger.
Zoom Out	Click to make the calibration smaller.
Field of view (degrees)	Define the horizontal field of view (in degrees) for the camera.

Setting	Description
Pan (degrees)	Define the rotation around the vertical axis of the camera in relation to the scene.
Twist (degrees)	Define the rotation around the horizontal axis of the camera in relation to the scene.
Height (meters)	Define the vertical distance from the camera to the ground.
Distance (meters)	Define the horizontal distance from the camera to the center of the scene.

Sensitivity

The sensitivity settings are visible when the simple mode is on.

Setting	Description
Object Contrast	Use the slider to set how sensitive the Outdoor People and Vehicle Tracking video analytic is to differences between objects and the background.
Object Motion	Use the slider to set how sensitive the Outdoor People and Vehicle Tracking video analytic is to foreground motion when detecting objects.
Background Motion	Use the slider to set how sensitive the Outdoor People and Vehicle Tracking video analytic is to background motion when detecting objects.
Shadow Suppression (Simple)	Select to use simple shadow suppression. Simple shadow suppression is effective where there are light shadows in the scene.  CAUTION: Do not use shadow suppression with thermal cameras.
Shadow Suppression (Complex)	Select to use complex shadow suppression. Complex shadow suppression is effective when there are dark shadows in the scene.  CAUTION: Do not use shadow suppression with thermal cameras.
Snow Suppression	Select to have the Outdoor People and Vehicle Tracking video analytic ignore the motion of snow in the scene.
Dynamic Background	Select to have the Outdoor People and Vehicle Tracking video analytic ignore periodic movement in the scene. This setting is effective for outdoor scenes where weather can cause motion in the background.
Detect Distant Objects	Select to have the Outdoor People and Vehicle Tracking video analytic attempt to detect objects in the distance.

PTZ Auto-Tracking

The PTZ Auto-Tracking video analytic can automatically control PTZ cameras when activity is detected.

The PTZ Auto-Tracking video analytic requires that the Indoor People Tracking video analytic or Outdoor People and Vehicle Tracking video analytic is active on the camera. You can add the PTZ Auto-Tracking video analytic as an action for a rule.

Related tasks

[Configure PTZ Auto-Tracking](#) on page 116

Related reference

[PTZ Auto-Tracking settings](#) on page 116

Configure PTZ Auto-Tracking

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. Turn on and configure either the Indoor People Tracking video analytic or Outdoor People and Vehicle Tracking video analytic for the camera.
4. In the **Add-Ons** list, turn PTZ Auto-Tracking on and click **Configure**.
5. Configure the video analytic.
6. Click **Save**.

Related reference

[PTZ Auto-Tracking settings](#) on page 116

PTZ Auto-Tracking settings

Overview

Setting	Description
Analysis Resolution	Set the resolution for the camera on which the PTZ Auto-Tracking is active.
Analysis FPS	Set the frames per second for the camera on which the PTZ Auto-Tracking video analytic is active.
Simple Mode	Select whether to hide or display the advanced settings. Simple mode is the default mode. Advanced mode is intended for system integrators and technical support staff.

Face Recognition

The Face Recognition video analytic offers facial recognition, event triggering, and alarms.

The Face Recognition video analytic uses profiles to represent individuals. Each profile can include multiple images of an individual's face. Use the Senstar Symphony Client interface to create profiles, add images of faces, and set whether the profile is blocked or allowed. When the Face Recognition video analytic identifies a face in video, it can trigger events on the Senstar Symphony Server.


The Face Recognition video analytic can detect faces when there is greater than 29 pixels between the eyes and it works best when the resolution of the camera is greater than or equal to 640 x 480.

The Face Recognition video analytic includes spoof attack detection. The video analytic can detect the difference between pictures of faces and real faces. You can use spoof attack detection to generate alarms when the video analytic detects spoofed faces.



Note: The Face Recognition video analytic cannot generate alarms on real faces and spoofed faces at the same time. You must create two rules to generate alarms on both.


In the Senstar Symphony Client interface, a blue square surrounds a tracked face and a red square surrounds a tracked face that triggers an alarm.

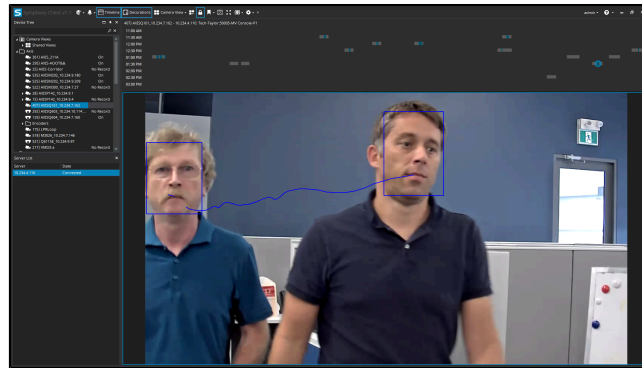

Configure Face Recognition


Configure the settings for the Face Recognition video analytic in the Senstar Symphony Server configuration interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn Face Recognition on and click **Configure**.
4. In the **Overview** section, set the parameters that Face Recognition uses when detecting faces.

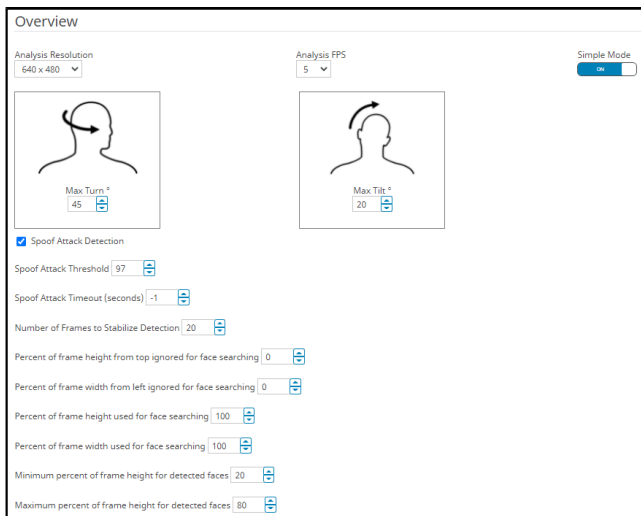

In this section, you also set the spoof attack settings and define the face search frame that the Face Recognition video analytic use to detect faces.

- In the **Processing Mask** section, set the areas in the image that the camera ignores or analyzes.

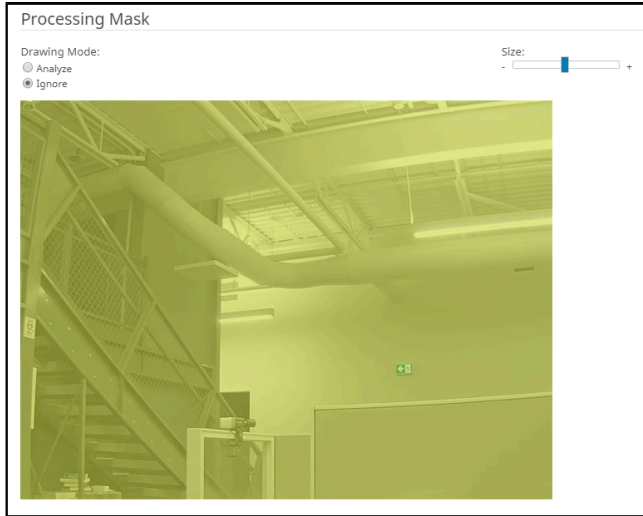


Note: If you use the processing mask to ignore a portion of the face search frame, the video analytic will not search for faces in that region.


- Click **OK**.
- Click **Save**.

Face Recognition settings

Overview

Setting	Description
Analysis Resolution	Set the resolution for the camera on which the Face Recognition video analytic is active.
Analysis FPS	Set the frames per second for the camera on which the Face Recognition video analytic is active.
Face Confidence Threshold	Set how confident the Face Recognition video analytic must be that objects are faces before it tracks objects.
Max Turn	Set the horizontal angle (in degrees) from center where the Face Recognition video analytic does not track objects. The recommended value is 45 degrees or less. The maximum value is 70 degrees.

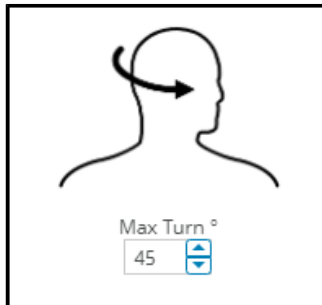

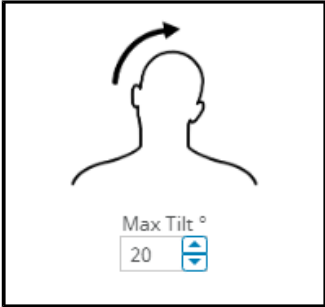Setting	Description
<p>Max Tilt</p>	<p>Set the vertical angle (in degrees) from center where the Face Recognition video analytic does not track objects. The recommended value is 20 degrees or less. The maximum value is 45 degrees.</p> 
<p>Spoof Attack Detection</p>	<p>Select to enable spoofing attack detection. This setting is disabled by default.</p>
<p>Spoof Attack Threshold</p>	<p>Set how confident the video analytic must be that a face is spoofed to trigger a rule. This setting becomes visible when you select Spoof Attack Detection. The value range is 0 to 100. The default value is 99.</p>
<p>Spoof Attack Timeout (seconds)</p>	<p>Set how long the video analytic waits before resetting the spoof attack status. This setting becomes visible when you select Spoof Attack Detection. The range for this setting is -1 (no timeout) to 100. The default value is -1 (no timeout).</p>
<p>Number of Frames to Stabilize Detection</p>	<p>Set the number of frames for which the video analytic must be confident of a spoofed face to trigger a rule. This setting becomes visible when you select Spoof Attack Detection. The range for this setting is 1 to 100. The default value is 10.</p>
<p>Percent of frame height from top ignored for face searching</p>	<p>Define the area at the top of the image that the video analytic ignores as a percentage of the height of the sample image.</p>
<p>Percent of frame width from left ignored for face searching</p>	<p>Define the area at the left side of the image that the video analytic ignores as a percentage of the width of the sample image.</p>
<p>Percent of frame height used for face searching</p>	<p>Define the height of the area in which the video analytic attempts to detect faces as a percentage of the height of the sample image. This percentage is applied after the ignored percentage.</p>
<p>Percent of frame width used for face searching</p>	<p>Define the width of the area in which the video analytic attempts to detect faces as a percentage of the width of the sample image. This percentage is applied after the ignored percentage.</p>
<p>Minimum percentage of frame height for detected faces</p>	<p>Define the minimum size of a face that the video analytic should detect as a percentage of the sample image.</p>

Setting	Description
Maximum percent of frame height for detected faces	Define the maximum size of a face that the video analytic should detect as a percentage of the sample image.


Processing mask

Setting	Description
Drawing Mode	Select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
Size	Select the size of the paintbrush that you use in the processing mask image.

Senstar Sensor Fusion

The Senstar Sensor Fusion combines a perimeter intrusion detection system data with a dedicated video analytic to significantly improve perimeter intrusion detection while reducing false alarms from each individual sensor.

The Senstar Sensor Fusion uses a video analytic to analyze objects close to the fence and correlates the results with data from the perimeter intrusion detection system. The Senstar Sensor Fusion calculates a probability from the video analytic (data including time, object classification, history, and location) and the perimeter intrusion detection system (data containing time, location, magnitude, and frequency), and uses that probability to trigger an alarm with a higher accuracy than alarms triggered by each system individually.

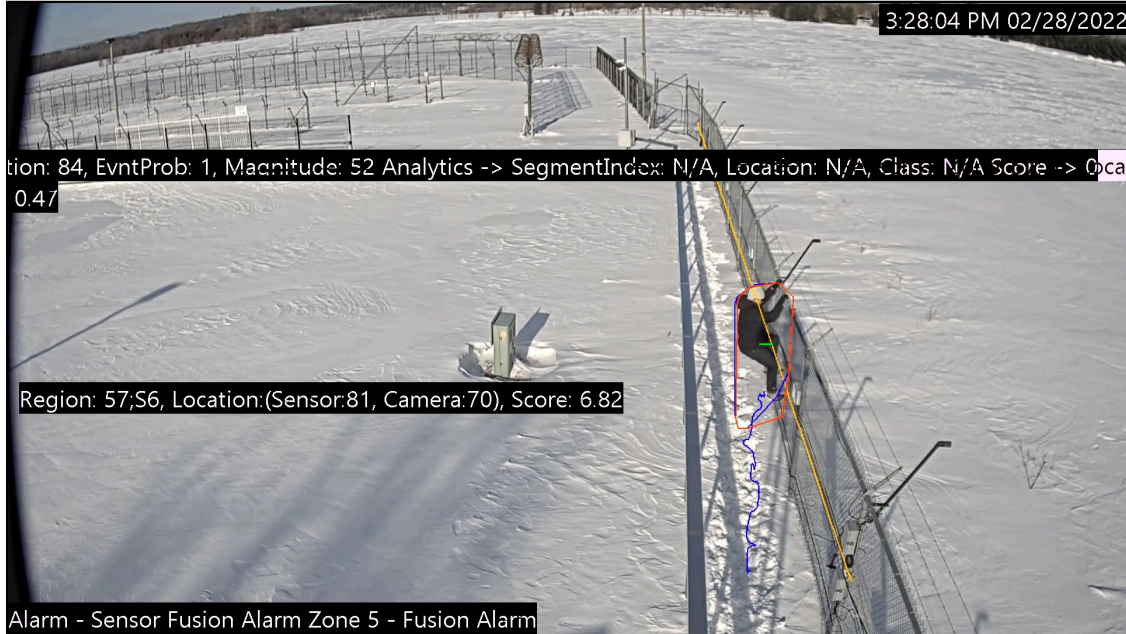

In addition, the Senstar Sensor Fusion provides redundancy if one of the components experiences a failure. When one component experiences a failure, the Senstar Sensor Fusion shifts the weight of the probability to the functional component and triggers alarms based on that probability.

The Senstar Sensor Fusion currently supports the following Senstar perimeter intrusion detection system technology:


- Senstar FlexZone

Configure the Senstar Sensor Fusion

Configure the Senstar Sensor Fusion in the Senstar Symphony Server configuration interface.

For information about specific Senstar Sensor Fusion settings, see the Senstar Sensor Fusion settings topic.

1. In the Senstar Symphony Server configuration interface, click **Devices > Cameras**.
2. Select the camera and click **Edit**.
3. In the **Add-Ons** list, turn Senstar Sensor Fusion on and click **Configure**.

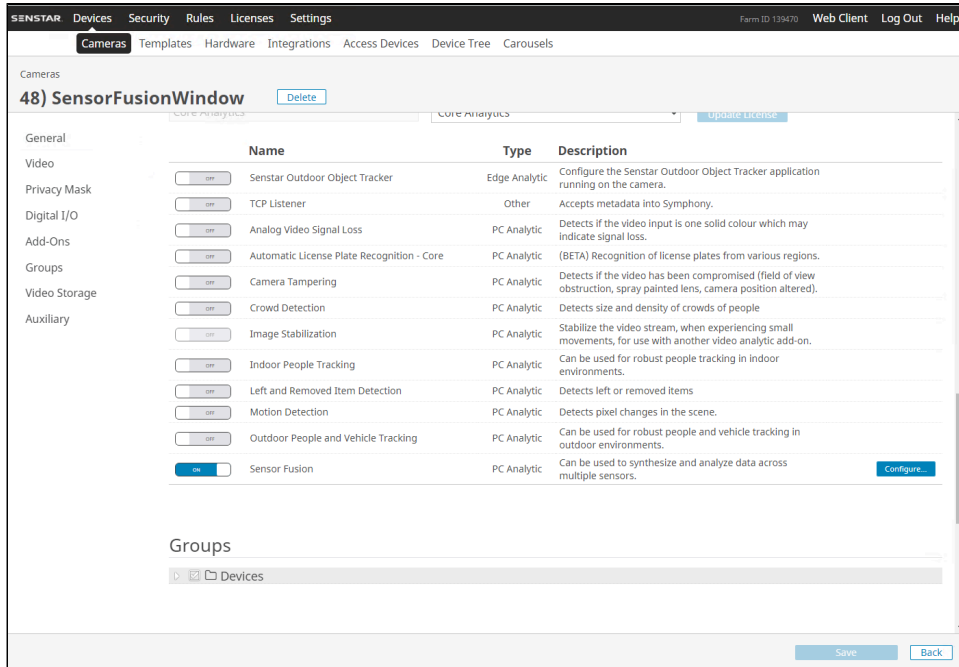

4. In the **Overview** section, configure the resolution and FPS for the camera.
5. In the **Processing Mask** section, set the areas in the image that the camera ignores or analyzes.



- In the **Calibration** section, calibrate the camera to the scene.

Select **Automatic** to have the video analytic automatically determine the camera position and view information.

Select **Uncalibrated** to run the video analytic without camera position and view information.



Warning: Selecting this option greatly reduces the accuracy of the video analytic.


Select **Manual** to manually set the camera position and view information. You can drag the camera to the correct position or adjust the parameters in the applicable fields. The reference person in the image should match, as closely as possible, the size and position of a real person in the view.


Calibration

Type

Manually set the camera position and field of view information.

Instructions

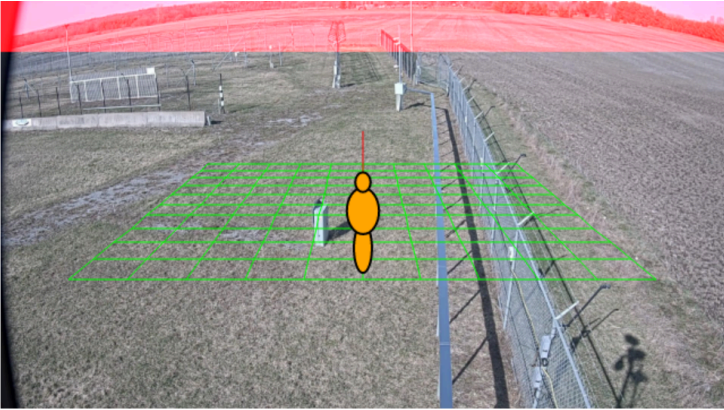



4m 75° 15m Person Ground

Field of view (degrees)

Pan (degrees)

Twist (degrees)

Height (meters)

Distance (meters)

- In the **Sensitivity** section, set how sensitive the Senstar Sensor Fusion is to contrast and motion, and select which options to enable to optimize the camera for the environment.

Sensitivity

Decrease Sensitivity Increase Sensitivity

Object Contrast

Object Motion

Background Motion

Options

Shadow Suppression (Simple)

Shadow Suppression (Complex)

Snow Suppression

Dynamic Background

Thermal Camera

Detect Distant Objects

8. In the **Sensor Segments** section, draw the segments of the of the perimeter intrusion detection system.

Sensor Segments

Instructions



Show Measures

Sensor Segment 1 X

Select a Device ▼

Select a Zone ▼

Range 0 ▲ ▼

To 7 ▲ ▼

Reference Points 8 ▲ ▼

Scale 24 ▲ ▼

Confidence Level 5 ▲ ▼

Buffer Zone Distance 1 ▲ ▼

The sensor segments do not have to cover the entire perimeter intrusion detection system. The coverage of the Senstar Sensor Fusion does not depend on the perimeter intrusion detection system zone configuration; the sensor segments can be part of a single zone, part or multiple zones, or match a zone exactly.

- a) In the image, click and drag to draw a sensor segment that matches both the position and location of the applicable perimeter intrusion detection system zone.
- b) Select **Show Measures**.
Displaying measurements is optional, but the measurements make it easier to add sensor segments.
- c) In the **Name** field, type a name for the sensor segment.
- d) In the **Select a Device** list, select the perimeter intrusion detection system that provides information to the Senstar Sensor Fusion.
- e) In the **Zone** list, select the perimeter intrusion detection system zone that the sensor segment matches.
- f) Set the length of the sensor segment in the **Range** and **To** fields.


The **Range** value should match the starting point of the perimeter intrusion detection system zone.

Example settings


PIDS zone	PIDS length	Range value	To value
1	10	0	10
2	20	10	30
3	10	30	40

- g) In the **Reference Points** field, select how many reference points you want on the sensor segment.

You should add as many reference points as there are fence posts in the perimeter intrusion detection system zone.

 **Warning:** When you add additional reference points to the sensor segment, the yellow lines that mark the buffer zone will converge on the end of the sensor segment. The buffer zones lines will return to normal once you set the **Scale** value in the next step.

- h) In the **Scale** field, adjust the scale of the sensor segment so that the reference points match the fence posts included in the length of the sensor segment.

 **Tip:** To set the scale correctly, focus on two reference points and adjust the scale so that the reference points in the image match the fence posts.


- i) In the **Confidence** field, set how confident the Senstar Sensor Fusion must be to raise an alarm.
- j) In the **Buffer Zone Distance** field, set how far from the sensor segment (and the perimeter intrusion detection system zone) the video analytic looks for objects.

9. Click **OK**.

10. Click **Save**.

Senstar Sensor Fusion settings

Overview

Setting	Description
Analysis Resolution	Select the resolution that the Senstar Sensor Fusion uses to analyze video frames.
Analysis FPS	Select the number of frames per second that Senstar Sensor Fusion uses to analyze video.
Automatically Select Resolution Based on Calibration	Select to automatically set the analysis resolution based on the settings in the Calibration section.
Simple Mode	Select whether to hide or display the advanced settings.  Warning: Changing the advanced settings can adversely affect the performance of the video analytic.



Processing Mask

Setting	Description
Drawing Mode	Select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
Size	Select the size of the paintbrush that you use to draw on the processing mask image.

Calibration

Setting	Description
Type	Select the type of calibration. Manual allows you to set the camera position. Automatic allows the video analytic to set the camera position and field of view. Uncalibrated runs the video analytic without camera position and field of view information.
Zoom In	Click to make the calibration diagram larger.
Zoom Out	Click to make the calibration diagram smaller.
Field of view (degrees)	Define the horizontal field of view (in degrees) for the camera.
Pan (degrees)	Define the rotation around the vertical axis of the camera in relation to the scene.
Twist (degrees)	Define the rotation around the horizontal axis of the camera in relation to the scene.
Height (meters)	Define the vertical distance from the camera to the ground.
Distance (meters)	Define the horizontal distance from the camera to the center of the scene.

Sensitivity

Setting	Description
Object Contrast	Use the slider to set how sensitive the Senstar Sensor Fusion is to differences between objects and the background.
Object Motion	Use the slider to set how sensitive the Senstar Sensor Fusion is to foreground motion when detecting objects.
Background Motion	Use the slider to set how sensitive the Senstar Sensor Fusion is to background motion when detecting objects.
Shadow Suppression (Simple)	Select to use simple shadow suppression. Simple shadow suppression is effective where there are light shadows in the scene.  CAUTION: Do not use shadow suppression with thermal cameras.
Shadow Suppression (Complex)	Select to use complex shadow suppression. Complex shadow suppression is effective where there are dark shadows in the scene.  CAUTION: Do not use shadow suppression with thermal cameras.
Snow Suppression	Select to have the video analytic ignore the motion of snow in the scene.

Setting	Description
Dynamic Background	Select to have the video analytic ignore periodic movement in the background of the scene. This setting is effective for outdoor scenes where weather can cause motion in the background.
Thermal Camera	Select if the camera is a thermal camera.
Detect Distant Objects	Select to have the video analytic attempt to detect objects in the distance.

Sensor Segments

Setting	Description
Show measures	Select to show the distance (meters) between reference points on the image.
Segment name	Type a name for the sensor segment.
Select a Device	Select the perimeter intrusion detection system that provides the data to the Senstar Sensor Fusion.
Select a Zone	Select the zone from the perimeter intrusion detection system that you want to configure the .
Range Start	Set the distance where the camera starts monitoring the fence. This value corresponds to the distance from the perimeter intrusion detection system.
Range End	Set the distance where the camera stops monitoring the fence. This value corresponds to the distance from the perimeter intrusion detection system.
Reference Points	Set how many reference points are on the sensor segment. The reference points need to map to equidistant fence posts or markers placed manually near the fence. The Senstar Sensor Fusion video analytic uses the reference points to generate accurate alarms.
Scale	Set the scale to adjust the distance between the reference points.
Confidence Level	Set how confident the video analytic must be to raise an alarm. The range for this setting is 1 to 10, where 1 is the lowest level of confidence and 10 is the highest level of confidence. A setting of 1 will generate more alarms and a setting of 10 will generate fewer alarms.
Buffer Zone Distance (m)	Set the distance (meters) from the sensor segment where the video analytic starts analyzing the scene. For example, if you set the buffer zone to 5 meters, the video analytic analyses any object that comes within 5 meters of the sensor segment.

Import / Export

Setting	Description
Import XML	Click this button to import a configuration XML file.
Export XML	Click this button to export the configuration XML file.

Senstar Symphony AI Object Detection and Tracking



The Senstar Symphony AI Object Detection and Tracking uses deep neural network machine learning to detect and track objects.

This video analytic intelligently classifies people and vehicles while effectively ignoring background movement. In addition this video analytic maintains detection in poor conditions.

The Senstar Symphony AI Overhead People Tracking and Counting uses a DNN model that is optimized for generic object detection and tracking.

Senstar Symphony AI Object Detection and Tracking settings

Overview

Setting	Description
Analysis Resolution	Select the resolution that the video analytic uses.  Note: This setting is only available if you do not select Automatically Select Resolution Based on Calibration.
Automatically Select Resolution Based on Calibration	Select to let the Senstar Symphony Server select the analysis resolution.
Use GPU instead of CPU	Select to use a supported GPU for analysis. This setting requires an NVIDIA GPU that supports CUDA 11.0 or later.
Analysis FPS	Select the frame rate that the video analytic uses.
Simple Mode	Select whether to hide or display the advanced settings.  Warning: Changing the advanced settings can adversely affect the performance of the video analytic.

Processing mask

Setting	Description
Drawing Mode	Select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
Size	Select the size of the paintbrush that you use to draw on the processing mask image.

Counting line

Setting	Description
Create	On the image, click and hold the left mouse button, move the mouse to draw the new counting line, and release the left mouse button.
Delete	Click a counting line to select it and press Delete.
Move	Hold the CTRL key, click and hold the left mouse button on the counting line endpoint, and drag the endpoint to the
Add a connected counting line	Click and hold the left mouse button on the endpoint of an existing counting line, move the mouse to draw the new counting line, and release the left mouse button.
Change the counting direction	Click an arrow on the counting line to toggle counting for that direction on and off.

Calibration

Setting	Description
Type	Select the type of calibration. Manual allows you to set the camera position. Automatic allows the video analytic to set the camera position and field of view. Uncalibrated runs the video analytic without camera position and field of view information.
Zoom In	Click to make the calibration diagram larger.
Zoom Out	Click to make the calibration smaller.
Field of view (degrees)	Define the horizontal field of view (in degrees) for the camera.
Pan (degrees)	Define the rotation around the vertical axis of the camera in relation to the scene.
Twist (degrees)	Define the rotation around the horizontal axis of the camera in relation to the scene.
Height (meters)	Define the vertical distance from the camera to the ground.
Distance (meters)	Define the horizontal distance from the camera to the center of the scene.

Sensitivity

Setting	Description
Maximum Hidden Seconds	Set how many seconds an object can remain hidden before the video analytic stops tracking the object. If, after this time elapses, the video analytic detects the object again, the video analytic treats the object as a new object (i.e., the video analytic gives the object a new ID).

Setting	Description
Minimum Confidence	Set how confident the video analytic must be in object detection to classify the object.
Minimum Tracking Threshold	Set how confident the video analytic must be in object detection to track the object.

Senstar Symphony AI Overhead People Tracking and Counting



The Senstar Symphony AI Overhead People Tracking and Counting uses deep neural network machine learning to track and count people.

This video analytic intelligently detects and counts people using an overhead camera.

The Senstar Symphony AI Overhead People Tracking and Counting uses a DNN model that is optimized for overhead cameras.

Senstar Symphony AI Thermal Object Detection and Tracking settings

Overview

Setting	Description
Analysis Resolution	Select the resolution that the video analytic uses.  Note: This setting is only available if you do not select Automatically Select Resolution Based on Calibration.
Automatically Select Resolution Based on Calibration	Select to let the Senstar Symphony Server select the analysis resolution.
Use GPU instead of CPU	Select to use a supported GPU for analysis. This setting requires an NVIDIA GPU that supports CUDA 11.0 or later.
Analysis FPS	Select the frame rate that the video analytic uses.
Simple Mode	Select whether to hide or display the advanced settings.  Warning: Changing the advanced settings can adversely affect the performance of the video analytic.

Processing mask

Setting	Description
Drawing Mode	Select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
Size	Select the size of the paintbrush that you use to draw on the processing mask image.

Counting line

Setting	Description
Create	On the image, click and hold the left mouse button, move the mouse to draw the new counting line, and release the left mouse button.
Delete	Click a counting line to select it and press Delete.
Move	Hold the CTRL key, click and hold the left mouse button on the counting line endpoint, and drag the endpoint to the
Add a connected counting line	Click and hold the left mouse button on the endpoint of an existing counting line, move the mouse to draw the new counting line, and release the left mouse button.
Change the counting direction	Click an arrow on the counting line to toggle counting for that direction on and off.

Calibration

Setting	Description
Type	Select the type of calibration. Manual allows you to set the camera position. Automatic allows the video analytic to set the camera position and field of view. Uncalibrated runs the video analytic without camera position and field of view information.
Zoom In	Click to make the calibration diagram larger.
Zoom Out	Click to make the calibration smaller.
Field of view (degrees)	Define the horizontal field of view (in degrees) for the camera.
Pan (degrees)	Define the rotation around the vertical axis of the camera in relation to the scene.
Twist (degrees)	Define the rotation around the horizontal axis of the camera in relation to the scene.
Height (meters)	Define the vertical distance from the camera to the ground.
Distance (meters)	Define the horizontal distance from the camera to the center of the scene.

Sensitivity

Setting	Description
Maximum Hidden Seconds	Set how many seconds an object can remain hidden before the video analytic stops tracking the object. If, after this time elapses, the video analytic detects the object again, the video analytic treats the object as a new object (i.e., the video analytic gives the object a new ID).

Setting	Description
Minimum Confidence	Set how confident the video analytic must be in object detection to classify the object.
Minimum Tracking Threshold	Set how confident the video analytic must be in object detection to track the object.

Senstar Symphony AI Thermal Object Detection and Tracking



The Senstar Symphony AI Thermal Object Detection and Tracking video analytic uses deep neural network machine learning to detect and track objects.

This video analytic intelligently classifies people and vehicles while effectively ignoring background movement when you are using thermal cameras.

The Senstar Symphony AI Thermal Object Detection and Tracking uses a DNN model that is optimized for thermal cameras.

Senstar Symphony AI Thermal Object Detection and Tracking settings

Overview

Setting	Description
Analysis Resolution	Select the resolution that the video analytic uses.  Note: This setting is only available if you do not select Automatically Select Resolution Based on Calibration.
Automatically Select Resolution Based on Calibration	Select to let the Senstar Symphony Server select the analysis resolution.
Use GPU instead of CPU	Select to use a supported GPU for analysis. This setting requires an NVIDIA GPU that supports CUDA 11.0 or later.
Analysis FPS	Select the frame rate that the video analytic uses.
Simple Mode	Select whether to hide or display the advanced settings.  Warning: Changing the advanced settings can adversely affect the performance of the video analytic.

Processing mask

Setting	Description
Drawing Mode	Select whether the paintbrush marks areas in the processing mask image to include (Analyze) or exclude (Ignore).
Size	Select the size of the paintbrush that you use to draw on the processing mask image.

Counting line

Setting	Description
Create	On the image, click and hold the left mouse button, move the mouse to draw the new counting line, and release the left mouse button.
Delete	Click a counting line to select it and press Delete.
Move	Hold the CTRL key, click and hold the left mouse button on the counting line endpoint, and drag the endpoint to the
Add a connected counting line	Click and hold the left mouse button on the endpoint of an existing counting line, move the mouse to draw the new counting line, and release the left mouse button.
Change the counting direction	Click an arrow on the counting line to toggle counting for that direction on and off.

Calibration

Setting	Description
Type	Select the type of calibration. Manual allows you to set the camera position. Automatic allows the video analytic to set the camera position and field of view. Uncalibrated runs the video analytic without camera position and field of view information.
Zoom In	Click to make the calibration diagram larger.
Zoom Out	Click to make the calibration smaller.
Field of view (degrees)	Define the horizontal field of view (in degrees) for the camera.
Pan (degrees)	Define the rotation around the vertical axis of the camera in relation to the scene.
Twist (degrees)	Define the rotation around the horizontal axis of the camera in relation to the scene.
Height (meters)	Define the vertical distance from the camera to the ground.
Distance (meters)	Define the horizontal distance from the camera to the center of the scene.

Sensitivity

Setting	Description
Maximum Hidden Seconds	Set how many seconds an object can remain hidden before the video analytic stops tracking the object. If, after this time elapses, the video analytic detects the object again, the video analytic treats the object as a new object (i.e., the video analytic gives the object a new ID).

Setting	Description
Minimum Confidence	Set how confident the video analytic must be in object detection to classify the object.
Minimum Tracking Threshold	Set how confident the video analytic must be in object detection to track the object.

Senstar Symphony Client

The Senstar Symphony Client includes functionality to monitor cameras, manage video, generate reports, and configure alarms.

The Senstar Symphony Client is automatically installed with the Senstar Symphony Server, but you can also install the Senstar Symphony Client on additional computers and connect to the Senstar Symphony Server.

You can use the Senstar Symphony Client interface to access the Senstar Symphony Server configuration interface.

The Senstar Symphony Client presents important system information in a list that you can access by clicking the envelope icon in the Senstar Symphony Client interface. The envelope icon includes an indication when there are unread messages. In addition, you can ignore all or some of the notifications.

Open command

You can open the Senstar Symphony Client using a command in the command line. In addition, you can add arguments to the command that open specific cameras and, in the case of PTZ cameras, specific camera presets.

In custom application development, you can associate this command with a control to open the Senstar Symphony Client from another application.

```
ae.exe ai://server/camera/preset
```

Where:

- *server* is the address of the server
- *camera* is the ID of the camera
- *preset* is the preset for the PTZ camera

Change your password

You can change the password for your user account in the Senstar Symphony Client interface.

This process changes your password for the Senstar Symphony Server farm that the Senstar Symphony Client is connected to.



Note: This feature is not available if you use Active Directory authentication for your Senstar Symphony Server.

1. In the Senstar Symphony Client interface, click your user name in the toolbar and then click **Change Password**.
2. In the **Old Password** field, type your password.
3. In the **New Password** field, type the password that you want to change to.
4. In the **Confirm Password** field, type the password that you want to change to again.
5. Click **Change Password**.

View log files

You can view, search, and download log files for the Senstar Symphony Client and any Senstar Symphony Server to which the Senstar Symphony Client connects.

1. In the Senstar Symphony Client interface, click **Help > View Detailed Logs**.
2. In the **Date** field, select the date for which you want to view log files.
3. Select a server or the client.
4. Select the log file to view.

5. To copy the visible log file, click **Copy to Clipboard**.
6. To download log files, perform the following tasks:
 - a) Click **Download**.
 - b) Select the start and end date, or select **Download all logs from server**.
 - c) Click **Download**.
7. To search the visible log file, perform the following tasks:
 - a) In the text field, type the search text.
 - b) Click **Find Next**.

View events

You can view and export events for the Senstar Symphony Client and any Senstar Symphony Server to which the Senstar Symphony Client connects.

Events are stored in the audit log in the Senstar Symphony Database. By default, the Senstar Symphony Client interface displays the events for the current day.

1. In the Senstar Symphony Client interface, click **Help > View Audit**.
2. Select the start date and time and the end date and time.
3. Click **Reload**.
4. To group the events, drag a column
5. To export the events as a CSV file, click **Export**.

Lock times

You can lock times on navigation in the Senstar Symphony Client interface to make all camera view panels display video from the same time.

For example, if you have four camera view panels open in the Senstar Symphony Client interface, and you click a bookmark for video from the previous day, all of cameras in the camera view panels will attempt to show video from the time of the bookmark.

Locking times on navigation supports a maximum of four camera view panels.

In the Senstar Symphony Client interface, click the **Lock Times On Navigation** icon (clock).

Adjust the number of locked camera view panels

You can set the maximum number of camera panels to which you can apply the Lock Times On Navigation feature.

By default, the limit is four camera view panels. Increasing the limit and applying the Lock Times On Navigation feature to more camera view panels increases the system resources that the Senstar Symphony Client uses.

1. Open the `acc.ini` file at `%appdata%\Senstar7`.
2. Add the following values:

```
[VideoRecvCTRL]
LockTimesPanelLimit=number_of_panels
```

Where *number_of_panels* is the maximum number of camera view panels on which you can use the Lock Times On Navigation feature.

3. Save and close the `acc.ini` file.

Customize the toolbar

You can change the icons that appear on the toolbar in the Senstar Symphony Client interface.

1. In the Senstar Symphony Client interface, click the down arrow.
2. Click **Add or Remove Buttons > Main Menu**
3. Select the icons to add to or remove from the toolbar.
4. To restore the toolbar to the default, click **Reset Toolbar** and click **OK**.

Disable single sign-on

You can disable the single sign-on option when changing users and registering new farms in the Senstar Symphony Client.

When you disable single sign-on, the Windows Authentication check box is disabled when you change users or when you register a new Senstar Symphony Server farm.

1. Open the `acc.ini` file at `%appdata%\Senstar8`.
2. In the `[Main]` section, add the following text:

```
DisableWindowsAuthentication=True
```

3. Save and close the `acc.ini` file.

Configure the SSL certificate timeout

You can set how long the Senstar Symphony Client waits for a valid certificate before it falls back to a non-SSL connection.

The default timeout for the SSL certificate is 15000 milliseconds.

1. Open the `acc.ini` file at `%appdata%\Senstar8`.
2. Add the following text to the `acc.ini` file:


```
[Connectivity]  
ReceiveTimeoutInMilliseconds=timeout
```

Where *timeout* is how long the Senstar Symphony Client waits for a valid SSL certificate.

3. Save and close the `acc.ini` file.

Device tree

The device tree in the Senstar Symphony Client interface lists the cameras, devices, and carousels available on the Senstar Symphony Server.

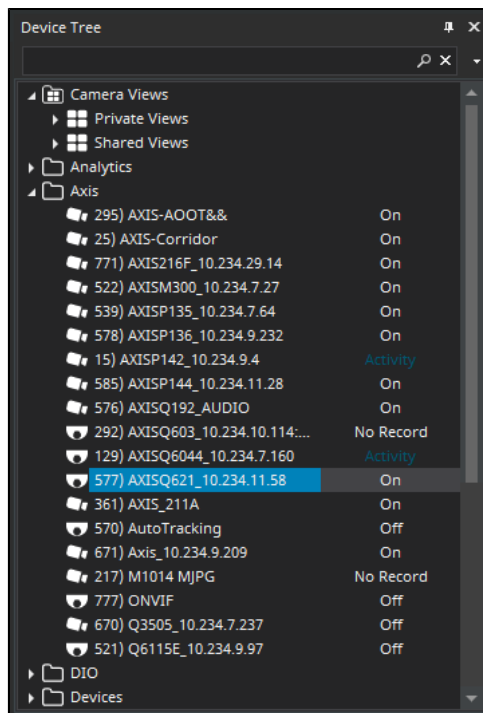

You can search for cameras, devices, and carousels in the device tree. To search, type your search criteria in the search field and click Search. The Senstar Symphony Client filters the device tree to show only those results that match your search criteria. To restore the device tree, press the X in the search field.

The device tree also displays the states of cameras and devices connected to the Senstar Symphony Server.

The device tree includes a context menu that lets you send commands to devices. If you right-click a device in the device tree, the Senstar Symphony Client displays applicable commands.

Search the device tree

You can search the device tree for cameras, devices, inputs and outputs, and carousels.

When you search the device tree, the Senstar Symphony Client filters the device tree to only includes devices that match your search criteria.

1. In the Senstar Symphony Client interface, type the search term in the search field of the device tree.
2. In the list, select the properties that you want to search.
You can search the camera ID, camera name, camera code, and description.
3. To limit the results to items that exactly match you search terms, select **Exact Matches Only**.
4. To exclude items that match you search terms from the search results, select **Exclude Matches**.
For example, you can use On as a search term and select **Exclude Matches** to display all items that do not have the status of On.
5. Click the search icon.

To restore the device tree list, click the X icon.

Display a list of users viewing a camera

You can view a list of users who are logged in to a Senstar Symphony Client that has a camera active in a camera view panel.

To display a list of users viewing a camera, you must be an administrator user.

1. In the **Senstar Symphony Client interface**, right-click a camera.
2. Click **Users Viewing Camera**.
3. To refresh the list of users viewing the camera, click **Refresh**.

Suspending access to video

The Senstar Symphony Server includes functionality to suspend access to video (ban video) from a camera or camera group for a specific user group.

To use this feature, you must create a user group called *UserBanGroup*. When you suspend access to video, the users in the *UserBanGroup* group cannot view video from the camera, while other users can view video from the camera. The users in the *UserBanGroup* group cannot view video again until you resume access to video (unban video).

When you suspend access to video from a camera or camera group, the camera or camera group appears in the Senstar Symphony Server configuration interface.

Create a user group for suspending access to video

To suspend access to video, you must create a user group and add the group to the Senstar Symphony Server.

1. In the Senstar Symphony Client interface, perform the following tasks:
 - a) Create a group called *UserBanGroup*.
 - b) Add any users that you want to prevent from viewing video to the *UserBanGroup*.
 - c) If you want to suspend access to video on video walls, add users who can log in to video wall clients to the *UserBanGroup*.
2. In the Senstar Symphony Client interface, perform the following tasks:
 - a) Click **Server Configuration > Manual Configuration Editor**.
 - b) Click **Add a new setting**.
 - c) Enter the following values:

```
Type = Global
Section = Main
ID = <empty>
Key = LiveBanGroup
Value = UserBanGroup
```
 - d) Press Enter.
 - e) Click **OK**.

Suspend access to video

You can suspend access to video (ban video) from a camera or camera group for a specific user group.

1. In the Senstar Symphony Client interface, right-click a camera or camera group in the device tree.
2. Click **Ban Video**.

To resume access to video, click **Unban Video**.

Create a camera tour

You can create a tour of preset locations for a PTZ camera to visit in the Senstar Symphony Client interface.

1. In the **Senstar Symphony Client interface**, right-click a camera in the **Device Tree**.
2. Click **Camera Tour**.
3. For each location in the camera tour, perform the following tasks:
 - a) Use the PTZ controls to move the camera to the desired location and zoom.
 - b) Click **Add Live View PTZ Location To The List**.
 - c) Click the tour location and edit its details.
4. To set the schedule for the camera tour, perform the following tasks:
 - a) Click **Set Schedule For This Tour**.
 - b) In the schedule list, select an existing schedule or **Create new schedule**.
 - c) If you create a new schedule, type a name for the schedule.
 - d) Mark the cells as either active or inactive.
 - e) Click **OK**.
5. Click **OK**.

Change IO state

You can change the state of the outputs on devices in the **Senstar Symphony Client interface**.

1. In the **Senstar Symphony Client interface**, right-click a camera in the **Device Tree**.
2. Click **Change IO state**.
3. In the **Device** list, select the device on which to change the output state.
4. In the **Relay #** field, specify the module and port for the output.
5. Click **Activate** or **Deactivate**.

Link a camera view

You can link camera views so that multiple camera views open when you open a camera view. When you open the primary camera view, the Senstar Symphony Client opens the linked camera views in new floating views.

Before you begin, save at least two camera views (one primary and one secondary).

Linking camera views is an easy way to open numerous camera view panels.

1. In the **Senstar Symphony Client interface**, right-click a camera view in the **Device Tree**.
2. Click **Configure Camera View**.
3. In the **Select linked view** list, select the secondary camera views that open when you open the primary camera view.
4. To close any unused camera view panels when you open a new camera view, select **Close overlapping views**.
5. Click **OK**.

Disconnect audio

You can disconnect the audio from a camera so that the Senstar Symphony Client does not receive any audio from the camera.

When you disconnect audio, the Enable Audio Input setting for the camera in the Senstar Symphony Server configuration interface is cleared.



Note: Connecting and disconnecting audio causes the Senstar Symphony Client to restart the connection to the camera.

1. In the **Senstar Symphony Client interface**, right-click a camera in the **Device Tree**.
2. Click **Disconnect audio**.
Any video that the Senstar Symphony Client displays or records from the camera when the audio is disconnected does not include audio.

To connect the audio again, click **Connect audio**.

Hide device status

You can hide the status of devices in the device tree.

1. In the Senstar Symphony Client interface, click **View > Settings**.
2. Click the **Customize** tab.
3. In the **Device Tree** pane, clear the **Show Device Status** box.
4. Click **OK**.

Server list

The Senstar Symphony Client interface lists the Senstar Symphony Server instances to which the Senstar Symphony Client is connected and the state of those instances. You can select a Senstar Symphony Server to access the cameras and devices that are connected to that instance.

By default, the Senstar Symphony Client interface displays the Senstar Symphony Server instances to which the Senstar Symphony Client can access in the Farm list on the toolbar.

Optionally, you can configure the Senstar Symphony Client interface to display the Senstar Symphony Server instances to which the Senstar Symphony Client can connect in a server list panel. Enabling the server list panel hides the server list in the toolbar.

The farm list and the server list panel include all of the Senstar Symphony Server instances to which you have configured a connection.

Related tasks

[Connect to a server](#) on page 178

You can connect a Senstar Symphony Client to multiple Senstar Symphony Server instances.

Select the active server using the farm list

You can select the active Senstar Symphony Server in the farm list on the toolbar.

The farm list is visible in the Senstar Symphony Client interface by default.

1. In the Senstar Symphony Client interface, click the down arrow in the farm list.
2. In the server list, click the Senstar Symphony Server that you want to be active in the Senstar Symphony Client.

Enable the server list pane

You can display the service list as a panel in the Senstar Symphony Client interface.

1. Open the `acc.ini` file at `%appdata%\Senstar8`.
2. Set the `ShowFarmDropDown` value in the `Main` to `False`.
3. Save and close the `acc.ini` file.
4. Start the Senstar Symphony Client.
5. In the Senstar Symphony Client interface, click **View > Server List**.

Select the active server using the server list


Before you begin, you must enable the server list pane.

In the **Server List** pane of the Senstar Symphony Client interface, click the Senstar Symphony Server that you want to be active in the Senstar Symphony Client.

View panels

View panels can display live video, recorded video, decorations from cameras, browser pages, and maps in the Senstar Symphony Client interface.

View panels can display overlays with controls for the camera. To hide the overlays, you can press and hold the Shift key while you perform actions (for example, box zoom) in the camera view panel.

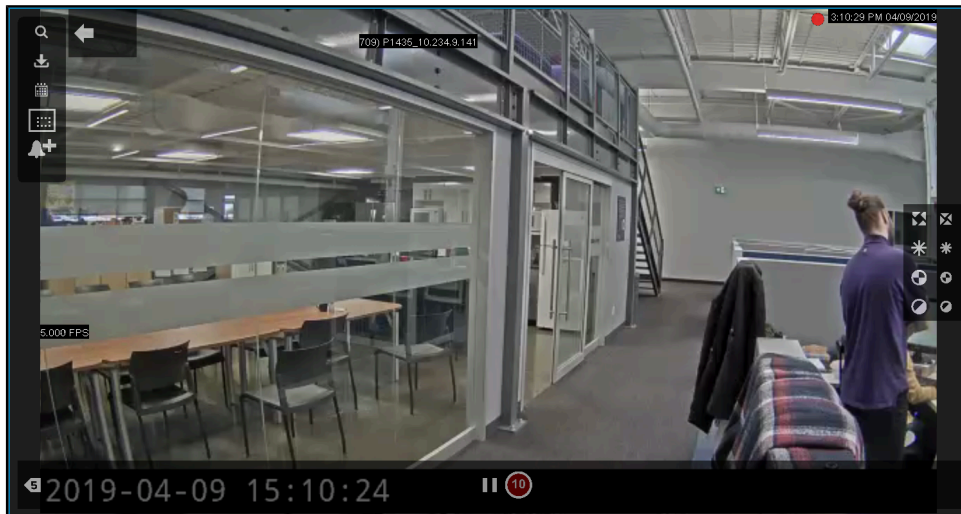

View a camera

You can view a camera in each camera view panel in the Senstar Symphony Client interface.

Before you begin:

- Add a camera to the Senstar Symphony Server
 - Open a floating or docked camera view
1. In the Senstar Symphony Client interface, click a camera view.
 2. In the device tree, click the camera that you want to view.

View a browser

You can view a browser in each camera view panel in the Senstar Symphony Client interface.

Before you begin:

- Add a browser to the Senstar Symphony Server
 - Open a floating or docked camera view
1. In the Senstar Symphony Client interface, click a camera view panel.
 2. In the device tree, click the browser that you want to view.

View a map

You can view a map in each camera view panel in the Senstar Symphony Client interface.

Before you begin:

- Add a map to the Senstar Symphony Client
 - Open a floating or docked camera view
1. In the Senstar Symphony Client interface, click a camera view panel.
 2. In the device tree, click the browser that you want to view.

View a Senstar Thin Client

You can view a Senstar Symphony Client interface device in the Senstar Symphony Client interface.

Before you begin:

- Add a Senstar Thin Client to the Senstar Symphony Server

When you view a Senstar Thin Client in the Senstar Symphony Client interface, the Senstar Thin Client opens in a new floating view.

In the device tree, click the Senstar Thin Client that you want to view.

View picture in picture

You can view live video in a nested window when viewing recorded video.

The picture-in-picture window displays live video while the main camera view panel displays historical video.

1. In a camera view panel in the Senstar Symphony Client interface, perform one of the following tasks:
 - a) Right-click in the camera view panel and click **Show Picture in Picture**.
 - b) Hover in the camera view panel and click the **Picture in Picture** icon.
2. View recorded video in the main camera view panel to display live video in the picture-in-picture window.
3. To move the picture-in-picture window, click one of the icons in the corner of the picture-in-picture window to move the window to that corner of the camera view panel.

View instant replay

You can play historical video either 5 or 10 seconds behind live video in the in the Senstar Symphony Client.

You can select the instant replay duration on the Video Settings page in the Senstar Symphony Client settings.

1. In the Senstar Symphony Client interface, set the instant replay duration.
2. In a video pane in the Senstar Symphony Client interface, click the **Instant Replay** icon.
3. View recorded video.

To end the instant replay, click the **Go to live view** icon.

Related reference

[Video settings](#) on page 166

The video settings determine the behavior of PTZ cameras, the appearance of video decorations, instant replay, and the characteristics of video in the Senstar Symphony Client.

Save a camera view

You can save the layout of a docked or floating view to provide easy access to the view configuration.

1. In the Senstar Symphony Client interface, click **Camera View > Save Current View**.
2. In the **Save As** window, perform one of the following tasks:
 - To overwrite an existing camera view, select **Existing Camera View** and select the existing camera view to overwrite.

- To save as a new camera view, select **New Camera View** and type a name for the camera view.
3. To make the saved camera view public, select **Shared with other users**.
 4. Click **OK**.

Load a camera view

1. In the Senstar Symphony Client interface, click **Camera View > Load Camera View**.
2. Select the camera view to load.

Open a docked camera view

You can open a camera view in the Senstar Symphony Client interface.

The Senstar Symphony Client includes camera views with 1, 4, 6, 9, 16, and 25 camera view panels.

1. In the Senstar Symphony Client interface, click **Camera View > New Docked View**.
2. Click the camera view that you want to open.

Open a floating camera view

You can open a camera view in a new window.

The Senstar Symphony Client includes camera views with 1, 4, 6, 9, 16, and 25 camera view panels.

To prevent the view panels in the floating from changing, click the **Prevent panel selection** icon (lock) in the floating view. Although you cannot select the panel, you can still place the focus on the panel by clicking in the panel.

1. In the Senstar Symphony Client interface, click **Camera View > New Floating View**.
2. Click the camera view that you want to open.

Add a camera view panel

You can add a camera view panel to the Senstar Symphony Client interface. A new camera view panel appears as a floating camera view panel, but you can dock it in the Senstar Symphony Client interface.

1. In the Senstar Symphony Client interface, click **Add Camera View Panel**.
2. Drag the camera view panel to the desired location.

Add an alarm


You can add a manual alarm to a camera in the Senstar Symphony Client.

You can use manual alarms to activate the action set associated with the manual rule.

1. In the Senstar Symphony Client interface, open the camera to which you want to add an alarm in a camera view panel.
2. Hover over the camera view panel containing the camera to which you want to add an alarm and click the **Alarm** icon.

Add an alarm indicator

You can display an alarm indicator around a camera view panel. The alarm indicator flashes for a specific time or until you acknowledge the alarm.

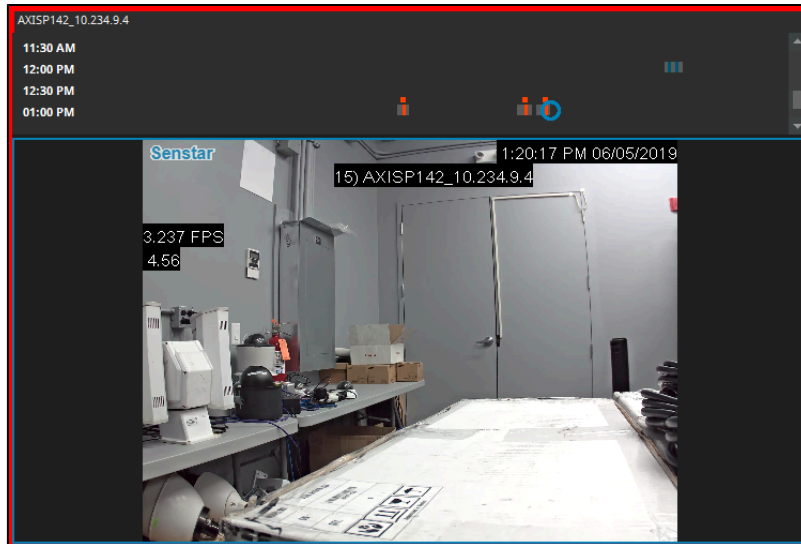

1. In the Senstar Symphony Client interface, click **View > Settings**.
2. Click the **Alarms** tab.
3. Select **Flash panel on alarm**.
4. In the **Number of seconds to flash alarm** field, type how long the camera view panel flashes when the camera records an alarm.
5. Click **OK**.

Configure a camera view panel

1. In the Senstar Symphony Client interface, right-click a camera view panel.
2. Click **Settings**.
3. Configure the settings for the camera view panel.
4. To apply the settings to all of the camera view panels, click **Other > Apply To All**.
5. Click **Apply**.
6. Click **OK**.

Change the view panel name

You can change the name of the panels in the Senstar Symphony Client.

By default, panel names include the name of the computer, the port, a label for either a docked view or a floating view, and an identifier for the panel.

1. In the Senstar Symphony Client interface, right-click in the panel.
2. Click **Settings**.
3. On the **Child** tab, type the new name in the **Panel Name** field.
4. Click **OK**.

View alarm cameras in the panel

You can select the view panel that displays the camera that you want to view on alarm by default.

If you select more than one camera to view on alarm, the panel that you chose to view alarm cameras becomes the starting panel with other panels from left to right and from top to bottom rows in the Senstar Symphony Client interface displaying any additional cameras that you select to view on alarm.

1. In the Senstar Symphony Client interface, right-click the view panel that you want to display cameras from the alarm.
2. Click **Settings**.
3. On the **Activity** tab, select **Switch view when an alarm occurs**.
4. To display other cameras listed in the view on alarm list in different view panels, select **Show alarm cameras in other panels**.
5. To limit changes to specific cameras and alarms, select **Limit action to specific cameras or alarms** and select the cameras and alarms in the list.
6. Click **Apply**.
7. Click **OK**.

Prevent view panel content from changing

In the Senstar Symphony Client, you can prevent a view panel from changing the content (e.g., camera, map, or browser) it displays.

You can prevent content changes in view panels by using the context menu for each view panel. To prevent view panel content from changing in a docked view, you can click the **Prevent panel content changes** (lock) icon in the toolbar of the docked view window.

1. In the Senstar Symphony Client interface, right-click the view panel.
2. Click **Prevent panel content changes**.

To toggle this setting, click **Allow panel content changes**.

Camera view settings

Appearance

Setting	Description
Lock Timeline Height When Resize Occurs	Select to prevent the timeline from resizing when you change the size of the camera view panel.
Overlay Camera Messages	Select to display messages from the camera in the camera view panel.
Overlay Time	Select to display the time in the camera view panel.
Overlay Tracking Boxes	Select to display boxes for video analytics in the camera view panel.
Overlay video retention on video	Select to display how many days of video for the camera.
Overlay Messenger Messages	Select to display messages in the camera view panel and set how many seconds the messages remain visible.
Overlay Tracking Paths	Select to display paths for video analytics in the camera view panel.

Setting	Description
Overlay Date	Select to display the date in the camera view panel.
Overlay Thick Decoration	Select to display tracking boxes and paths as larger lines.
Overlay Recording Indicator	Select to display the recording indicator in the camera view panel.
Video Quality	Select the resolution for the camera view panel. The default resolution is the resolution set for the camera.
Display Mode	Select the size and aspect ratio of the video to display in the camera view panel.

Activity

Setting	Description
Switch view when an alarm occurs	Select to switch the camera view panel when an alarm occurs.
Switch view when motion occurs	Select to switch the camera view panel when motion occurs.
Show alarm cameras in other panels	If the rule for the alarm includes the View other cameras on alarm option, select this option to switch the other camera view panels to those cameras. This setting becomes visible when you select Switch view when an alarm occurs .
Limit action to specific cameras or alarms	Select this option and specify the cameras to limit the activity of the camera view panel to specific cameras or alarms. This setting becomes visible when you select Switch view when an alarm occurs or Switch view when motion occurs .
Ensure Visible	Select to bring the camera view panel into focus whenever an alarm or motion occurs.
Display	Select the whether the camera view panel changes to video or a still image.
Perform action after switch	Select to perform an action when an alarm or motion occurs.
Disable switching after switch occurs	Select to prevent the camera view panel from switching to another camera after a subsequent alarm or motion occurs.
Hide switched view after seconds	Set how many seconds the camera view panel displays the switched camera view.
Go back to previous state after seconds	Select this option and specify the number of seconds to return the camera view panel to the state prior to the alarm switch.

Child

Setting	Description
Show latest alarm when the camera displayed in another panel changes	Select to display the latest alarm from the primary camera view panel.
Panel Name	You can use the panel name with the video wall feature and the Senstar Symphony SDK. You can use the default name or change it to something more meaningful.

Tracking

Setting	Description
Digitally zoom in on hot spots	Select to automatically zoom in on objects that video analytics detect. This setting works for both live and recorded video.

Other

Setting	Description
Apply To All	Click to apply your changes to all of the active camera view panels.

Search

You can search video from a camera for objects and events.

- In the Senstar Symphony Client interface, perform one of the following tasks:
 - Right-click the camera view panel and click **Search**.
 - Hover over the camera view panel and click the Search icon.
- In the **Class** pane, select the type of object for which to search.
- In the **Behavior** pane, select whether the object should be moving or loitering and for how long it should demonstrate the behavior.
- Select whether to define the search area by a mask or fences.
- In the **Include** pane, select the parts of the object or object movement the must pass through the search area for the object to be included in the search results.
- In the **Draw** pane, select whether to add or remove mask area or fences.
- Define the search period in the **From** and **To** fields.
- In the **Search For** pane select whether to search for any events or only events that trigger alarms. Changing this selection changes the settings that are available in the **Search** window.
- In the **Add-Ons** pane (available if you search for any events), select the video analytic events to search.
- In the **Rules** pane, select the rule events to search.
- In the **Stream** list, select the stream to search.
- Click **Search**.

View video by date

You can view video from a specific date and time in a camera view panel.

Dates for which the camera has video appear as bold in the calendar.

1. In a camera view panel in the Senstar Symphony Client interface, perform one of the following tasks:
 - a) Right-click in the camera view panel and click **Date**.
 - b) Hover in the camera view panel and click the **Date** icon.
2. Specify a date and time.
3. Click **Select**.

Record video manually

You can manually start recording video from a camera that is not set to always record.

You can start recording from the view panel that is displaying video from the camera in the Senstar Symphony Client interface. When you start recording from the view panel, video is recorded for increments of 10 minutes.

Additionally, you can start and stop recording for a camera from the context (right-click) menu in the device tree in the Senstar Symphony Client interface. If you start recording from the context menu, there is no time limit and the camera will continue to record until you manually stop recording from the context menu.

1. In the Senstar Symphony Client interface, click the **Start Recording** button to record 10 minutes of video from the camera.
2. To add 10 more minutes, click the **Start Recording** button again.
You can click the button multiple times to add multiple 10-minute increments.

The camera view panel displays an icon to show that the Senstar Symphony Server is recording video.

Open by address

You can open an alarm, camera, or video from a specific time in the active camera view panel.

After you enter a valid address, the active camera view panel will display the video that you specify.

1. In the Senstar Symphony Client interface, press the **F5** key.
2. In the **Enter address** window, perform one of the following tasks:
 - Type an alarm ID.
 - Type a camera ID.
 - Type the server name and camera ID. Use the format `http://computer_name/camera_id/date_time`.
3. Click **OK**.



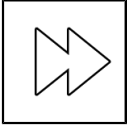
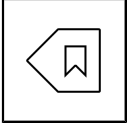
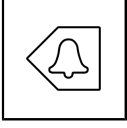
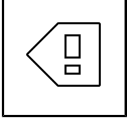
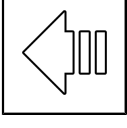
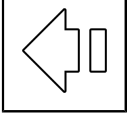
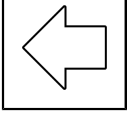
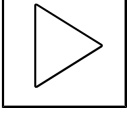
View summary video









You can view summary video from a camera that is running a video analytic.

Summary video skips footage in which the video analytic does not detect any events and shows footage in which the video analytic detects events at a speed of 16 X.


1. In the Senstar Symphony Client interface, view video from a camera that is running a video analytic.
2. In the timeline, navigate to historical video.
3. Click the **Summarize Video** icon to play summary video.

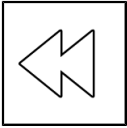


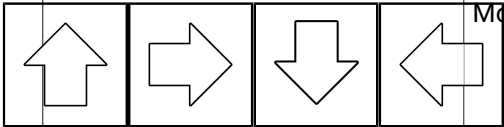
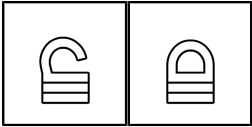
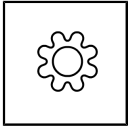
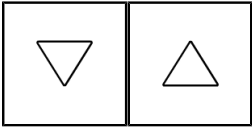
Video controls

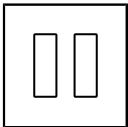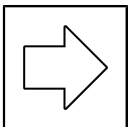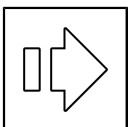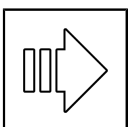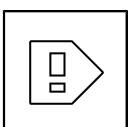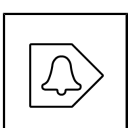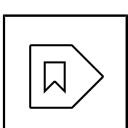Control	Description
	Reduce the speed of playback.
	Slide to adjust the speed of playback.
	Increase the speed of playback.
	Navigate to the previous bookmark.
	Navigate to the previous alarm.
	Navigate to the previous activity.
	Go back ten seconds.
	Go back one second.
	Go back one frame.
	Play video.



Control	Description
	<p>Pause video.</p>
	<p>Go forward one frame.</p>
	<p>Go forward one second.</p>
	<p>Go forward ten seconds.</p>
	<p>Navigate to the next activity.</p>
	<p>Navigate to the next alarm.</p>
	<p>Navigate to the next bookmark.</p>
	<p>Show live video</p>



PTZ controls

Control	Description
	<p>Move the PTZ camera to a preset location.</p>

Control	Description
	Increase the zoom on the PTZ camera.
	Decrease the zoom on the PTZ camera.
	Move the PTZ camera to the home position.
	Move the PTZ camera.
	Lock or unlock PTZ camera movement.
	Open the Camera Tour configuration page.
	Expand or collapse the camera controls.

Camera controls

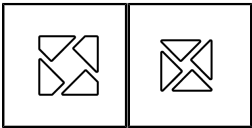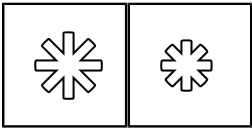
Control	Description
	Open or close the iris of the camera to adjust how much light enters the lens of the camera.
	Increase or decrease the brightness of the camera.

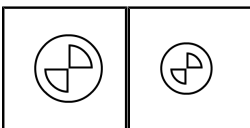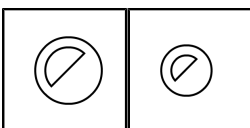Control	Description
	Adjust the focus of the camera.
	Adjust the contrast of the camera.


Timeline

A timeline displays activities and alarms for cameras in the Senstar Symphony Client interface. The Senstar Symphony Client includes a consolidated timeline that displays information from numerous cameras a camera timeline that displays information from an individual camera.

The consolidated timeline displays information from numerous cameras and is available when Locked Times on Navigation is turned on.

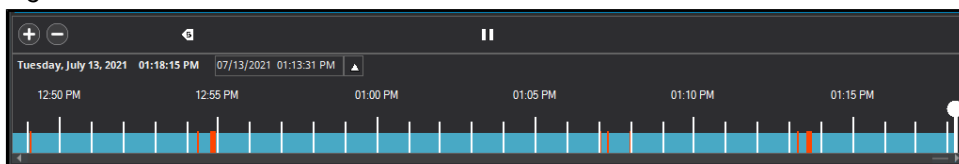

The camera timeline displays information from a specific camera.

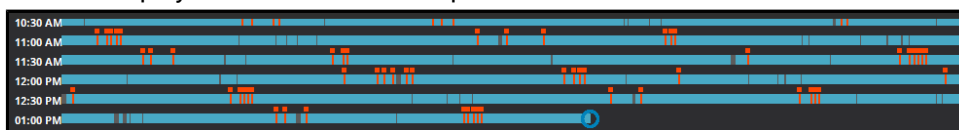

You can click on a timeline to navigate to a specific time or event in the footage.

Timeline colors

The Senstar Symphony Client interface uses the following colors to mark events on the timeline.

Color	Event
Dark blue (#005670)	Activity
Dark green (#008080)	Video downloaded from the camera
Light yellow (#FFFF00)	Access denied
White (#FFFFFF)	Access granted
Red (#FF0000)	Access other Alarms
Gray (#5C5C5C)	No activity
Dark gray (#231F20)	No signal

Color	Event
Light gray (#808080)	Not used
Transparent (#00FFFFFF)	No record
Light blue (#59CBE8)	Zoom

Display a camera timeline

You can display a camera timeline to display the information for an individual camera in a camera view panel.

1. To turn on a camera timeline for a single camera, complete the following steps:
 - a) In the Senstar Symphony Client interface, right-click a video panel.
 - b) Click **Show Timeline**.
2. To turn on the camera timelines for all of the cameras in a view, complete the following steps:
 - a) In the Senstar Symphony Client interface, click **Timeline**.
 - b) Click **Show panels**.

The camera timeline appears for the cameras that you selected.

To hide a timeline, right-click the video panel and click Show Timeline again.

Display the consolidated timeline

You can display the consolidated timeline to display information from all of the cameras in a view.

To display the consolidated timeline, you must turn on **Lock Times On Navigation**.

1. In the Senstar Symphony Client interface, click **Timeline**.
2. Click **Show consolidated**.

The consolidated timeline appears at the bottom of the camera view.

Maps


Maps can display the location of cameras, camera views, digital inputs and output devices, links, and labels in the Senstar Symphony Client interface.

Map Editor

The Map Editor is a component in the Senstar Symphony Client that you use to manage maps.

You can use the Map Editor to add maps to the Senstar Symphony Client. A map can be an image file (jpg, gif, or bmp file), a CAD file (DWG 2013 format or earlier), or a map provided by a GIS service.

You can use the Map Editor to add cameras, camera views, digital inputs and output devices, links, and labels to a map. Items that you add to a map appear in and can add functionality to the map pane in the Senstar Symphony Client interface.

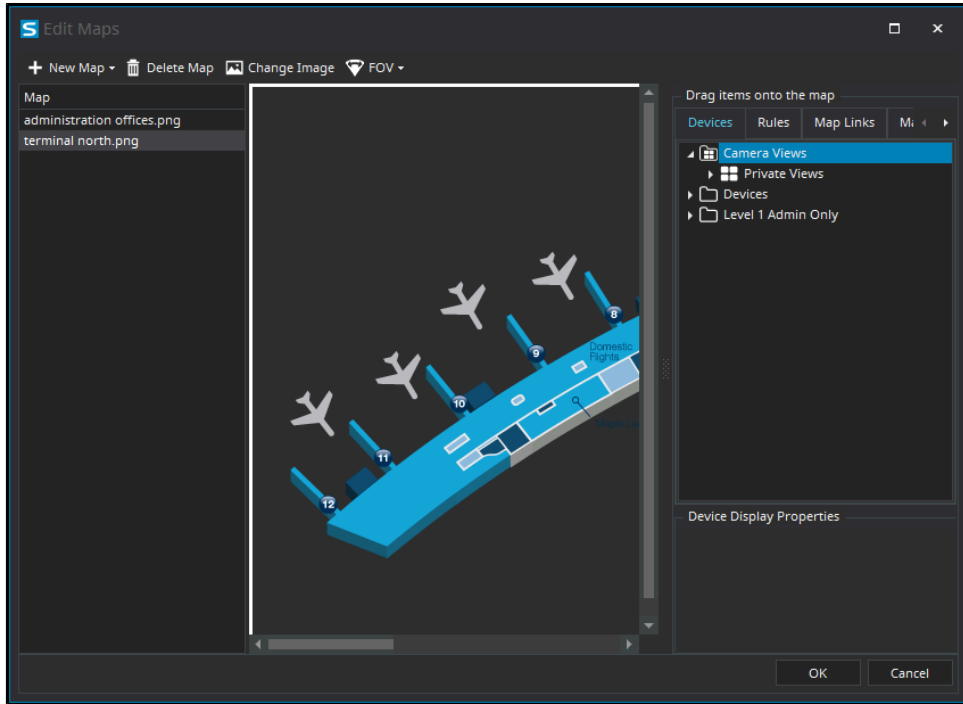


Map navigation

When you turn on map navigation, the Senstar Symphony Client interface displays the map pane.

Clicking an icon in the map pane performs the following actions:

- Clicking a camera icon displays the camera view in the active video panel.
- Clicking a camera view icon loads the camera view in the Senstar Symphony Client interface.
- Right-clicking an output device opens a context menu with commands that you can send to the device.

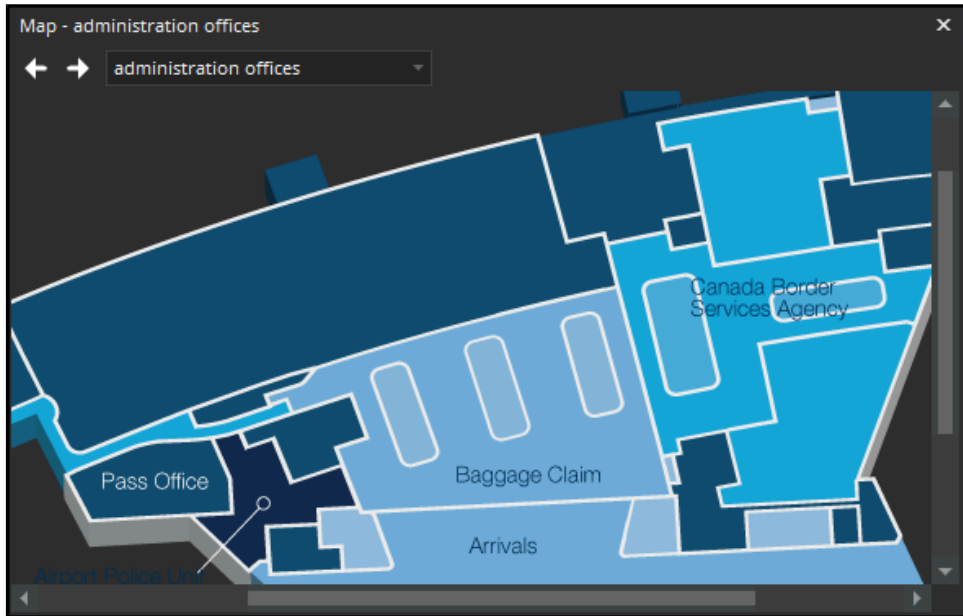

Add a map

You can add a map to the Senstar Symphony Client.

1. In the Senstar Symphony Client interface, click **View > Map Editor**.
2. Click **New Map > Upload File**.
3. Browse to the map file and click **Open**.
4. To change the name of the map, click the name of the map in the list and type the new name.
5. Click **OK**.

Add a GIS map

You can add a map from the ArcGIS service to the Senstar Symphony Client.

1. In the Senstar Symphony Client interface, click **View > Map Editor**.
2. Click **New Map > GIS Map**.
3. In the **Map Name** field, type a name for the map that will appear in the map list.
4. In the **Server Address** field, type the URL of the map service.
5. Click **Add Map**.
6. Click **OK**.

View a map

You can open the map panel and view a map in the Senstar Symphony Client interface.

You can navigate on the map by using the scroll bars or clicking and dragging the map.

1. In the Senstar Symphony Client interface, click **View > Map Navigation**.
2. In the map panel, use the arrows to navigate through maps or select the map in the list.

Add a device to a map

You can add cameras, camera views, access control devices, Senstar Symphony Access Control, and Senstar Network Manager to a map.

When you add a device to a map, the map displays a link that either opens the camera or camera view, or displays the status of the access control device.

1. In the Senstar Symphony Client interface, click **View > Map Editor**.
2. Select a map.
3. Click the **Devices** tab.
4. Drag a device on to the map.
5. To rotate the camera icon, perform the following steps:
 - a) Right-click the camera icon.
 - b) Click **Rotate**.
 - c) Move the mouse until the camera is facing the correct direction and click the mouse button.
6. Click **OK**.

Add a label to a map

You can add a label to a map.

In addition to defining the text and formatting of the label, you can also add a hyperlink to the label.

1. In the Senstar Symphony Client interface, click **View > Map Editor**.
2. Select a map.
3. Click the **Map Labels** tab.

4. To create a new label, perform the following tasks in the **Map Label** pane:
 - a) In the **Name** field, type the name that the Map Editor displays in the list of labels.
 - b) In the **Text** field, type the text that you want to appear on the map.
 - c) In the **Font Name** field, select the typeface to use for the label.
 - d) In the **Font Size** field, select the size of the text on the map.
 - e) In the **Foreground** field, select the color of the text on the map.
 - f) In the **Background** field, select the color and opacity of the banner behind the text.
 - g) In the **Width** field, set the width of the banner behind the text.
 - h) In the **Height** field, set the height of the banner behind the text.
 - i) In the **URL** field, type the hyperlink.
 - j) Click **Save**.

After you save a new label, the label appears in the label list.

5. Click and drag a label from the label list to the location on the map.
6. Click **OK**.

To remove a label from a map, right-click the label, click **Remove from Map**, and click **OK**.

Add a rule to a map

You can add a label to a map.

In addition to defining the text and formatting of the label, you can also add a hyperlink to the label.

1. In the Senstar Symphony Client interface, click **View > Map Editor**.
2. Select a map.
3. Click the **Map Labels** tab.
4. To create a new label, perform the following tasks in the **Map Label** pane:
 - a) In the **Name** field, type the name that the Map Editor displays in the list of labels.
 - b) In the **Text** field, type the text that you want to appear on the map.
 - c) In the **Font Name** field, select the typeface to use for the label.
 - d) In the **Font Size** field, select the size of the text on the map.
 - e) In the **Foreground** field, select the color of the text on the map.
 - f) In the **Background** field, select the color and opacity of the banner behind the text.
 - g) In the **Width** field, set the width of the banner behind the text.
 - h) In the **Height** field, set the height of the banner behind the text.
 - i) In the **URL** field, type the hyperlink.
 - j) Click **Save**.

After you save a new label, the label appears in the label list.

5. Click and drag a label from the label list to the location on the map.
6. Click **OK**.


To remove a label from a map, right-click the label, click **Remove from Map**, and click **OK**.

Add a zone to a map

You can add an alarm zone for hardware nodes to a map.

A zone appears as a line on the map. You can set the position, color, and thickness of the line. In addition, you can add multiple segments to the line to accurately represent the location of the hardware node on the map.

When the hardware node experiences an event, the zone on the map displays an alarm icon.

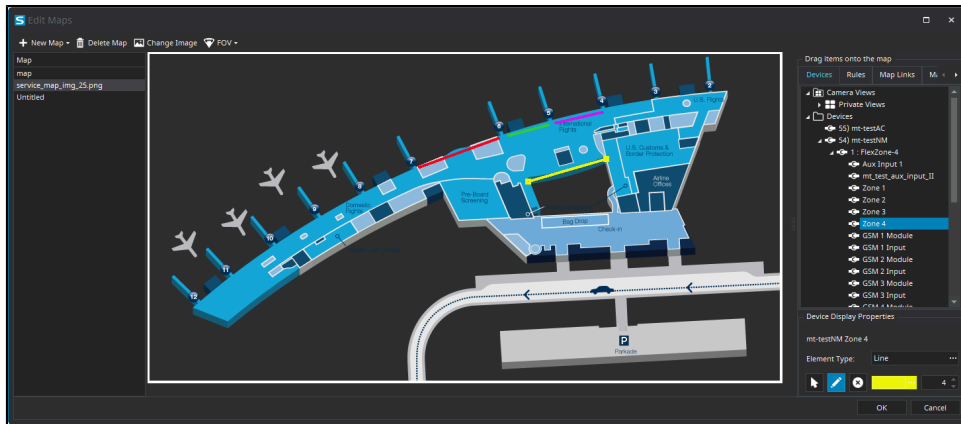

1. In the Senstar Symphony Client interface, click **View > Map Editor**.
2. Select a map.
3. Click the **Devices** tab.
4. Drag a hardware node on to the map.
5. Click the icon for the hardware node.
6. In the **Element Type** field, click the ellipsis and click **Line**.
The icon changes to a line.
7. To change the line, perform any of the following tasks:
 - To change the color of the line, select the line, click the ellipsis in the color field, select a new color, and click **OK**.
 - To change the thickness of the line, select the line, click the up or down arrows in the thickness field.
 - To change the position or size of the line, click and hold the endpoint of the line and move it to the new location.
8. To add a segment to the zone, perform the following tasks:
 - a) Click the pencil icon to activate Draw Tool.
 - b) Move the pencil icon to an endpoint of an existing line.
 - c) Click the endpoint.
 - d) Move the mouse to draw the new segment and click to end the segment.
An endpoint appears and a new segment starts.
 - e) Repeat step d to draw additional segments.
 - f) Press the ESC key or click the arrow icon to deactivate the Draw Tool.
9. To remove a segment from the zone, perform the following tasks:
 - a) Click the X icon to activate the Delete Tool.
 - b) Move the X icon to an endpoint of an existing line.
 - c) Click the endpoint.
The segments attached to the endpoint are removed from the zone. If the endpoint is the end of the zone, the segment is removed. If the endpoint is a junction between two segments, both segments are removed and a new segment appears between the remaining endpoints.
 - d) Repeat step c to remove additional segments.
 - e) Press the ESC key or click the arrow icon to deactivate the Delete Tool.
10. Click **OK**.

Add site information to a map






You can add site information that appears on a map in the map navigation panel in the Senstar Symphony Client interface.



To add site information to a map, you add a label and then use a content editor to add the information. The map editor in the Senstar Symphony Client interface includes four fields for site information, three sizes for the text, and two locations for the content.

1. In the Senstar Symphony Client interface, click **View > Map Editor**.
2. Select a map.
3. Click the **Map Properties** tab.
4. In the **Site Information** pane, complete the following tasks:
 - a) Select **Display Site Information**.
 - b) In the label field, type a label for the information.
 - c) To open the content editor, click the elipsis button.
 - d) Type the information that you want to add to the map and click save.
 - e) In the **Format Size** list, select the font size.
 - f) In the **Position** list, select where on the map you want the information to appear.
5. Click **OK**.

After you add site information to a map, it appears in the map navigation panel in the Senstar Symphony Client interface as the **Site Information**. Clicking the button, reveals (and hides) the site information.

Map icons

Icon	Description
	Rule
	Digital input <ul style="list-style-type: none"> • Activated: yellow background • Not activated: white background
	Digital output <ul style="list-style-type: none"> • Activated: yellow background • Not activated: white background
	Camera <ul style="list-style-type: none"> • Online camera: gray arrow • Offline camera: white arrow • Motion detected: blue arrow • Alarm: orange arrow • Selected camera: orange circle
	PTZ camera <ul style="list-style-type: none"> • Online camera: gray arrow • Offline camera: white arrow • Motion detected: blue arrow • Alarm: Orange arrow

Icon	Description
	Access control device <ul style="list-style-type: none"> • Access granted: green • Access denied: red
	Senstar Symphony Access Control and Senstar Network Manager devices

Display field of view

You can display the field of view for cameras on maps in the Senstar Symphony Client interface.

If you display the field of view for a PTZ camera, the graphic on the map changes when you move the camera.

1. In the Senstar Symphony Client interface, click **View > Map Editor**.
2. Select a map.
3. Click **FOV > Show FOV**.
4. To change the color of the field-of-view graphic, perform the following tasks:
 - a) Click **FOV > Change Color**.
 - b) Select the color using the color picker or define the color using the RGB values or hex color codes.
 - c) Click **OK**.
5. Click **OK**.

Senstar Symphony Messenger

The Senstar Symphony Messenger allows you to send messages to any user who is logged in to the Senstar Symphony Client or Senstar Symphony Web Client.

Send a message

You can send messages to users or groups.

1. In the Senstar Symphony Client interface, click **Setting > Messenger** to open the Senstar Symphony Messenger window.
2. In the user and group list, select the recipients for the message.
3. In the text field, type your message.
4. Click **Send**.

Carousels

Carousels can loop through multiple cameras across multiple servers in the same server farm, pausing on each camera for a defined time.

You can assign a carousel to a video panel in the Senstar Symphony Client interface. The video panel will automatically loop through the cameras and will include controls to pause and move forward and backward through cameras in the carousel.

You can create a carousel in the Senstar Symphony Server configuration interface. Once created, carousels appear in the device tree in the Senstar Symphony Client interface.

Add a carousel

Add a carousel in the Senstar Symphony Server configuration interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Carousels**.
2. Click **Add Carousel**.
3. In the **Name** field, type a name for the carousel.
The name of the carousel appears in the device tree in the Senstar Symphony Client interface.
4. Perform one of the following tasks:
 - Select **Add to bottom of list** to add cameras to the bottom of the carousel camera list.
 - Select **Insert below currently selected camera in list** to add cameras below the selected camera in the carousel camera list.
5. In the **Available Cameras on Servers** list, select the cameras to include in the carousel and click **Add Selected**.
6. In carousel camera list, perform the following the tasks:
 - a) Set the order of cameras by moving camera by clicking and holding the arrow button beside a camera, dragging the camera to the desired location, and releasing the mouse button.
 - b) Set the time that the carousel pauses on the camera before moving to the next camera in the carousel.
7. Click **Save**.

Edit a carousel

Edit a carousel in the Senstar Symphony Server configuration interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Carousels**.
2. Select the carousel and click **Edit**.
3. Perform any of the following tasks:
 - To remove a camera from the carousel, hover over the camera, and click the **X** button.
 - To add a camera, select the camera in the **Available Cameras on Servers** list, and click **Add Selected**.
 - To change the time that the carousel pauses on the camera, edit the number in the **Seconds** field.
4. Click **Save**.

Delete a carousel

Remove a carousel in the Senstar Symphony Server configuration interface.

1. In the Senstar Symphony Server configuration interface, click **Devices > Carousels**.
2. Select the carousel.
3. Click **Delete**.
4. To confirm the deletion, click **Yes**.

Settings

You can use the settings in the Senstar Symphony Client to customize the Senstar Symphony Client interface.

View camera activity

You can view the activity for multiple cameras and open camera view panels for specific times from each camera's timeline.

Viewing camera activity allows you to compare the timelines and track activity across multiple cameras. You can open video from different times and cameras to view the complete video for an activity or an alarm.

1. In the Senstar Symphony Client interface, click **View > Activity For Cameras**.
2. Specify the start and end dates for the activity you want to view and click **Reload**.
3. In the Pick Cameras list, select the cameras for which you want to view the activity.
4. Use the **Zoom In** and **Zoom Out** to set the correct resolution.
5. Perform one of the following tasks:
 - To open video in a single docked camera view panel each time you click on a camera timeline, toggle the **One Camera View** button on.
 - To open video in a new floating camera view panel each time you click a camera timeline, toggle the **One Camera View** button off.
6. Click a camera timeline to view video.

Customize the toolbar

You can add or remove icons from the toolbar in the Senstar Symphony Client interface.

1. Click the down arrow in the toolbar.
2. Click **Add or Remove Buttons > Main Menu**.
3. Click to show or hide the buttons, or click **Reset Toolbar**.

Change timeline colors

You can change the colors that the Senstar Symphony Client uses in the timeline.


When you change the timeline colors, you also change the colors that the Senstar Symphony Client uses for map icons.

1. In the Senstar Symphony Client interface, click **View > Settings**.
2. Click the **Timeline Colors** tab.
3. Select the colors for each timeline event.
4. Click **OK**.

You can also reset the colors to the default colors at any time or use the classic colors from Senstar Symphony 6.14.

Startup settings

The startup settings determine how the Senstar Symphony Client behaves when it starts.

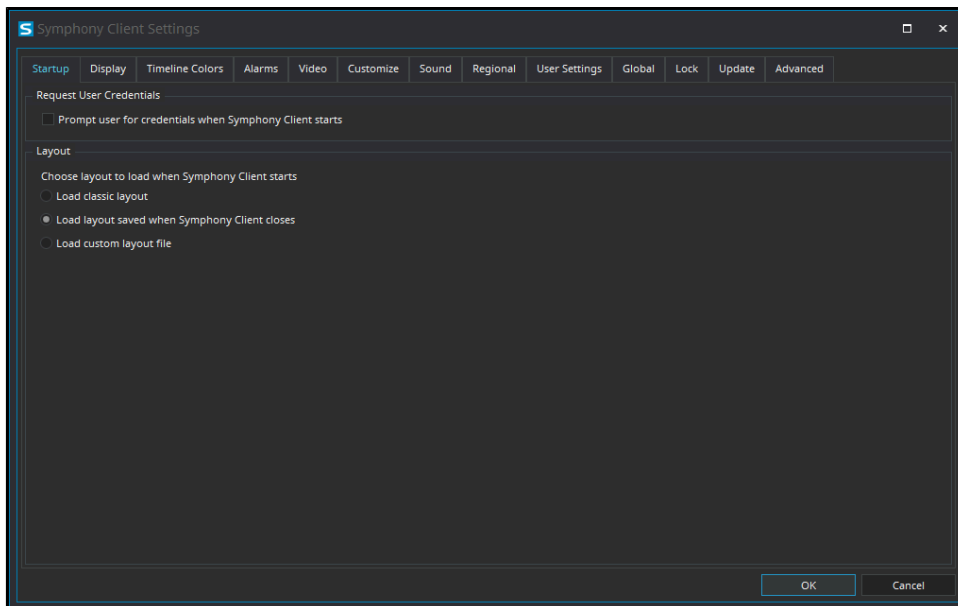

Request User Credentials


Setting	Description
Prompt user for credentials when Senstar Symphony Client starts	Select to make users provide a valid username and password before using the Senstar Symphony Client.

Layout

Setting	Description
Load classic layout	Select to load the default layout when the Senstar Symphony Client starts.
Load layout saved when Senstar Symphony Client closes	Select to load the layout from the last session when the Senstar Symphony Client starts.
Load custom layout file	Select to load the layout from a saved layout file when the Senstar Symphony Client starts.

Display settings

The display settings determine what information the Senstar Symphony Client displays and what is included in log files.

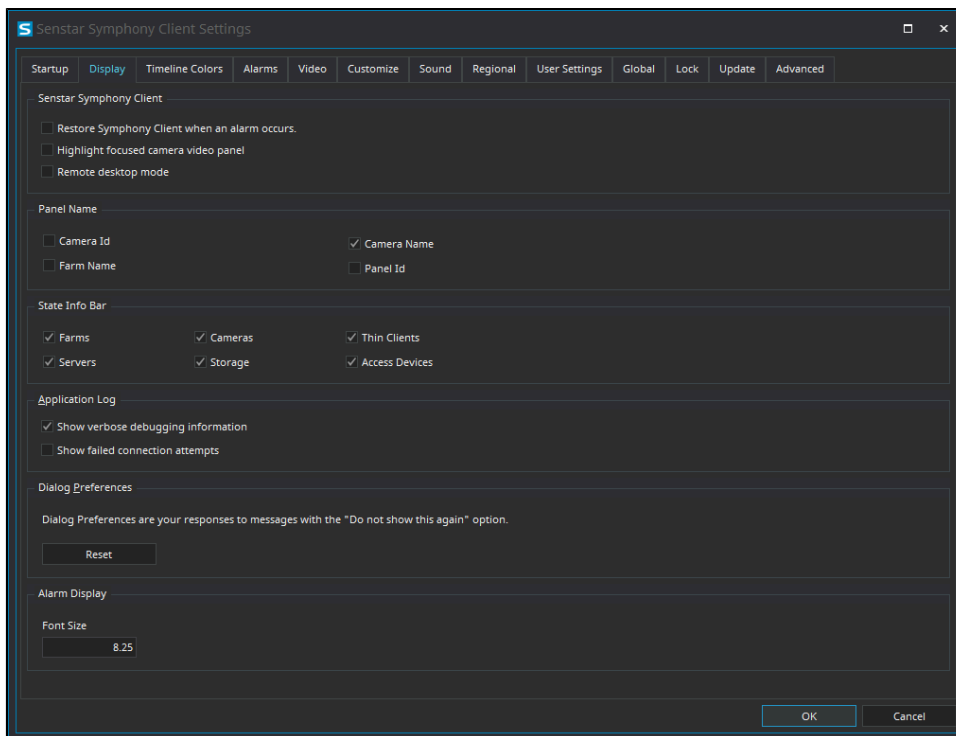

Senstar Symphony Client

Setting	Description
Restore Senstar Symphony Client when an alarm occurs	Select to restore the Senstar Symphony Client interface to full size when an alarm occurs.
Highlight focused camera video panel	Select to highlight the camera view panel that is in focus.
Remote desktop mode	Select if you are using a remote desktop or virtual machine to access the Senstar Symphony Client. This setting removes the dependency of overlays and navigation controls in the Senstar Symphony Client interface on DirectX.

Panel Name

Setting	Description
Camera Id	Select to display the camera ID in the name of the camera view panel.
Farm Name	Select to display the farm name in the name of the camera view panel.
Camera Name	Select to display the camera name in the name of the camera view panel.

Setting	Description
Panel Id	Select to display the panel ID in the name of the camera view panel.

State Info Bar

Setting	Description
Farms	Select to display warning messages for farms in the notification bar.
Servers	Select to display warning messages for servers in the notification bar.
Cameras	Select to display warning messages for cameras in the notification bar.
Storage	Select to display warning messages for video storage in the notification bar.
Senstar Thin Clients	Select to display warning messages for Senstar Thin Client devices in the notification bar.
Access Devices	Select to display warning messages for access control devices in the notification bar.

Application Log

Setting	Description
Show verbose debugging information	Select to display verbose debugging information in the application log.
Show failed connection attempts	Select to show failed connection attempts in the application log.

Dialog Preferences


Setting	Description
Reset	Click to reset all dismissed dialog boxes in the Senstar Symphony Client interface.

Alarm Display

Setting	Description
Font Size	Select the size (in pixels) of the font in the alarm console.

Alarms settings


The alarm settings determine how alarms appear in the Senstar Symphony Client.

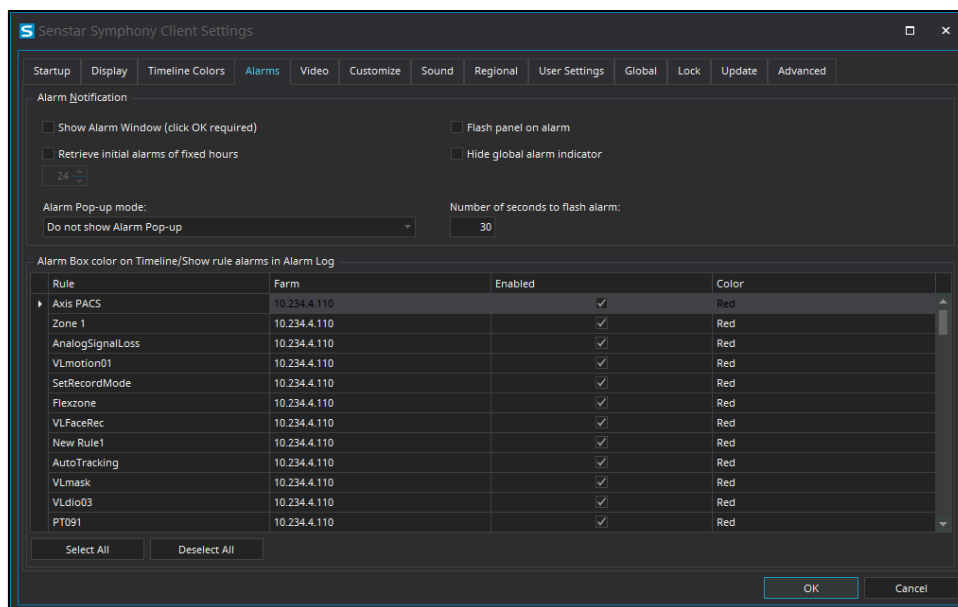

Setting	Description
Show Alarm Window (click OK required)	Select to make the Senstar Symphony Client display a dialog box when an alarm occurs.
Retrieve initial alarms of fixed hours	Select to retrieve alarms from the amount of time that you specify in the hour field below (1 to 24 hours).
Alarm Pop-up mode	Select how the Senstar Symphony Client displays alarm dialog boxes.
Flash panel on alarm	Select to display an alarm indicator around camera view panels when cameras record alarms.
Hide global alarm indicator	Select to hide the colored alarm indicators in the Senstar Symphony Client interface.
Number of seconds to flash alarm	Specify how long the alarm indicator flashes when cameras record alarms. The alarm indicator will flash until the time elapses or you acknowledge the alarm.
Alarm Box color on Timeline/ Show rule alarms in Alarm Log	Select whether the alarm appears in the alarm log and set the color for the alarm in the timeline.

Video settings

The video settings determine the behavior of PTZ cameras, the appearance of video decorations, instant replay, and the characteristics of video in the Senstar Symphony Client.

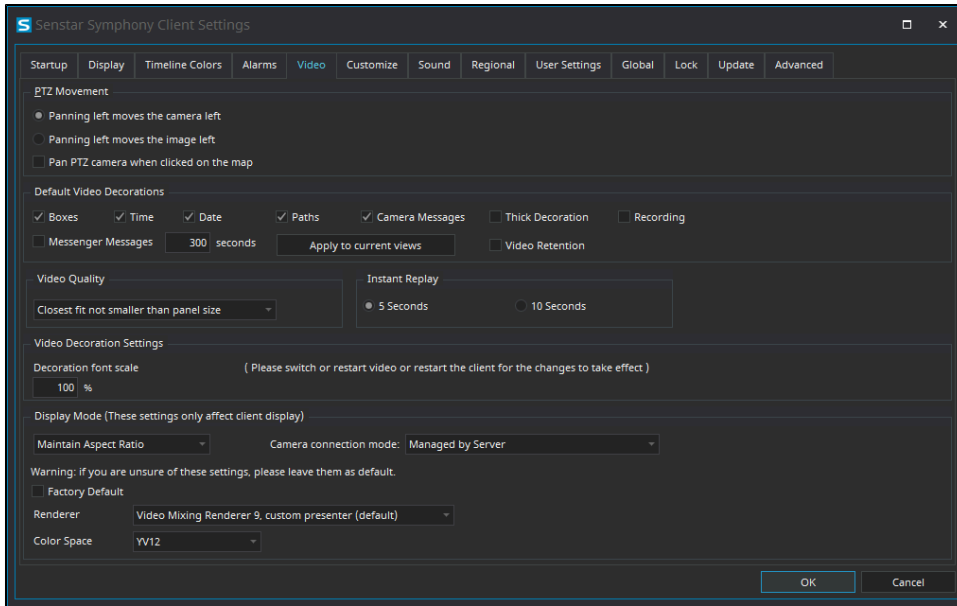

PTZ movement

Setting	Description
Panning left moves the camera left	Select to use the default directions for the pan buttons (i.e., the left pan button pans the camera to the left and/or digitally pans the image to the right).
Panning left moves the image left	Select to use the inverted directions for the pan buttons (i.e., the left pan button pans the camera to the right and/or digitally pans the image to the left).
Pan PTZ camera when clicked on the map	Select to pan PTZ cameras to the location that you click on a map.

Default video decorations

Setting	Description
Boxes	Select to display video analytic boxes over the video in the camera view panel.
Time	Select to display the time over the video in the camera view panel.
Date	Select to display the date over the video in the camera view panel.
Paths	Select to display video analytic paths over the video in the camera view panel.

Setting	Description
Camera messages	Select to display information from cameras over the video in the camera view panel.
Thick decoration	Select to make the video analytic decoration (boxes and paths) thicker.
Recording	Select to display when the Senstar Symphony Client is recording.
Video Retention	Select to display video retention capacity over the video in the camera view panel.
Messenger messages	Select to display messages from the Senstar Symphony Messenger over the video in the camera view panel.
Seconds	Select how long the messages remain visible.
Apply to current views	Click to apply the decoration settings to the current views.

Video quality

Setting	Description
Lowest resolution	Select to display video at the lowest possible resolution.
Closest fit to panel size	Select to display video at the resolution that most closely matches the size of the video panel, including resolutions that are smaller than the video panel.
Closest fit not smaller than panel size	Select to display video at the resolution that most closely matches the size of the video panel, excluding resolutions that are smaller than the video panel.
Highest resolution	Select to display video at the highest possible resolution.

Instant replay

Setting	Description
5 seconds	Select to set the instant replay function to 5 seconds.
10 seconds	Select to set the instant replay function to 10 seconds.

Video decoration settings

Setting	Description
Decoration font scale	Define the size of the text in video panels.

Display mode

Setting	Description
Actual Size	Select to set the video panel to display the video at the size from the camera.
Maintain Aspect Ratio	Select to set the video panel to display the video at the aspect ratio.
Fit to Window	Select to fit the video to the video panel.
Camera connection mode	Select how the Senstar Symphony Client connects to cameras.
Factory Default	Select to use the default video renderer.
Renderer	Select a video renderer.
Color Space	Select the color space for the Senstar Symphony Client.

Related concepts

[Multicasting](#) on page 13

Multicasting allows numerous Senstar Symphony Client instances to connect directly to cameras without requiring dedicated video streams for each Senstar Symphony Client.

Related tasks

[View instant replay](#) on page 142

You can play historical video either 5 or 10 seconds behind live video in the in the Senstar Symphony Client.

[Add a camera automatically](#) on page 14


The Senstar Symphony Server can automatically detect cameras on the same network.

[Add a camera manually](#) on page 14

You can manually add cameras to the Senstar Symphony Server in the Senstar Symphony Server configuration interface.

Customize settings

The customize settings determines the appearance and behavior of maps and the device tree in the Senstar Symphony Client.

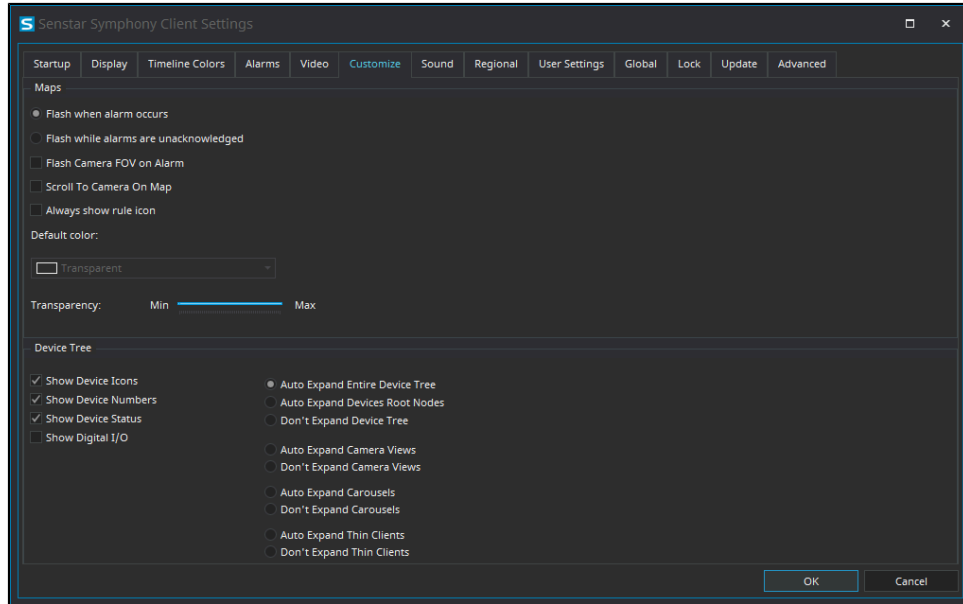

Maps

Setting	Description
Flash when alarm occurs	Select to flash the alarm icon on a map when the alarm occurs.
Flash while alarms are unacknowledged	Select to flash the alarm icon while the alarm is unacknowledged.
Flash Camera FOV on Alarm	Select to flash the camera field of view on a map for 10 seconds when an alarm occurs. The camera field of view will continue to flash if you select the Flash while alarms are unacknowledged option.
Scroll To Camera On Map	Select to center the map on a camera when you click the camera in the Map Navigation pane of the Senstar Symphony Client interface.
Always show rule icon	Select to always show the rule icon on the map.
Default color	Select the color for the rule icon.
Transparency	Set the transparency for the rule icon on the map.


Device Tree

Setting	Description
Show Device Icons	Select to show device icons in the device tree.

Setting	Description
Show Device Numbers	Select to show device numbers in the device tree.
Show Device Status	Select to show the statuses of devices in the device tree (e.g., On, Off, Activity, etc.).
Show Digital I/O	Select to show digital I/O devices in the device tree.
Auto Expand Entire Device Tree	Select to expand all levels of the device tree when the Senstar Symphony Client interface starts.
Auto Expand Devices Root Nodes	Select to expand the top level of the device tree when the Senstar Symphony Client interface starts.
Don't Expand Device Tree	Select keep the device tree collapsed when the Senstar Symphony Client interface starts.
Auto Expand Camera Views	Select to expand the camera views in the device tree when the Senstar Symphony Client interface starts.
Don't Expand Camera Views	Select to keep the camera views collapsed in the device tree when the Senstar Symphony Client interface starts.
Auto Expand Carousels	Select to expand the carousels in the device tree when the Senstar Symphony Client interface starts.
Don't Expand Carousels	Select to keep the carousels collapsed in the device tree when the Senstar Symphony Client interface starts.
Auto Expand Thin Clients	Select to expand the Senstar Thin Client group in the device tree when the Senstar Symphony Client interface starts.
Don't Expand Thin Clients	Select to keep the Senstar Thin Client group collapsed in the device tree when the Senstar Symphony Client interface starts.

Sound settings

The sound settings determine the noises that the Senstar Symphony Client generates from cameras and events.

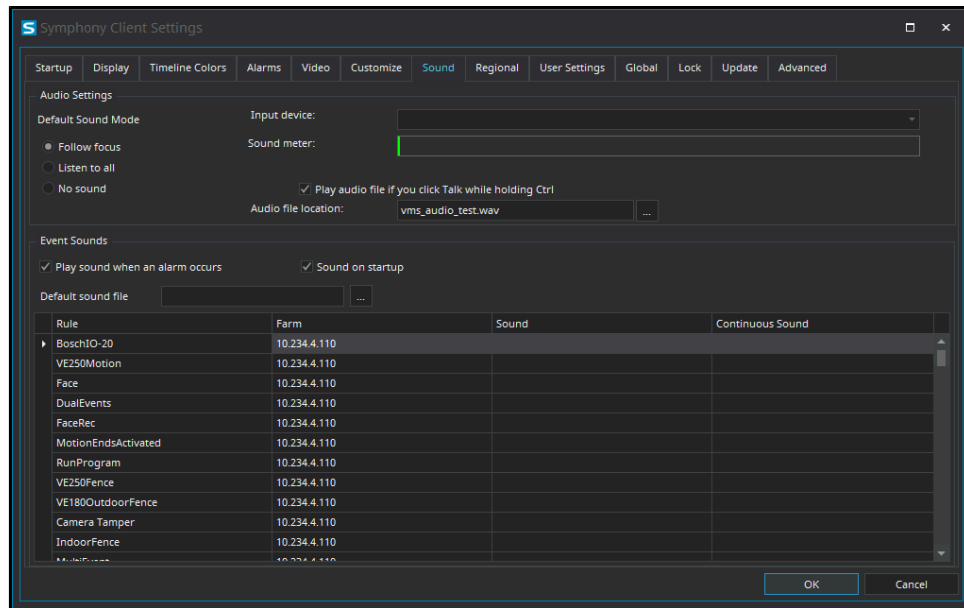

Audio settings

Setting	Description
Default Sound Mode	Set how the Senstar Symphony Client plays or mutes audio for video. Select Follow focus to play audio from the active video panel. Select Listen to all to play audio from all video panels. Select No sound to mute all audio.
Input device	Select the audio input device.
Play audio file if you click Talk while holding Ctrl	Select to play an audio file when you click the Talk button while pressing the Ctrl key.
Audio file location	Select the audio file to play when you click the Talk button while pressing the Ctrl key.


Event sounds

Setting	Description
Play sound when an alarm occurs	Select to play a sound when an alarms occurs. You can set both the alarm sound and the continuous sound for each rule.
Sound on startup	Select to play the default sound file when the Senstar Symphony Client interface starts.

Setting	Description
Default sound file	Select the default audio file.

Regional settings


The regional settings determine the language and the date/time format for the Senstar Symphony Client.

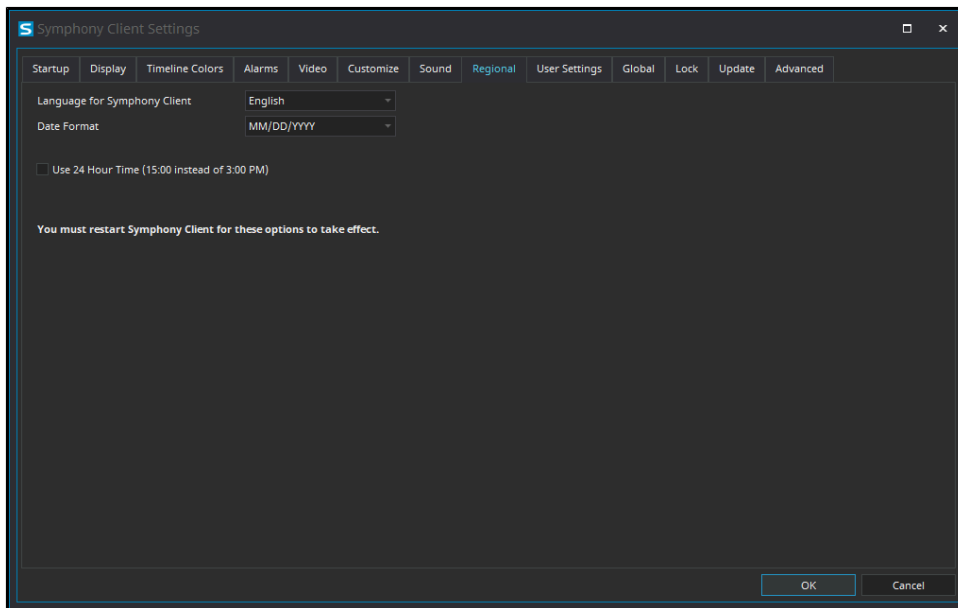

Setting	Description
Language for Senstar Symphony Client	Select the language for the Senstar Symphony Client interface.
Date Format	Select the format for dates in the Senstar Symphony Client interface.
Use 24 Hour Time	Select to display time in the 24-hour format in the Senstar Symphony Client interface.

Global settings


The global settings determine the location of configuration files and which version of the Senstar Symphony help the Senstar Symphony Client uses (either the help included with the installation of the Senstar Symphony Server or the online help).

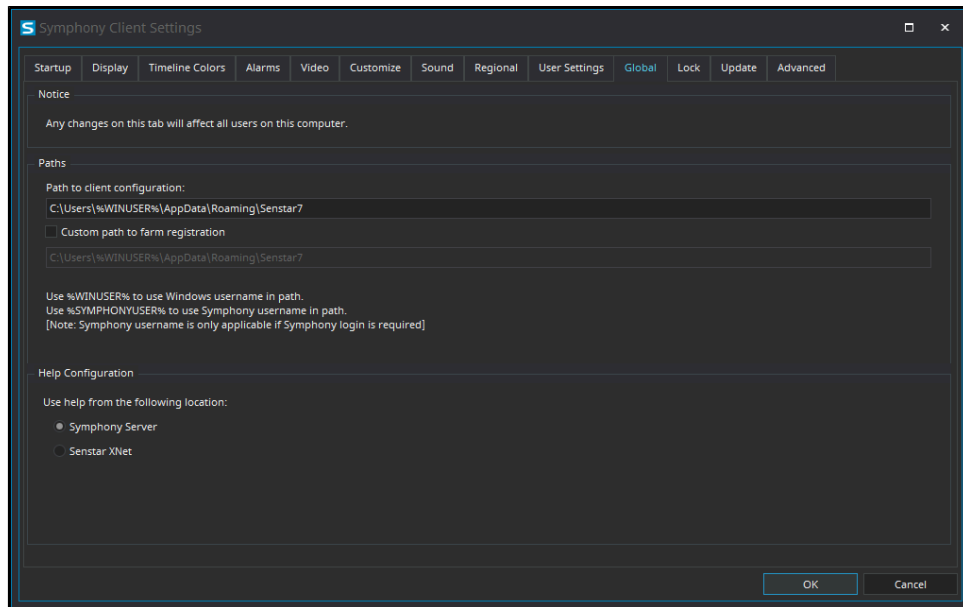

Setting	Description
Path to client configuration	Define the path to configuration data for the Senstar Symphony Client.
Custom path to farm registration	Select to define a custom path for farm registration information.
Use help from the following location	Select whether the Senstar Symphony Client opens help that is included with the Senstar Symphony Server or help from the Internet.

Lock settings


The lock settings determine the functionality that is available to users when you lock the Senstar Symphony Client and allows you to set the pass phrase for unlocking the Senstar Symphony Client.

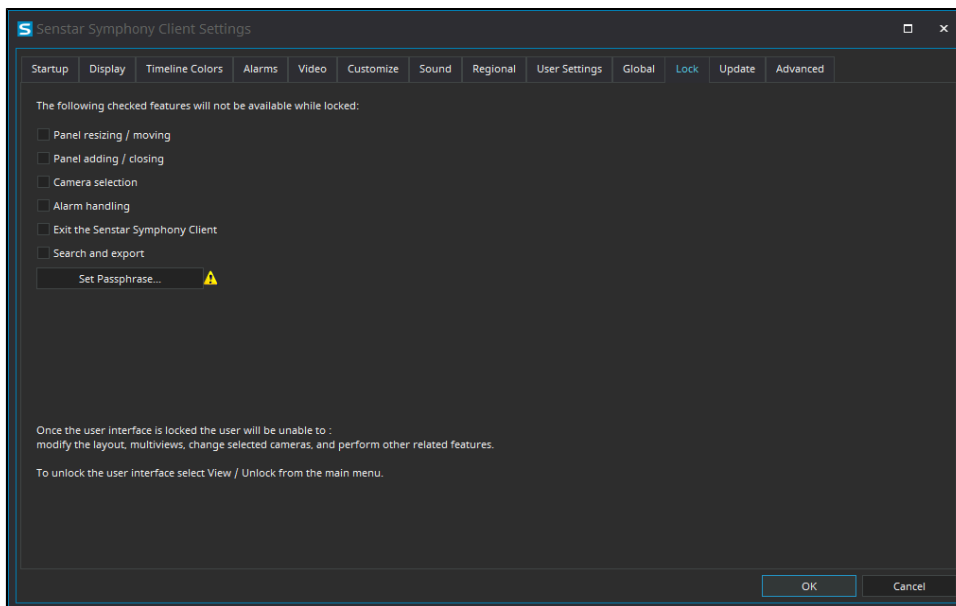

Setting	Description
Panel resizing/moving	Select to prevent users from resizing or moving panels (e.g., camera view, map editor, device tree, etc.) in the Senstar Symphony Client interface.
Panel adding/closing	Select to prevent users from adding or closing panels (e.g., camera view, map editor, device tree, etc.) in the Senstar Symphony Client interface.
Camera selection	Select to prevent users from selecting different cameras.
Alarm Handling	Select to prevent users from processing alarms.
Exit the Senstar Symphony Client	Select to prevent users from closing the Senstar Symphony Client.
Search and export	Select to prevent users from searching for and exporting video.
Set Passphrase	Click to set the pass phrase that unlocks the Senstar Symphony Client.

Update settings

The update settings determine how the Senstar Symphony Client checks for and applies updates.

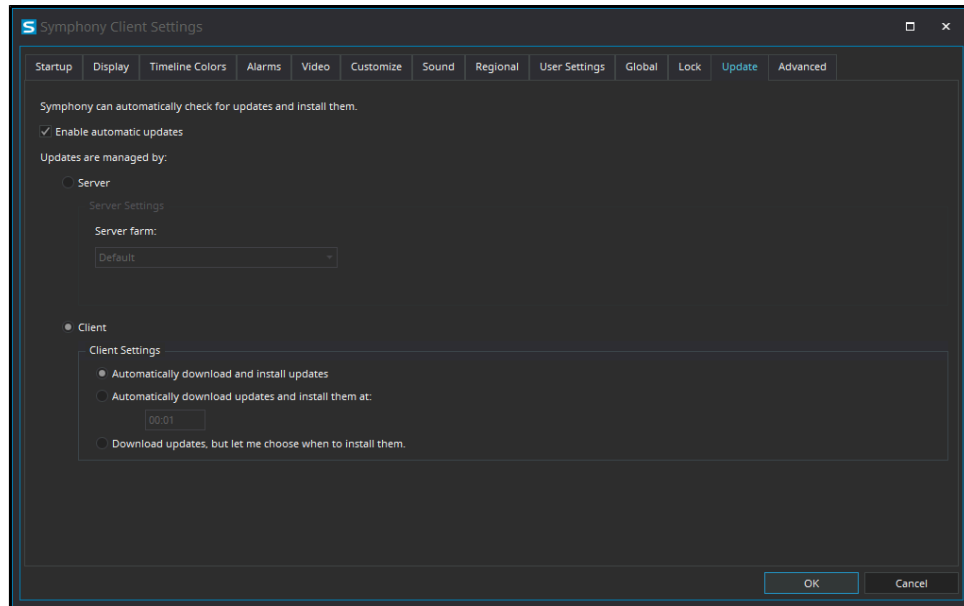

Setting	Description
Enable automatic updates	Select to turn on automatic updates for the Senstar Symphony Client.
Updates are managed by	Select whether the Senstar Symphony Server or the Senstar Symphony Client manages the updates.

Server settings


Setting	Description
Server farm	If you manage updates with the Senstar Symphony Server, select the Senstar Symphony Server farm that manages the updates.

Client settings

Setting	Description
Automatically download and install updates	If you manage updates with the Senstar Symphony Client, select this to download and install updates as soon as they become available.
Automatically download updates and install them at	If you manage updates with the Senstar Symphony Client, select this to download and install updates at a specific time.
Download updates but let me choose when to install them	If you manage updates with the Senstar Symphony Client, select this to download updates only. If you select this option, you must install the updates manually.

Advanced settings

The advanced settings determines how and when the Senstar Symphony Client restarts and how much information it includes in log files.

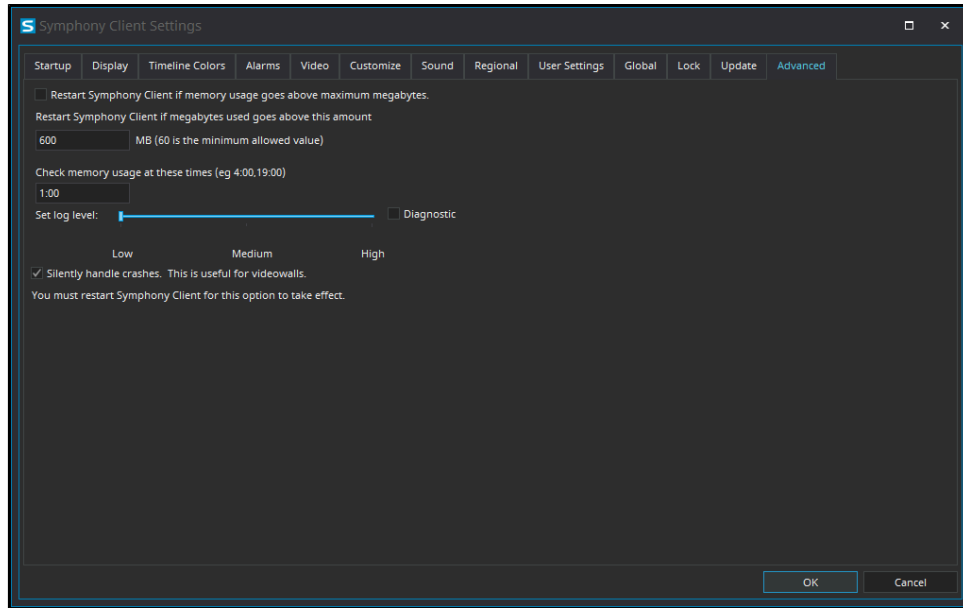

Setting	Description
Restart Senstar Symphony Client if memory usage goes above maximum megabytes	Select to automatically restart the Senstar Symphony Client when memory usage reaches a specific level.
Restart Senstar Symphony Client if megabytes goes above this amount	Type the limit of memory usage (in MBs) above which the Senstar Symphony Client restarts. This setting becomes active when you select the Restart Senstar Symphony Client if memory usage goes above maximum megabytes setting.
Check memory usage at these times	Set when the Senstar Symphony Client checks memory usage. This field accepts comma separated values in the 24-hour format (hh:mm).
Set log level	Using the slider, set the log level for the Senstar Symphony Client.
Diagnostic	Select to set the log level to diagnostic. This setting generates the most comprehensive logging information. If you select this option, it overrides the log level that you set using the Set log level slider.
Silently handle crashes	Select to hide the CMD window when the Senstar Symphony Client creates a dump file.

Bookmarks

A bookmark identifies specific footage that you can return to later. Bookmarks can refer to live videos, recorded videos, or still images.

When you add a bookmark, it refers to the video on a specific camera at a specific time. Bookmarks appear in the bookmarks list in the Senstar Symphony Client interface.

Create a bookmark

You can create a bookmark to reference video from a specific time and camera.

When you create a bookmark, it creates a connection to the camera that is active in the Senstar Symphony Client interface at the time that is showing in the display panel when you create the bookmark.



Note: If you create a bookmark for a camera that is not recording, you will not be able to access the video later.

You can share a bookmark so that other users can open the video that you mark.

1. In the Senstar Symphony Client interface, click **Bookmarks > Add Bookmark**.
2. Type a name for the bookmark.
3. Select whether you want to share the bookmark with other users.
4. Click **OK**.

Delete a bookmark

You can remove bookmarks that you create.

1. In the Senstar Symphony Client interface, click **Bookmarks > Manage Bookmarks**.
2. Select **Delete** for the bookmark.
3. Click **OK**.

Video wall

The video wall feature in Senstar Symphony can display footage from multiple cameras in the server farm on multiple monitors.

Any Senstar Symphony Client can act as a video wall client, and you can include any monitors connected to the computers that host the Senstar Symphony Client in the video wall.

Register a client

Register each computer that hosts the Senstar Symphony Client that you want to include in the video wall.

1. In the Senstar Symphony Client interface, click **View > Video Wall**.
2. Click the **Video Wall Client Configuration** tab.
3. Click **Register current Client**.
4. Click **Save**.

Create a video wall

1. In the Senstar Symphony Client interface, click **View > Video Wall**.
2. On the **Video Wall Client Configuration** tab, click **Design Video Wall**.
3. Click **New**.
4. To define a name for the video wall, perform the following steps:
 - a) Double-click the default name for the video wall.
 - b) Type a new name.

- c) Press **Enter**.
5. Select the name of the video wall and click **Open**.
6. Drag a video wall monitor from the **Tool Box** pane to the video wall grid.
7. Click the monitor box in the video wall grid.
8. In the **Label** field, type a name for the monitor and click **Apply**.
9. Move and size the video wall monitor.
10. Click **Save**.

Server configuration

Although you perform most configuration for the Senstar Symphony Server in the Senstar Symphony Server configuration interface, the Senstar Symphony Client interface includes functionality to configure some settings on the Senstar Symphony Server.

Connect to a server

You can connect a Senstar Symphony Client to multiple Senstar Symphony Server instances.

1. In the Senstar Symphony Client interface, click **Server Configuration > New Symphony Server Registration**.
2. In the **Address** field, perform one of the following tasks:
 - Select the Senstar Symphony Server from the list of discovered servers.
 - Type the IP address of the Senstar Symphony Server.
 - Type the DNS name of the Senstar Symphony Server.
3. In the **Name** field, type a meaningful name for the Senstar Symphony Server. This name will appear in the Server List in the Senstar Symphony Client interface.
4. To log in to the Senstar Symphony Server, perform one of the following tasks:
 - To use your Windows account to authenticate with the Senstar Symphony Server, select the **Windows Authentication** check box.
 - Type your username and password.
5. Click **OK**.

Related concepts

[Server list](#) on page 140

The Senstar Symphony Client interface lists the Senstar Symphony Server instances to which the Senstar Symphony Client is connected and the state of those instances. You can select a Senstar Symphony Server to access the cameras and devices that are connected to that instance.

Disconnect from a server

You can disconnect from a Senstar Symphony Server to remove the cameras associated with that server from the Senstar Symphony Client.

1. In the Senstar Symphony Client interface, click **Server Configuration > Delete Symphony Server Registration**.
2. Select the server from which to disconnect.
3. Click **Remove**.

Delete recorded video

You can delete recorded video for a specific time or delete all recorded video.

1. In the Senstar Symphony Client interface, click **Server Configuration > Delete Recorded Video**.

2. Perform one of the following tasks:
 - Specify a date range and click **Delete Footage in Above Date Range On All Cameras**.
 - Click **Delete everything**.
3. Click **Yes**.

Get information about the server

You can gather information about the Senstar Symphony Server to which the Senstar Symphony Client connects.

1. In the Senstar Symphony Client interface, click **Server Configuration > Get Info**.
2. In the **Choose Server** list, select the server for which you want information.
3. To get additional information, select **Verbose**.


The verbose information includes:

- Hard drive information
 - Senstar Symphony Server version information
 - System information
 - Up-time information
 - Task list information
 - IP configuration information
 - License information
 - Network statistics
 - Services information
4. Click **Get Info**.
The **Get Info** button also refreshes the information.

Manual Configuration Editor

The Manual Configuration Editor is a Senstar Symphony component that you can use to add and edit advanced settings in the Senstar Symphony Database.

You can access the Manual Configuration Editor from the Senstar Symphony Client or as a stand-alone application if you install the Senstar Symphony Server.

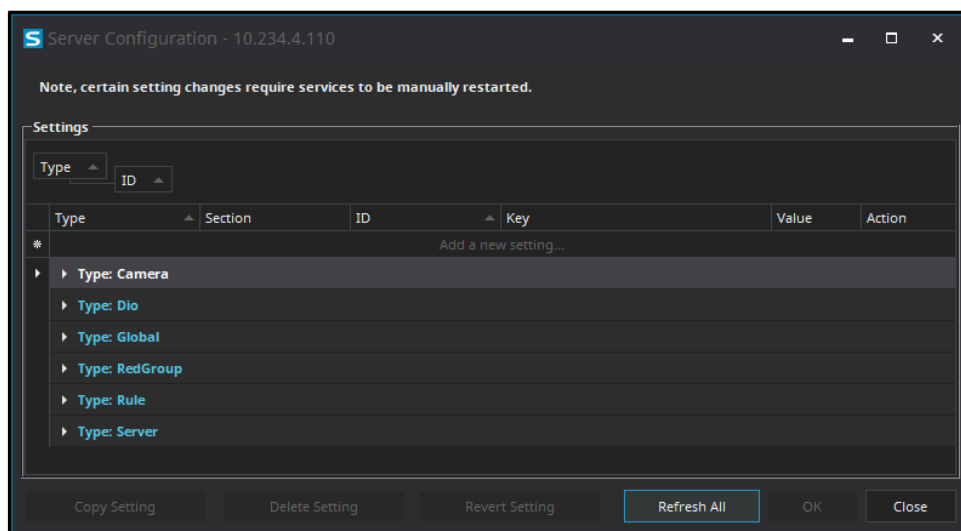

Each setting includes the following fields:

- Type
- Section

- ID
- Key
- Value
- Action

When you click OK after making changes, the Senstar Symphony Client sends the changes to the Senstar Symphony Server, which adds the changes to the Senstar Symphony Database.

Add a setting

You can use the Manual Configuration Editor to add a setting to the Senstar Symphony Database.

Adding a setting to the Senstar Symphony Database is a way to add advanced functionality to the Senstar Symphony Server or Senstar Symphony Client.

1. In the Senstar Symphony Client interface, click **Server Configuration > Manual Configuration Editor**.
2. Click **Add a new setting**.
The **Add a new setting** is a label in a blank line. You can click anywhere in the blank line to activate the data fields.
3. Add the values to the setting.
4. Click **OK**.

Copy a setting

You can use the Manual Configuration Editor to copy a setting in the Senstar Symphony Database.

Copying a setting is a quick way to add a new setting to the Senstar Symphony Database by using a similar existing setting as a template.

1. In the Senstar Symphony Client interface, click **Server Configuration > Manual Configuration Editor**.
2. Select the setting that you want to copy.
3. Click **Copy Setting**.

The copied setting appears at the bottom of the applicable setting list with the [Copy] label in the **Key** field.

Edit a setting

You can use the Manual Configuration Editor to edit a setting in the Senstar Symphony Database.

Editing a setting is a quick way to add a new setting to the Senstar Symphony Database by using a similar existing setting as a template.

1. In the Senstar Symphony Client interface, click **Server Configuration > Manual Configuration Editor**.
2. Select the setting that you want to edit.
3. Click **Edit Setting**.

Revert a setting

You can use the Manual Configuration Editor to revert a setting to the values in the Senstar Symphony Database.

Reverting a setting returns the setting to the values in the Senstar Symphony Database before you save you changes. This only works if you have not yet clicked **OK** after making changes.

1. In the Senstar Symphony Client interface, click **Server Configuration > Manual Configuration Editor**.
2. Select the setting that you want to edit.
3. Click **Revert Setting**.

Delete a setting

You can use the Manual Configuration Editor to delete a setting in the Senstar Symphony Database.

1. In the Senstar Symphony Client interface, click **Server Configuration > Manual Configuration Editor**.
2. Select the setting that you want to delete.
3. Click **Delete Setting**.

Refresh settings

You can use the Manual Configuration Editor to refresh the settings to retrieve changes in the Senstar Symphony Database.

Refreshing the settings ensures that the settings in the Manual Configuration Editor match the current settings in the Senstar Symphony Database. This functionality is helpful if multiple people can make changes to the Senstar Symphony Database.

1. In the Senstar Symphony Client interface, click **Server Configuration > Manual Configuration Editor**.
2. Click **Refresh All**.

Windows authentication

Windows authentication, or single sign-on, uses domain identities to authenticate users.

To use Windows authentication, the Senstar Symphony Server and the Senstar Symphony Client must be in the same security domain, and the user must use domain credentials to log in to the Senstar Symphony Client interface.

Enable Windows authentication

1. In the Senstar Symphony Client interface, right-click a Senstar Symphony Server in the **Server List**.
2. Click **Edit**.
3. Select **Windows Authentication**.
4. Click **OK**.

Update the storage path

To use Windows authentication on all computers in the domain, you must save the farm registration information to a network location that is available to the computers.

1. In the Senstar Symphony Client interface, click **View > Settings**.
2. Click the **Global** tab.
3. Select **Custom path to farm registration**.
4. Type a network location where registration information is stored for all roaming users.
5. Click **OK**.

Reports

You can generate reports on the data from the Senstar Symphony Server.

You can distribute reports as emails or save reports to files. You can schedule reports to run automatically or manually generate a report at any time. When you run a report, the Senstar Symphony Server saves the report to the `\Data\Reports` path for the server (by default) or the path that you set when you install the Senstar Symphony Server.

The Senstar Symphony Server includes the following reports:

- Alarm Report—a report that displays a list of and information about individual alarms

- Alarm Statistics—a report that summarizes all alarms for a specific time
- Face Recognition Report—a report that displays information about matched faces
- Heat Map Image—a report that displays a graphical representation of traffic patterns
- Object Counts—a report that summarizes the number of objects
- Object Counts Across a Line—a report that summarizes the object counts across a line
- Object Statistics—a report that compares traffic and dwell time

To run reports, a user must have the Connect and Execute Report permissions. To run the Heat Map Image report, the user must additionally have the Search permission.

Create an alarm report

The alarm report displays a list of and information about individual alarms for a specific time.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Click **New Report**.
4. Type a name for the report.
5. In the **Report Type** list, select **Alarm Report**.
6. To allow other users to run the report, select **Allow other users to run this report**.
7. Click **OK**.
8. In the **Cameras** section, perform the following tasks to add the cameras that provide information for the report:
 - a) Click **Add Cameras**.
 - b) Select one or more cameras.
You can search for cameras by camera name.
 - c) Click **OK**.
9. In the **Date Range** section, perform the following tasks to determine the data that the report includes:
 - a) In the **Start including data from** section, define the start of the data.
 - b) In the **Stop including data after** section, define the end of the data.
 - c) To use data from a specific time range from each day, select **Use custom time range for data collection** and specify the time range.
10. In the **Schedule** section, perform the following tasks to run the report automatically:
 - a) Select **Schedule Enabled**.
 - b) In the **Recurrence** section, set when the report runs.
 - c) In the **Schedule start** section, set when the report starts running automatically.
 - d) In the **Schedule finish** section, set when the report stops running automatically.
11. In the **Distribution** section, perform the following tasks to determine how the Senstar Symphony Server distributes reports:
 - a) To send the report attached to an email, select **Send report in email**, specify the email addresses of the recipients, and select the file formats for the reports.
 - b) To save the report as a file, select **Save report to file**, specify the path, define the file name, and select the file formats.
12. In the **Table Layout** section, perform the following tasks to determine the appearance of the table in the report:
 - a) In the **Columns** list, select the information that will appear in the columns of the report.
 - b) In the **Grouping** section, select how the information is grouped in the report.
 - c) In the **Sorting** section, select how the information is sorted in the report.
13. Click **Save**.

Create an alarm statistics report

The alarm statistics report summarizes alarms for a specific time.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Click **New Report**.
4. Type a name for the report.
5. In the **Report Type** list, select **Alarm Statistics**.
6. To allow other users to run the report, select **Allow other users to run this report**.
7. Click **OK**.
8. In the **Cameras** section, perform the following tasks to add the cameras that provide information for the report:
 - a) Click **Add Cameras**.
 - b) Select one or more cameras.
You can search for cameras by camera name.
 - c) Click **OK**.
9. In the **Date Range** section, perform the following tasks to determine the data that the report includes:
 - a) In the **Start including data from** section, define the start of the data.
 - b) In the **Stop including data after** section, define the end of the data.
 - c) To use data from a specific time range from each day, select **Use custom time range for data collection** and specify the time range.
10. In the **Schedule** section, perform the following tasks to run the report automatically:
 - a) Select **Schedule Enabled**.
 - b) In the **Recurrence** section, set when the report runs.
 - c) In the **Schedule start** section, set when the report starts running automatically.
 - d) In the **Schedule finish** section, set when the report stops running automatically.
11. In the **Distribution** section, perform the following tasks to determine how the Senstar Symphony Server distributes reports:
 - a) To send the report attached to an email, select **Send report in email**, specify the email addresses of the recipients, and select the file formats for the reports.
 - b) To save the report as a file, select **Save report to file**, specify the path, define the file name, and select the file formats.
12. In the **Graph** section, perform the following tasks to determine the appearance of the graph in the report:
 - a) In the **Default Graph** list, select the alarm type to display.
 - b) In the **Graph Type** list, select whether the graph is a line or bar graph.
 - c) In the **Graph Size** list, select the size of the graph.
13. In the **Table Layout** section, perform the following tasks to determine the appearance of the table in the report:
 - a) In the **Columns** list, select the information that will appear in the columns of the report.
 - b) In the **Grouping** section, select how the information is grouped in the report.
 - c) In the **Sorting** section, select how the information is sorted in the report.
14. Click **Save**.

Create a Face Recognition report

The Face Recognition report displays information about faces for a specific time.

For the Face Recognition report to be available, you must have the Face Recognition video analytic installed.

When creating this report, you must select different cameras as the entrance and exit cameras.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Click **New Report**.
4. Type a name for the report.
5. In the **Report Type** list, select **Face Recognition**.
6. To allow other users to run the report, select **Allow other users to run this report**.
7. Click **OK**.
8. In the **Entrance Cameras** section, perform the following tasks to add the cameras that provide information for the report:
 - a) Click **Add Cameras**.
 - b) Select one or more cameras.
You can search for cameras by camera name.
 - c) Click **OK**.
9. In the **Exit Cameras** section, perform the following tasks to add the cameras that provide information for the report:
 - a) Click **Add Cameras**.
 - b) Select one or more cameras.
You can search for cameras by camera name.
 - c) Click **OK**.
10. In the **Face Recognition** section, perform the following tasks to
 - a) To exclude faces that are observed by an exit camera first and then by an entrance camera, select **Remove exit-to-entrance matches**.
 - b) In the **Minimum confidence for report** field, select how confident that the Face Recognition video analytic must be for it to report on the face.
 - c) In the **Reporting block size** field, select the time (in seconds) from which the Face Recognition video analytic chooses the best face match.
 - d) In the **Number of blocks to check after current** field, set how many blocks of time that the Face Recognition video analytic searches for a face match.
 - e) In the **Timeout for first match in block** field, set the time before which the Face Recognition video analytic must detect a face entering the scene for the face to be eligible for a match.
 - f) In the **Hours to run report** list, select the times at which the Face Recognition video analytic generates data for the report.
11. In the **Date Range** section, perform the following tasks to determine the data that the report includes:
 - a) In the **Start including data from** section, define the start of the data.
 - b) In the **Stop including data after** section, define the end of the data.
 - c) To use data from a specific time range from each day, select **Use custom time range for data collection** and specify the time range.
12. In the **Schedule** section, perform the following tasks to run the report automatically:
 - a) Select **Schedule Enabled**.
 - b) In the **Recurrence** section, set when the report runs.
 - c) In the **Schedule start** section, set when the report starts running automatically.

- d) In the **Schedule finish** section, set when the report stops running automatically.
13. In the **Distribution** section, perform the following tasks to determine how the Senstar Symphony Server distributes reports:
 - a) To send the report attached to an email, select **Send report in email**, specify the email addresses of the recipients, and select the file formats for the reports.
 - b) To save the report as a file, select **Save report to file**, specify the path, define the file name, and select the file formats.
14. In the **Table Layout** section, perform the following tasks to determine the appearance of the table in the report:
 - a) In the **Columns** list, select the information that will appear in the columns of the report.
 - b) In the **Grouping** section, select how the information is grouped in the report.
 - c) In the **Sorting** section, select how the information is sorted in the report.
15. Click **Save**.

Create a heat map image report

The heat map image report displays a graphical representation of traffic patterns for a specific time.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Click **New Report**.
4. Type a name for the report.
5. In the **Report Type** list, select **Heat Map Image**.
6. To allow other users to run the report, select **Allow other users to run this report**.
7. Click **OK**.
8. In the **Cameras** section, perform the following tasks to add the cameras that provide information for the report:
 - a) Click **Add Cameras**.
 - b) Select one or more cameras.
You can search for cameras by camera name.
 - c) Click **OK**.
9. In the **Zone Selection** section, perform the following tasks to determine which zones in the camera view generate data for the report:
 - a) Click **Add Zone**.
 - b) Move or reshape the zone.
 - c) To rename the zone, click **Rename Zone**, type a new name, and click **OK**.
 - d) Repeat to add another zone.
10. In the **Sensitivity** section, perform the following tasks to set how sensitive the heat map is to events:
 - a) To set the number of intersections that must occur before the heat map starts registering intersections for a zone, select **Minimum intersections** and type the value.
 - b) To set the number of intersections that must occur before the heat map stops updating the value for a zone, select **Maximum Intersections** and type a value.
 - c) To set how long an object must remain stationary before the heat map starts registering dwelling objects for a zone, select **Minimum Dwell Time** and set the time.
 - d) To set how long an object remains stationary before the heat map stops updating the value for a zone, select **Maximum Dwell Time** and set the time.
 - e) To set how long an object must be stationary before it is considered as dwelling, select **Dwell Threshold**, and set the time.
11. In the **Date Range** section, perform the following tasks to determine the data that the report includes:

- a) In the **Start including data from** section, define the start of the data.
 - b) In the **Stop including data after** section, define the end of the data.
 - c) To use data from a specific time range from each day, select **Use custom time range for data collection** and specify the time range.
12. In the **Schedule** section, perform the following tasks to run the report automatically:
 - a) Select **Schedule Enabled**.
 - b) In the **Recurrence** section, set when the report runs.
 - c) In the **Schedule start** section, set when the report starts running automatically.
 - d) In the **Schedule finish** section, set when the report stops running automatically.
 13. In the **Distribution** section, perform the following tasks to determine how the Senstar Symphony Server distributes reports:
 - a) To send the report attached to an email, select **Send report in email**, specify the email addresses of the recipients, and select the file formats for the reports.
 - b) To save the report as a file, select **Save report to file**, specify the path, define the file name, and select the file formats.
 14. In the **Table Layout** section, perform the following tasks to determine the appearance of the table in the report:
 - a) In the **Columns** list, select the information that will appear in the columns of the report.
 - b) In the **Grouping** section, select how the information is grouped in the report.
 - c) In the **Sorting** section, select how the information is sorted in the report.
 15. Click **Save**.

Create an Automatic License Plate Recognition report

The LPR report displays information about license plates for a specific time.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Click **New Report**.
4. Type a name for the report.
5. In the **Report Type** list, select **LPR Report**.
6. To allow other users to run the report, select **Allow other users to run this report**.
7. Click **OK**.
8. In the **Cameras** section, perform the following tasks to add the cameras that provide information for the report:
 - a) Click **Add Cameras**.
 - b) Select one or more cameras.
You can search for cameras by camera name.
 - c) Click **OK**.
9. In the **Filter** section, select the plate lists on which to report.
10. In the **Date Range** section, perform the following tasks to determine the data that the report includes:
 - a) In the **Start including data from** section, define the start of the data.
 - b) In the **Stop including data after** section, define the end of the data.
 - c) To use data from a specific time range from each day, select **Use custom time range for data collection** and specify the time range.
11. In the **Schedule** section, perform the following tasks to run the report automatically:
 - a) Select **Schedule Enabled**.
 - b) In the **Recurrence** section, set when the report runs.

- c) In the **Schedule start** section, set when the report starts running automatically.
- d) In the **Schedule finish** section, set when the report stops running automatically.
12. In the **Distribution** section, perform the following tasks to determine how the Senstar Symphony Server distributes reports:
 - a) To send the report attached to an email, select **Send report in email**, specify the email addresses of the recipients, and select the file formats for the reports.
 - b) To save the report as a file, select **Save report to file**, specify the path, define the file name, and select the file formats.
13. In the **Table Layout** section, perform the following tasks to determine the appearance of the table in the report:
 - a) In the **Columns** list, select the information that will appear in the columns of the report.
 - b) In the **Grouping** section, select how the information is grouped in the report.
 - c) In the **Sorting** section, select how the information is sorted in the report.
14. Click **Save**.

Create an object counts report

The object counts report displays information about objects for a specific time.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Click **New Report**.
4. Type a name for the report.
5. In the **Report Type** list, select **Object Counts**.
6. To allow other users to run the report, select **Allow other users to run this report**.
7. Click **OK**.
8. In the **Cameras** section, perform the following tasks to add the cameras that provide information for the report:
 - a) Click **Add Cameras**.
 - b) Select one or more cameras.
You can search for cameras by camera name.
 - c) Click **OK**.
9. In the **Date Range** section, perform the following tasks to determine the data that the report includes:
 - a) In the **Start including data from** section, define the start of the data.
 - b) In the **Stop including data after** section, define the end of the data.
 - c) To use data from a specific time range from each day, select **Use custom time range for data collection** and specify the time range.
10. In the **Schedule** section, perform the following tasks to determine when the report runs and what information is contained:
 - a) Select whether to run the report manually or on a schedule.
 - b) If you select to run the report on a schedule, set the schedule.
 - c) Specify the time from which to collect data for the report.
You can set a relative time based on the report or select specific times.
 - d) Select how to group the data.
11. In the **Distribution** section, perform the following tasks to determine how the Senstar Symphony Server distributes reports:
 - a) To send the report attached to an email, select **Send report in email**, specify the email addresses of the recipients, and select the file formats for the reports.
 - b) To save the report as a file, specify the path, define the file name, and select the file formats.

12. In the **Graph** section, perform the following tasks to determine the appearance of the graph in the report:
 - a) In the **Default Graph** list, select the alarm type to display.
 - b) In the **Graph Type** list, select whether the graph is a line or bar graph.
 - c) In the **Graph Size** list, select the size of the graph.
13. In the **Table Layout** section, perform the following tasks to determine the appearance of the table in the report:
 - a) In the **Columns** list, select the information that will appear in the columns of the report.
 - b) In the **Grouping** section, select how the information is grouped in the report.
 - c) In the **Sorting** section, select how the information is sorted in the report.
14. Click **Save**.

Create an object counts across a line report

The object counts across a line report displays information about objects crossing a line for a specific time.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Click **New Report**.
4. Type a name for the report.
5. In the **Report Type** list, select **Object Counts Across a Line**.
6. To allow other users to run the report, select **Allow other users to run this report**.
7. Click **OK**.
8. In the **Cameras** section, perform the following tasks to add the cameras that provide information for the report:
 - a) Click **Add Cameras**.
 - b) Select one or more cameras.
You can search for cameras by camera name.
 - c) Click **OK**.
9. In the **Line** section, select the line across which to count objects.
10. In the **Date Range** section, perform the following tasks to determine the data that the report includes:
 - a) In the **Start including data from** section, define the start of the data.
 - b) In the **Stop including data after** section, define the end of the data.
 - c) To use data from a specific time range from each day, select **Use custom time range for data collection** and specify the time range.
11. In the **Schedule** section, perform the following tasks to determine when the report runs and what information is contained:
 - a) Select whether to run the report manually or on a schedule.
 - b) If you select to run the report on a schedule, set the schedule.
 - c) Specify the time from which to collect data for the report.
You can set a relative time based on the report or select specific times.
 - d) Select how to group the data.
12. In the **Distribution** section, perform the following tasks to determine how the Senstar Symphony Server distributes reports:
 - a) To send the report attached to an email, select **Send report in email**, specify the email addresses of the recipients, and select the file formats for the reports.
 - b) To save the report as a file, specify the path, define the file name, and select the file formats.

13. In the **Graph** section, perform the following tasks to determine the appearance of the graph in the report:
 - a) In the **Default Graph** list, select the alarm type to display.
 - b) In the **Graph Type** list, select whether the graph is a line or bar graph.
 - c) In the **Graph Size** list, select the size of the graph.
14. In the **Table Layout** section, perform the following tasks to determine the appearance of the table in the report:
 - a) In the **Columns** list, select the information that will appear in the columns of the report.
 - b) In the **Grouping** section, select how the information is grouped in the report.
 - c) In the **Sorting** section, select how the information is sorted in the report.
15. Click **Save**.

Create an overhead people count report

The overhead people count report displays information about the number of people counted by an overhead camera.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Click **New Report**.
4. Type a name for the report.
5. In the **Report Type** list, select **Overhead People Count**.
6. To allow other users to run the report, select **Allow other users to run this report**.
7. Click **OK**.
8. In the **Cameras** section, perform the following tasks to add the cameras that provide information for the report:
 - a) Click **Add Cameras**.
 - b) Select one or more cameras.
You can search for cameras by camera name.
 - c) Click **OK**.
9. In the **Line** section, select the line across which to count people.
10. In the **Date Range** section, perform the following tasks to determine the data that the report includes:
 - a) In the **Start including data from** section, define the start of the data.
 - b) In the **Stop including data after** section, define the end of the data.
 - c) To use data from a specific time range from each day, select **Use custom time range for data collection** and specify the time range.
11. In the **Schedule** section, perform the following tasks to determine when the report runs and what information is contained:
 - a) Select whether to run the report manually or on a schedule.
 - b) If you select to run the report on a schedule, set the schedule.
 - c) Specify the time from which to collect data for the report.
You can set a relative time based on the report or select specific times.
 - d) Select how to group the data.
12. In the **Distribution** section, perform the following tasks to determine how the Senstar Symphony Server distributes reports:
 - a) To send the report attached to an email, select **Send report in email**, specify the email addresses of the recipients, and select the file formats for the reports.
 - b) To save the report as a file, specify the path, define the file name, and select the file formats.

13. In the **Graph** section, perform the following tasks to determine the appearance of the graph in the report:
 - a) In the **Default Graph** list, select the alarm type to display.
 - b) In the **Graph Type** list, select whether the graph is a line or bar graph.
 - c) In the **Graph Size** list, select the size of the graph.
14. In the **Table Layout** section, perform the following tasks to determine the appearance of the table in the report:
 - a) In the **Columns** list, select the information that will appear in the columns of the report.
 - b) In the **Grouping** section, select how the information is grouped in the report.
 - c) In the **Sorting** section, select how the information is sorted in the report.
15. Click **Save**.

Create an object statistics report

The object statistics report displays information about objects traffic and dwell time for a specific time.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Click **New Report**.
4. Type a name for the report.
5. In the **Report Type** list, select **Object Statistics**.
6. To allow other users to run the report, select **Allow other users to run this report**.
7. Click **OK**.
8. In the **Cameras** section, perform the following tasks to add the cameras that provide information for the report:
 - a) Click **Add Cameras**.
 - b) Select one or more cameras.
You can search for cameras by camera name.
 - c) Click **OK**.
9. In the **Date Range** section, perform the following tasks to determine the data that the report includes:
 - a) In the **Start including data from** section, define the start of the data.
 - b) In the **Stop including data after** section, define the end of the data.
 - c) To use data from a specific time range from each day, select **Use custom time range for data collection** and specify the time range.
10. In the **Schedule** section, perform the following tasks to determine when the report runs and what information is contains:
 - a) Select whether to run the report manually or on a schedule.
 - b) If you select to run the report on a schedule, set the schedule.
 - c) Specify the time from which to collect data for the report.
You can set a relative time based on the report or select specific times.
 - d) Select how to group the data.
11. In the **Distribution** section, perform the following tasks to determine how the Senstar Symphony Server distributes reports:
 - a) To send the report attached to an email, select **Send report in email**, specify the email addresses of the recipients, and select the file formats for the reports.
 - b) To save the report as a file, specify the path, define the file name, and select the file formats.
12. In the **Graph** section, perform the following tasks to determine the appearance of the graph in the report:
 - a) In the **Default Graph** list, select the alarm type to display.

- b) In the **Graph Type** list, select whether the graph is a line or bar graph.
 - c) In the **Graph Size** list, select the size of the graph.
13. In the **Table Layout** section, perform the following tasks to determine the appearance of the table in the report:
 - a) In the **Columns** list, select the information that will appear in the columns of the report.
 - b) In the **Grouping** section, select how the information is grouped in the report.
 - c) In the **Sorting** section, select how the information is sorted in the report.
14. Click **Save**.

Edit a report

You can make changes to an existing report in the Report Designer.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Perform one of the following tasks:
 - Select a report and click **Edit**.
 - Double-click a report.
4. Make changes to the report.
5. Click **Save**.

Run a report

You can manually generate a report at any time.

1. In the Senstar Symphony Client interface, click **Reports**.
The Report Designer opens in a browser.
2. Log in to the Report Designer.
3. Select a report.
4. Click **Run**.

Alarms

Alarms occur when a video analytic running on a device detects the conditions of a rule.

You create alarms in the Senstar Symphony Server configuration interface and you act on alarms in the Alarm Console of the the Senstar Symphony Client interface. Alarms appear in the camera timeline of the Senstar Symphony Client interface.

Disable alarms for a camera

You can disable the alarms for a camera in the Senstar Symphony Client.

1. In the Senstar Symphony Client interface, right-click a camera in the device tree.
2. Click **Disable Alarms for Camera**.
3. Specify the time (minutes) for which the alarms are disabled.
4. Click **OK**.

To enable the alarm again, right-click the camera and click **Enable Alarms for Camera**.

Disable alarms for a server

You can disable the alarms for cameras on the Senstar Symphony Server to which the Senstar Symphony Client is connected.

1. In the Senstar Symphony Client interface, click **Alarms > Disable Alarms for Server**.
2. Specify the number of minutes for which to disable the alarms.
3. Click **OK**.


To manually enable alarms without waiting for the time to elapse, click **Alarms > Enable Alarms for Server**.

Alarm Console

The Alarm Console in the Senstar Symphony Client includes functionality to view and manage alarms.

The Alarm Console appears in the Senstar Symphony Client interface as a collapsible sidebar by default. When in the sidebar, the Alarm Console displays a list of alarms that includes an icon to illustrate the alarm type and alarm details. Clicking an alarm in the list will display the alarm video in the active camera view panel. The Alarm Console includes buttons to acknowledge and reset alarms (for two-stage alarms), and counters to indicate the number and type of alarms.

The Alarm Console also includes an advanced mode that opens the Alarm Console in its own window. In advanced mode, the Alarm Console includes additional functionality to filter, export, and manage alarms. When the Alarm Console is in the advanced mode, it does not appear as a sidebar in the Senstar Symphony Client interface.

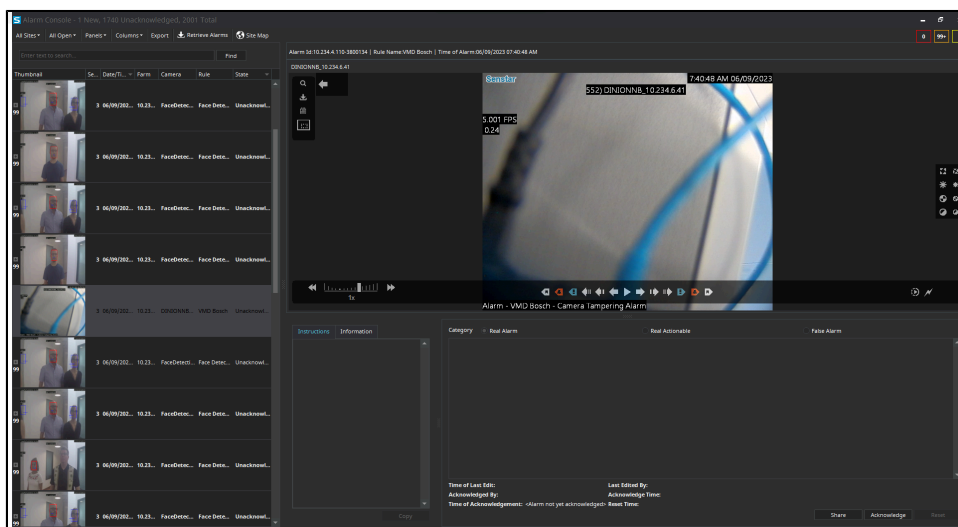

The advanced Alarm Console includes the following components:

- Alarm list
 - Displays the alarms that match your selection criteria
- View panels
 - Displays one to four view panels in the advanced Alarm Console (configure on the Action Sets page in the Senstar Symphony Server configuration interface)
- Instruction pane
 - Displays instructions (as text or an attached file) for the alarm (define instructions on the Action Sets page in the Senstar Symphony Server configuration interface)
 - If you add a file, you can zoom on the file by hold the CTRL button and using the mouse scroll wheel
- Information pane

- Displays additional information about the alarm from access control systems or the Senstar Network Manager
- Acknowledgment pane
 - Share, acknowledge, or reset and alarm
 - Mark an alarm as real, real actionable, or false
 - Add or view comments associated with the alarm
 - Displays information and alarm processing

View alarms

You can refine the list of alarms that appear in the advanced Alarm Console.

1. In the Senstar Symphony Client interface, click **Advanced Mode** to open the advanced Alarm Console.
2. In the sites list, select the sites from which you want to view alarms.
3. In the type list, select which type of alarms you want to view.
4. In the panels list, select whether you want to view one view panel or four view panels.
5. In the columns list, select which columns you want to see in the alarm list.

As you make changes, the alarm list updates to include alarms that match the parameters that you select.

Retrieve alarms

You can retrieve alarms for dates that are not included in the alarm list.

Depending on how you sort the alarm list, the alarms that you retrieve might not appear at the top of the list.

1. In the Senstar Symphony Client interface, click **Advanced Mode** to open the advanced Alarm Console.
2. Click **Retrieve Alarms**.
3. Select a date.

The alarm list in the advanced Alarm Console displays alarms for the date you selected.

Export an alarm list

You can export alarms from the Senstar Symphony Client interface.

When exporting alarms, the Senstar Symphony Server supports the following formats:

- PDF
- HTML
- MHT
- RTF
- DOCX
- XLS
- XLSX
- CSV
- Text
- Image

1. In the Senstar Symphony Client interface, click **Advanced Mode** to open the advanced Alarm Console.
2. Filter and sort the alarms until you get the list that you want to export.
3. Click **Export**.

The amount of time it takes the Senstar Symphony Server to process the export file increases with the number of alarms you want to export.

4. In the **Preview** window, click **File > Export Document**.
5. Click the file format.
6. Specify the options for the output and click **OK**.
7. In the **Save As** window, select the location to save the file and click **Save**.

Share an alarm

You can share an alarm with any user who is logged in to the Senstar Symphony Client.

When you share an alarm with a user, the Senstar Symphony Client displays a message for the user in the Senstar Symphony Client interface.

1. In the alarm console sidebar, click **Advanced Mode**.
2. Select the alarm.
3. Click **Share**.
4. In the **Share Event** window, select a user.
5. Click **Share**.

Acknowledge an alarm

You can acknowledge an alarm to claim the alarm while you process it.

When two-stage alarm processing is turned on, you claim the alarm when you acknowledge it so that you can process the alarm. When two-stage enhanced alarm processing is turned on, a user with a higher priority (configured in the Senstar Symphony Server configuration interface) can claim the alarm from a user with a lower priority.

You have until the acknowledgement timeout (configured in the Senstar Symphony Server configuration interface) elapses to process it. Once the acknowledgement timeout elapses, the alarm returns to an unacknowledged state.

1. In the alarm console sidebar, click **Advanced Mode**.
2. Select the alarm.
3. Click **Acknowledge**.
4. To view instructions that are associated with the alarm, click the **Instructions** tab.
5. To view location information, click the **Information** tab.
6. Select the type of the alarm.
 - Real Alarm
 - Real Actionable
 - False Alarm
7. Type any comments that you want to add to the alarm.
8. Click **Reset** to close and archive the alarm.

Visual tracking

The visual tracking feature allows you to add links to cameras that will automatically switch the camera view panel to an adjacent camera. You can use this feature to track a moving subject across multiple cameras.

Visual tracking links appear as transparent overlays in the camera view panel. The link includes the camera identification number for the camera to which the link goes. You can customize both the location and shape of the links to adjacent cameras to make the links more meaningful in the scene. For example, you can customize the location and shape of a link to cover a door that leads to an area in the scene the adjacent camera.

When you click a visual tracking link, the camera view panel switches to the camera that the link references.

Add a visual tracking link

You can add a visual tracking link to a camera view panel in the Senstar Symphony Client interface.

1. In the Senstar Symphony Client interface, open the camera to which you want to add the visual tracking link in a camera view panel.
2. Press and hold the Alt key.
3. In the device tree, left-click and hold the camera to which you want to link.
4. Drag the target camera to the desired location.
5. Release the Alt key and mouse button.
6. To move the link, perform the following steps:
 - a) Press and hold the Alt key.
 - b) Click the link.
 - c) Left-click and hold the hand icon.
 - d) Drag the link to the desired location.
 - e) Release the Alt key and mouse button.
7. To change the shape of the link, perform the following steps:
 - a) Press and hold the Alt key.
 - b) Click the link.
 - c) Left-click and hold an anchor point.
 - d) Drag the anchor point to the desired location.
 - e) Release the Alt key and mouse button.

Video export

The Senstar Symphony Client includes functionality to export video. The Senstar Symphony Player can play the exported video.

By default, the video export includes the two minutes of video prior to when you click Export (for the active camera) or Export All (for all cameras in view panels). To export video with a greater duration, you can mark the start and end of the video on the panel timeline.



Note: The longer the video that you want to export, the longer it will take the Senstar Symphony Client to complete the export process.

The Senstar Symphony Client can export video to a file or to the Senstar Xnet, from which users can download the video. The export can include video from one or multiple cameras and the Senstar Symphony Client can generate a summary video that plays video at a faster speed to highlight events.

The Senstar Symphony Client also includes functionality to view the status of video exports.


Export video to the cloud

You can export video from the Senstar Symphony Client to the cloud and with a link to download the video.

To export video to the cloud, you must associate an email address with your Senstar Symphony user account.

The Senstar Symphony Client uploads the video files to the Senstar Xnet and sends an email with a link to download the video files to the email address associated with your Senstar Symphony user account. You can then forward the link to other recipients.

When exporting video to the cloud, the Senstar Symphony Client splits the video into files with a maximum size of 4000 MBs, does not include decorations, and does not support increasing the speed of the video.

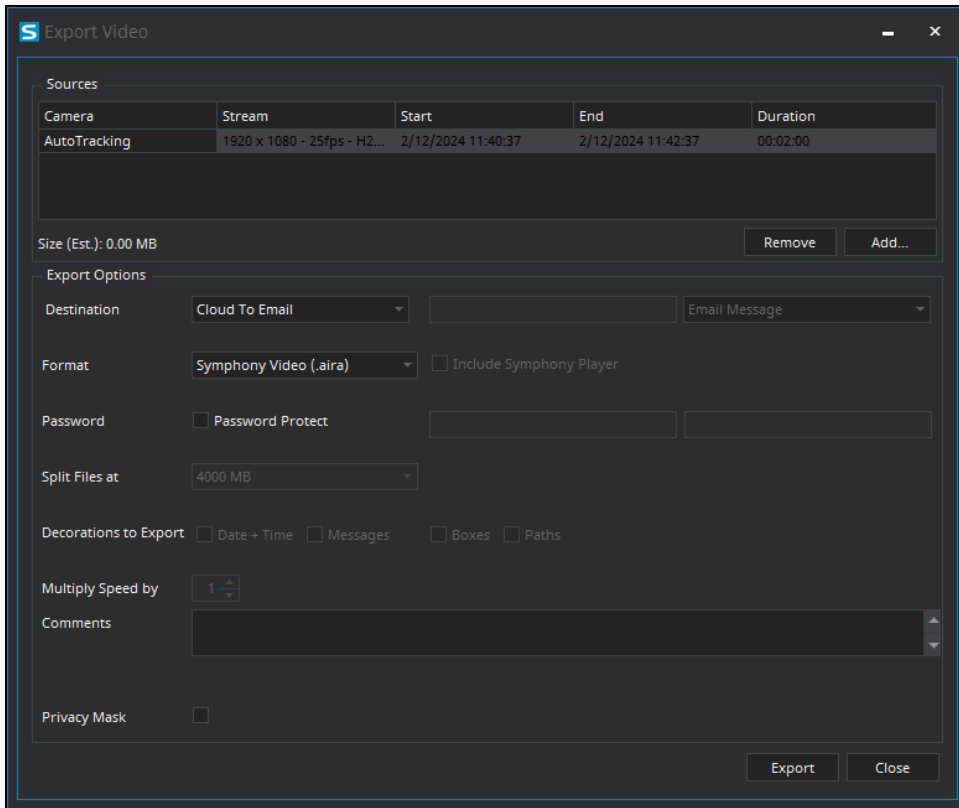


1. In the Senstar Symphony Client interface, perform one of the following tasks:
 - Right-click the view panel and click **Export** to export video from the camera that is active in the view panel or **Export All** to export video from all of the cameras that are active in view panels.
 - Hover over the view panel and click the **Export** icon.
 - Right-click the timeline to mark the export start and export end, and click **Export** to export video from the camera that is active in the view panel or **Export All** to export video from all of the cameras that are active in view panels.
2. To add a camera stream to the export, perform the following tasks:
 - a) Click **Add**.
 - b) Select the camera and click **Add**.
 - c) In the sources list, select the stream in the **Stream** column.
 - d) If required, modify the start and end time for the export.
3. In the **Destination** list, select **Cloud To Email**.
4. To add a custom email message to the email message, perform the following tasks:
 - a) Click the **Email Message** field.
 - b) In the text window, type the email message.
 - c) Click **OK**.
5. To protect the video export files with a password, perform the following tasks:
 - a) Select **Password Protect**.
 - b) Type and confirm the password.
6. In the **Comments** field, type any text that you want to include in the text file that is associated with the video export.
7. To add a privacy mask to video export, perform the following tasks:
 - a) Select **Privacy Mask**.
 - b) In the **Privacy Mask** pane, draw the privacy mask on the sample image.
8. Click **Export**.

The Senstar Symphony Server sends you an email that includes a link to manage your exported video. You can use the link to delete exported videos.

Export video to file

You can export video from the Senstar Symphony Client as `.aira` or `.avi` files.

The Senstar Symphony Client saves the video files to the location that you specify. You can also select to include the Senstar Symphony Player with the export and set the maximum size for video files.

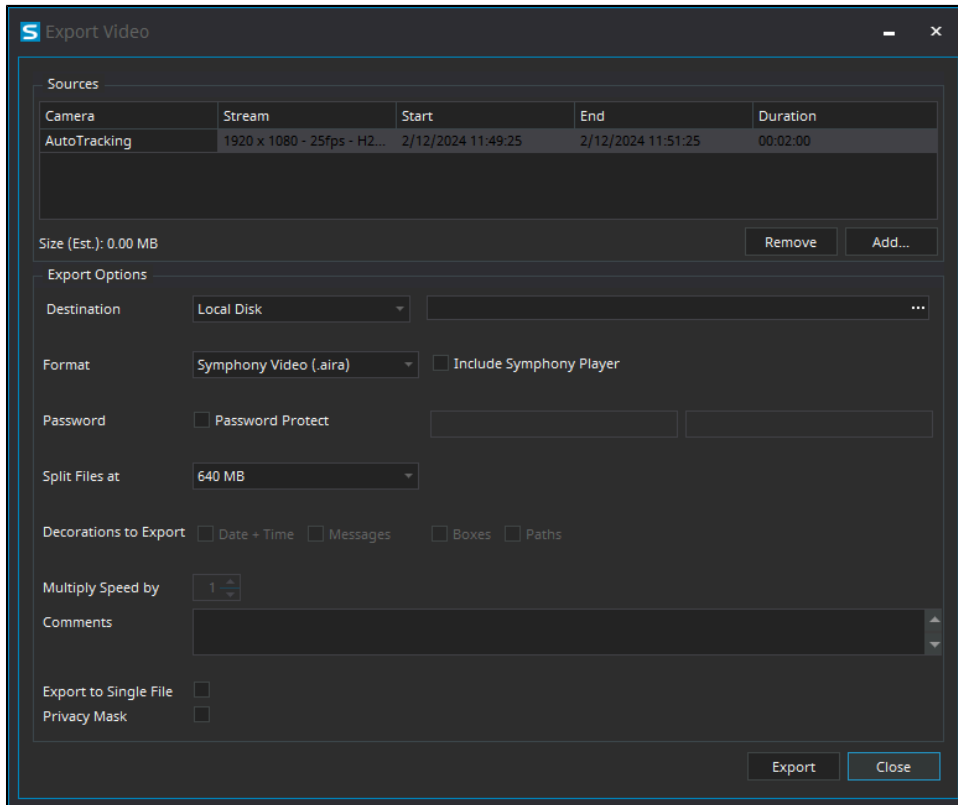

1. In the Senstar Symphony Client interface, perform one of the following tasks:
 - Right-click the view panel and click **Export** to export video from the camera that is active in the view panel or **Export All** to export video from all of the cameras that are active in view panels.
 - Hover over the view panel and click the **Export** icon.
 - Right-click the timeline to mark the export start and export end, and click **Export** to export video from the camera that is active in the view panel or **Export All** to export video from all of the cameras that are active in view panels.
2. To add a camera stream to the export, perform the following tasks:
 - a) Click **Add**.
 - b) Select the camera and click **Add**.
 - c) In the sources list, select the stream in the **Stream** column.
 - d) If required, modify the start and end time for the export.
3. In the **Destination** list, select **Local Disk** and specify the file location for the exported video.
4. In the **Format** field, select the file format to use for the video export.
5. To include the Senstar Symphony Player with the video export, select **Include Symphony Player**. You can use the Senstar Symphony Player to play `.aira` files.
6. To protect the video export files with a password, perform the following tasks:
 - a) Select **Password Protect**.

- b) Type and confirm the password.
7. In the **Split Files at** field, select the maximum size (in MBs) for the video export files.
The Senstar Symphony Client divides the exported video into files no larger than the size that you specify.
8. If you export video as an `.avi`, select the decorations to include in the video export.
9. If you export video as a summary video (`.avi`), select the speed at which to multiply the video playback.
10. In the **Comments** field, type any text that you want to include in the text file that is associated with the video export.
11. To add a privacy mask to video export, perform the following tasks:
 - a) Select **Privacy Mask**.
 - b) In the **Privacy Mask** pane, draw the privacy mask on the sample image.
12. Click **Export**.

Senstar Symphony Web Client

The Senstar Symphony Web Client includes functionality to monitor cameras, manage video, generate reports, and configure alarms.

The Senstar Symphony Web Client mimics the Senstar Symphony Client as much as possible. Most core features of the Senstar Symphony Client are available in the Senstar Symphony Web Client. In addition, the Senstar Symphony Web Client includes the Report Designer.

Each Senstar Symphony Server has a dedicated Senstar Symphony Web Client.

Log in to the Senstar Symphony Web Client

You can open the Senstar Symphony Web Client in a browser.

You can also access the Senstar Symphony Server configuration interface from the Senstar Symphony Web Client interface.

1. In a browser, navigate to the IP address of your Senstar Symphony Server.
2. In the language list, select your language.
3. Type your username and password.
4. Click the Senstar Symphony Web Client button.

Configure the Senstar Symphony Web Client

1. In the Senstar Symphony Server configuration interface, click **Settings > General Settings**.
2. To use load balancing with the **Web Client**, select **Randomly redirect master server logins to other available servers in the farm**.
3. Set how often the Senstar Symphony Web Client refreshes the information on the Monitoring tab in the **Refresh rate** field.
4. To use an ICE server, complete the following tasks:
 - a) Select **Use an ICE Server**.
 - b) Select the type of the ICE server (either TURN or STUN).
 - c) In the URL field, type the IP address of the ICE server.
 - d) In the **Username** field, type the username that the Senstar Symphony Server uses for authentication with the ICE server.
 - e) In the **Password** field, type the password that the Senstar Symphony Server use for authentication with the ICE server.
5. Click **Save**.

Senstar Symphony Player

The Senstar Symphony Player is an application that can view video files created in the Senstar Symphony Client.

The Senstar Symphony Player is a lightweight solution that allows you to view video and search results from the Senstar Symphony Server. By default, the Senstar Symphony Player installs with the Senstar Symphony Client and the Senstar Symphony Server, but you can also install it as a standalone application.

Install the Senstar Symphony Player

You can install the Senstar Symphony Player as a standalone application.

1. Download and run the installer.
2. Select the language and click **OK**.
3. Review the license terms and conditions, select **I accept the terms in the License Agreement**, and click **Next**.
4. Select the installation location.
5. Select whether to install the Remote Support Tool.
6. Click **Next**.
7. Click **Install**.
8. Click **Close**.

Enable watermark verification

You can enable watermark verification for the Senstar Symphony Player to prevent the Senstar Symphony Player from playing tampered video.

1. Open the `acc.ini` file at `%appdata%\Senstar8`.
2. Add the following values:

```
[VideoRecvCTRL]
UseWatermarking=True
```

3. Save and close the `acc.ini` file.

Related concepts

[Watermarking](#) on page 54

The Senstar Symphony uses watermarking to detect tampered video and audio. Watermarking works in the Senstar Symphony Client, Senstar Symphony Player, and Senstar Symphony Web Client.

Play a video file

You can play video from a file or a URL.

You can export a video file from camera view panels or search results in the Senstar Symphony Client interface.

You can generate a video URL by exporting search results by exporting search results as an email link. To play video from a URL, the computer hosting the Senstar Symphony Player must be on the same network as the Senstar Symphony Server.

1. In the Senstar Symphony Player, perform one of the following tasks:
 - To play video from a file, click **File > Play From File**, navigate to the file, and click **Open**.
 - To play video from a URL, click **File > Play From URL**, type the URL, and click **OK**.
2. To show decorations, click **Decorations** and select or clear decorations.

3. To zoom, click **Zoom** and either **Zoom In** or **Zoom Out**.
4. To set the playback speed, move the **Speed** slider to the desired speed.
5. To navigate through the video, use the following controls:

Option	Description
Play/Pause	Play or pause the video.
< snippet	Move backwards to the last activity in the video.
< frame	Move backwards one frame.
frame >	Move forwards one frame.
snippet >	Move forwards to the next activity in the video.
Slider	Move the slider to navigate to the corresponding position in the video.

Legal information

Copyright © 2024 Senstar Corporation and/or its Licensor(s). All rights reserved.

This material is for informational purposes only. Senstar makes no warranties, express, implied or statutory, as to the information in this document.

Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Senstar Corporation

Senstar may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Senstar, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

Senstar and the Senstar logo are registered trademarks of Senstar Corporation.

All other trademarks are the property of their respective owners.

Senstar Symphony third-party attributions

Component	Attribution
ARH Carmen ANPR/LPR	Copyright © 1993-2015. All rights reserved. EULA
Boost Software	Copyright © 1998-2005 Beman Dawes, David Abrahams. Copyright © 2004-2007 Rene Rivera. Boost is licensed under the Boost Software License .
Crypto++	Copyright © 1995-2013 Wei Dai. All rights reserved. Crypto++ is licensed under the Boost Software License .
CxImage	Copyright © 2001-2008 Davide Pizzolato. CxImage is licensed under this license .
Cybertec Patroni	Copyright © 2000–2021 CYBERTEC PostgreSQL International GmbH.
Dapper	Dapper is licensed under the Apache License 2.0 .
DevExpress WinForms	Copyright © 1998-2021 Developer Express Inc. EULA
DirectShow.NET Library	Copyright © 1991, 1999 Free Software Foundation, Inc. The DirectShow.NET Library is licensed under the GNU Lesser General Public License (LGPL) version 2.1 .
excellibrary	The excellibrary is licensed under the GNU Lesser General Public License (LGPL) .

Component	Attribution
FFmpeg	Copyright © 2007 Free Software Foundation, Inc. FFmpeg is licensed under the GNU Lesser General Public License (LGPL) version 2.1 or later.
gson	Copyright © 2008 Google Inc. google/gson is licensed under the Apache License 2.0 .
Intel Integrated Performance Primitives	Copyright © Intel Corporation. EULA
Jayrock	Copyright © Atif Aziz. All rights reserved. Jayrock is licensed under the GNU Lesser General Public License (LGPL) .
Joda-Time	Copyright © 2002-2018 Joda.org. All Rights Reserved. Joda-Time is licensed under the Apache License 2.0 .
libcurl	Copyright © 1996-2018, Daniel Stenberg. All rights reserved. libcurl is licensed under this license .
libjpeg	Copyright © 1991-2018 Thomas G. Lane, Guido Vollbeding.
Live555	Copyright © Live Networks, Inc. All Rights Reserved. Live555 is licensed under the GNU Lesser General Public License (LGPL)
Microsoft .NET Library	Copyright © 2021 Microsoft EULA
OpenH264	Copyright © 2013, Cisco Systems. OpenH264 is licensed under this license .
OpenCV	Copyright © 2018 OpenCV team. OpenCV is licensed under this license .
OpenSSL	Copyright © 1998-2018 The OpenSSL Project. All rights reserved. OpenSSL is licensed under this license .
PaddlePaddle/Paddle	Copyright © 2016 PaddlePaddle Authors. All rights reserved. PaddlePaddle/Paddle is licensed under the Apache License 2.0 .
PostgreSQL	Copyright © 1996-2021 The PostgreSQL Global Development Group. PostgreSQL is licensed under The PostgreSQL Licence .
RapidXML	Copyright © 2006, 2007 Marcin Kalicinski. RapidXML is licensed under the Boost Software License .